



## user manual

Instrukcja obsługi | Руководство пользователя  
Manuel de l'Utilisateur | Betriebsanweisung  
Bruksanvisning | Manual del Usuario  
Betjeningsvejledning | Gebruikershandleiding  
Käyttöohjeet | Manual de utilizare | Bruksanvisning  
Manuale d'uso | Příručka uživatele | Navodila  
za uporabo

Retain for future use  
Zachować do przyszłego użytku  
Сохраните для последующего  
использования  
A conserver pour une utilisation future  
Für zukünftige Benutzung aufbewahren  
Behold for senere bruk  
Säilytä nämä käyttöohjeet tulevaa tarvetta marten  
Opbevar manualen til fremtidig brug  
Bewaren voor gebruik in de toekomst  
Conservare il presente manuale a l'uso futuro  
Păstrați acest manual pentru utilizare viitoare  
Conservar para futuras consultas  
Behall för framtida användning  
Uchovejte pro další použití  
Hranite za prihodnjo uporabo



# **Wood-Mizer®**

## **Safety, Setup, Operation & Maintenance Manual**

---

**WM1000**

**rev.B3.02**

---



**Safety is our #1 concern!** Read and understand all safety information and instructions before operating, setting up or maintaining this machine.

*Form #633*

**This is the original language  
for the manual**

# Table of Contents

# Section-Page

*General Contact Information*  
*Branches & Authorized Sales Centers Wood-Mizer Locations (North and South America)*

<b>SECTION 1</b>	<b>INTRODUCTION</b>	<b>1-1</b>
1.1	Machine Description .....	1-1
1.2	Machine and Site Preparation.....	1-2
<b>SECTION 2</b>	<b>SAFETY</b>	<b>2-1</b>
2.1	Blade Handling.....	2-1
2.2	Sawmill Setup.....	2-2
2.3	Sawmill Operation.....	2-2
2.4	Sawmill Maintenance .....	2-4
<b>SECTION 3</b>	<b>SAWMILL INSTALLATION</b>	<b>3-1</b>
3.1	Fastening Tracks to the Floor .....	3-1
3.2	Mast Installation .....	3-4
3.3	Up/Down Shaft.....	3-8
3.4	Saw Head Assembly.....	3-9
3.5	Motor Installation .....	3-12
3.6	Operator Platform.....	3-13
3.7	Track Limit Switch Installation and Adjustment .....	3-16
3.8	Electrical Connections.....	3-17
<b>SECTION 4</b>	<b>SETUP &amp; OPERATION</b>	<b>4-1</b>
4.1	Sawmill Setup.....	4-1
4.2	Replacing the Blade.....	4-6
4.3	Tensioning the Blade.....	4-7
4.4	Tracking the Blade .....	4-8
4.5	Starting the Motor.....	4-9
4.6	Hydraulic Control Operation .....	4-11
4.7	Loading, Turning And Clamping Logs .....	4-13
4.8	Up/Down Operation .....	4-15
4.9	Blade Guides Setting .....	4-16
4.10	Power Feed Operation .....	4-17
4.11	Cutting the Log.....	4-19
4.12	Blade Height Scale .....	4-20
4.13	Lube System Operation .....	4-22
<b>SECTION 5</b>	<b>MAINTENANCE</b>	<b>5-1</b>
5.1	Wear Life.....	5-1
5.2	Blade Guides .....	5-2
	<i>Steel Guide Blocks</i>	

## Table of Contents

## Section-Page

5.3	Sawdust Removal .....	5-3
5.4	Saw head Track, Wiper & Scrapers .....	5-4
5.5	Vertical Mast Rails .....	5-6
5.6	Drum Switches .....	5-6
5.7	Miscellaneous .....	5-6
5.8	Drive Belt Adjustment.....	5-7
5.9	Drive System Alignment .....	5-9
5.10	Up/Down System.....	5-10
5.11	Power Feed .....	5-11
5.12	Blade Guide Chain Tension.....	5-13
5.13	Safety Devices Inspection .....	5-14
<b>SECTION 6      SAWMILL ALIGNMENT</b>		<b>6-1</b>
6.1	Alignment Procedure.....	6-1
	<i>Blade Installation</i>	
	<i>Saw Head Tilt</i>	
	<i>Blade Wheels Adjustment</i>	
	<i>Blade Guides</i>	
<b>SECTION 7      SAWMILL SPECIFICATIONS</b>		<b>7-1</b>
7.1	Belt Sizes .....	7-1
7.2	Blade Specifications .....	7-1
7.3	Cutting Capacity .....	7-1
7.4	Motor Specifications .....	7-3
7.5	Noise Level.....	7-3
7.6	Hydraulic Oil Specifications .....	7-4
7.7	Overall Dimensions .....	7-4
7.8	Chains .....	7-7
7.9	Sawdust Extractor Specifications .....	7-8
7.10	Lube System Specifications .....	7-8
7.11	Hydraulic Diagrams (Optional Equipment) .....	8-1



## Getting Service

Wood-Mizer is committed to providing you with the latest technology, best quality and strongest customer service available on the market today. We continually evaluate our customers' needs to ensure we're meeting current wood-processing demands. Your comments and suggestions are welcome.

### General Contact Information

From Europe call your local distributor or our European Headquarters and Manufacturing Facility in Kolo, Nagórna 114 St, Poland at **+48-63-2626000**. From the continental U.S., call our U.S. Headquarter 8180 West 10th St. Indianapolis, IN 46214, toll-free at **1-800-525-8100**. Ask to speak with a Customer Service Representative. Please have your machine identification number and your customer number ready when you call. The Service Representative can help you with questions about the operation and maintenance of your machine. He also can schedule you for a service call.

### Office Hours:

Country	Monday - Friday	Saturday	Sunday
Poland	7 a.m.- 3 p.m.	Closed	Closed
US	8 a.m.- 5 p.m.	8 a.m.- 12 p.m	Closed

Please have your vehicle identification number and your customer number ready when you call.

Wood-Mizer will accept these methods of payment:

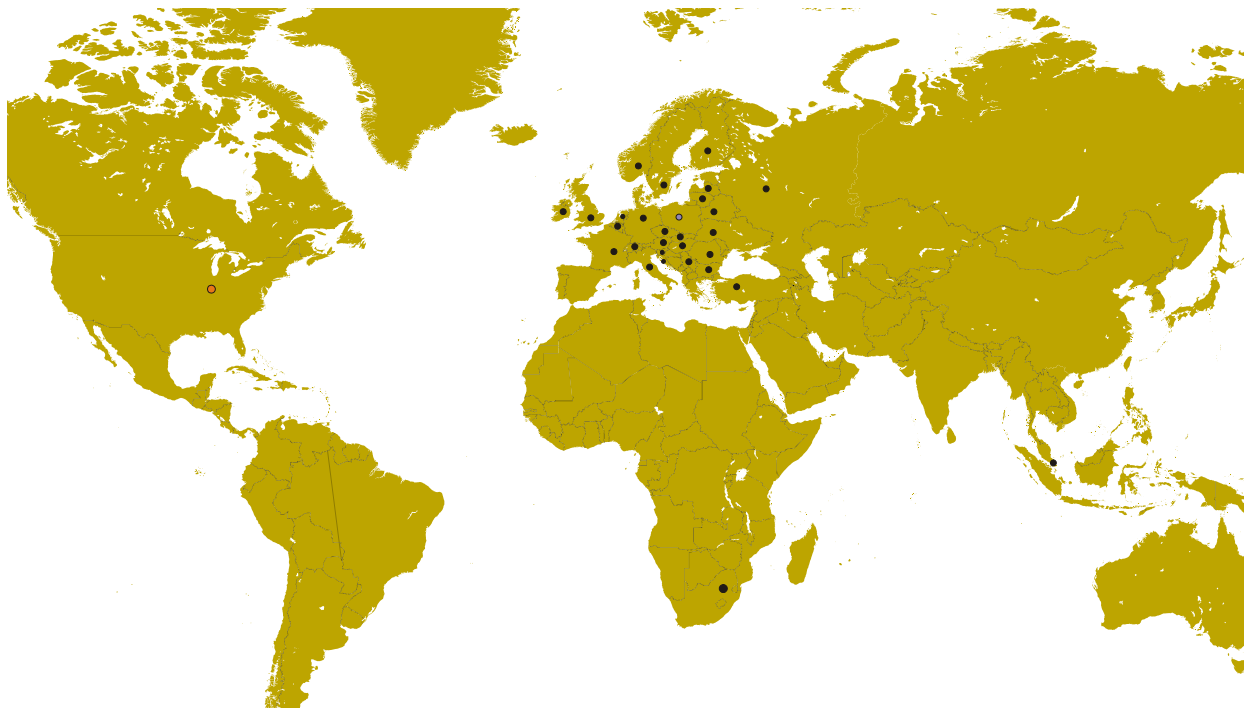
- Visa, Mastercard, or Discover
- COD
- Prepayment
- Net 15 (with approved credit)

Be aware that shipping and handling charges may apply. Handling charges are based on size and quantity of order.

Technical data are subject to change without prior notice.

Actual product may differ from product images. Some illustrations show machines with optional equipment.

Branches & Authorized Sales Centers Wood-Mizer Locations (North and South America)



EUROPE		UNITED STATES
<p><b>European Headquarters</b>  <b>Wood-Mizer Industries Sp. z o.o.</b>                      Nagórna 114, 62-600 Kolo, Poland                      Tel.: +48-63-26-26-000                      Fax: +48-63-27-22-327  <a href="http://www.woodmizer.eu">www.woodmizer.eu</a></p>		<p><b>World Headquarters</b>  <b>Wood-Mizer LLC</b>                      8180 West 10th Street                      Indianapolis, Indiana 46214-2400,                      USA                      Tel.: +1-317-271-1542                      Fax: +1-317-273-1011  <a href="http://www.woodmizer.com">www.woodmizer.com</a></p>
<p><b>BELARUS</b>  <b>MOST-GRUPP</b>                      Siemashko 15, k.3                      Minsk 2200116                      Tel.: +375-17-270-90-08                      Fax: +375-17-270-90-08                      GSM: +375-29-649-90-80                      e-mail: <a href="mailto:most-by@mail.ru">most-by@mail.ru</a></p>	<p><b>SWITZERLAND Stefan Wespi</b>                      Maschinen u. Geräte                      Spezialarbeiten GmbH                      Eichstraße 4                      6353 Weggis                      Tel.: +41-(0)41 - 3900312                      GSM: +41-(0)79 - 9643594  <a href="mailto:info@mobilsaegen.ch">info@mobilsaegen.ch</a></p>	<p><b>RUSSIA Dariusz Mikołajewski</b>  <b>OOO WOOD-MIZER INDUSTRIES</b>                      141031, Moscow                      Reg., Mytishenski raj., pos. Veshki,                      Zavodskaja str., 3B                      Tel.Fax: +7(495) 788-72-35                      Tel.Fax: +7(495) 641-51-60                      e-mail: <a href="mailto:dariuszm@woodmizer-moscow.ru">dariuszm@woodmizer-moscow.ru</a></p>
<p><b>BULGARIA Kalin Simeonov</b>  <b>Ecotechproduct</b>                      38 Star Lozenski pat str.                      Sofia 1186                      Tel.: +359-2-462-7035                      Tel.: +359-2-963-1656                      Tel./Fax                      : +359-2-979-1710  <b>Kalin Simeonov</b>                      GSM: +3592-963-2559                      e-mail: <a href="mailto:office@ecotechproduct.com">office@ecotechproduct.com</a></p>	<p><b>HUNGARY Wiktor Turoczy</b>  <b>Wood-Mizer Hungary K.F.T.</b>                      Szonyi Ut 67., 2921 Komárom                      Tel./Fax: +36-34-346-255                      e-mail: <a href="mailto:woodmizer@woodmizer.hu">woodmizer@woodmizer.hu</a></p>	<p><b>RUSSIA Far East Wladimir Glazaczew</b>  <b>"WM Service"</b>                      Krasnorechenskaya Str.111                      680006 Khabarovsk                      Tel./Fax: +7-914-541-1183                      e-mail: <a href="mailto:wms-khv@mail.ru">wms-khv@mail.ru</a></p>



<p><b>CROATIA Krešimir Pregernik Pregimex d.o.o.</b> S. Batušića 31, 10090 Zagreb Tel./Fax: +3851-38-94-668 <b>Krešimir Pregernik</b> GSM: +3851-98-207-106 e-mail: <a href="mailto:Kresimir.Pregernik@gmail.com">Kresimir.Pregernik@gmail.com</a></p>	<p><b>ITALY Pasquale Felice Wood-Mizer Italia Srl Cda. Capoiaccio SN</b> 86012 Cercemaggiore Campobasso Tel./Fax: +39-0874-798-357 GSM: +39-333-281-03-79 e-mail: <a href="mailto:wmitaliasrl@gmail.com">wmitaliasrl@gmail.com</a></p>	<p><b>SERBIA Dragan Markov Wood-Mizer Balkan d.o.o.</b> Svetosavska GA 3/3; P. Fah 25 23 300 Kikinda Tel./Fax: +381-230-25-754 Tel./Fax: +381-230-23-567 GSM: +381-63-568-658 e-mail: <a href="mailto:office@woodmizer.co.yu">office@woodmizer.co.yu</a></p>
<p><b>CZECH REPUBLIC Miroslaw Greill Wood-Mizer CZ s.r.o.</b> Osvaldova 91 339 01 Klatovy-Luby Tel./Fax: +420-376-312-220 Fax: +420-376-319-011 <b>Miroslaw Greill</b> GSM: +420-723-580-799 e-mail: <a href="mailto:greill@woodmizer.cz">greill@woodmizer.cz</a></p>		<p><b>SLOVAKIA Wiktor Turoczy Wood-Mizer Danubia s.r.o.</b> Hadovce 5, 94501 Komárno Tel.: +421-35-77-40-316 Fax: +421-35-7740-326 GSM: +421-905-930-972 e-mail: <a href="mailto:woodmizer@woodmizer.sk">woodmizer@woodmizer.sk</a></p>
<p><b>CZECH REPUBLIC Lubomir Kudlik Wood-Mizer Moravia</b> Sovadinova 6 69002 Breclav Tel./Fax: +420-519-322-443 <b>Lubomir Kudlik</b> GSM: +420-602-734-792 e-mail: <a href="mailto:info@wood-mizer.net">info@wood-mizer.net</a></p>	<p><b>LATVIA Vilmars Jansons OBERTS Ltd</b> Gaujas str. 32/2 LV-2167 Marupe, Rigas Raj. Tel.: +371-7-810-666 Fax: +371-7-810-655 <b>Vilmars Jansons</b> GSM: +371-92-06-966 <b>Andris Orols</b> GSM: +371-28-33-07-90 e-mail: <a href="mailto:andris@oberts.lv">andris@oberts.lv</a></p>	<p><b>TURKEY Er-Ka Ahsap Profil Kerestecilik San. ve Tic. Ltd. Sti.</b> Adana Keresteciler Sitesi 191 sk No.41 ADANA Tel.: +90-322-346-15-86 Fax: +90-322-345-17-07 GSM: +90-533-363-18-44 e-mail: <a href="mailto:info@erkaahsap.com.tr">info@erkaahsap.com.tr</a></p>
<p><b>FINLAND Howard Blackbourn Oy Falkberg Jordbruk Ab</b> Falkintie 220 25610 Ylonkyla Tel.: +358-2732-2253 Fax: +358-2732-2263 <b>Howard Blackbourn</b> GSM: +358-440-424-339 e-mail: <a href="mailto:falkberg@woodmizer.fi">falkberg@woodmizer.fi</a></p>	<p><b>LITHUANIA Andrius Zuzevicius UAB Singlis</b> Savanoriu pr. 187, 2053 Vilnius Tel.: +370-5-2-32-22-44 Fax: +370-5-2-64-84-15 GSM: +370-620-28-645 e-mail: <a href="mailto:andrius.z@singlis.lt">andrius.z@singlis.lt</a></p> <p><b>Dmitrij Gaiduk</b> GSM: +370-69-84-51-91 e-mail: <a href="mailto:dmitrijus.g@singlis.lt">dmitrijus.g@singlis.lt</a></p>	<p><b>UKRAINE Ivan Vinnicki MOST UKRAINA</b> bul. Myru 3, Bajkivtsi Ternoplskyj r-j Ternopolska oblast 47711 Ukraine Tel/Fax: +38 (0352) 52 37 74 GSM: +38 (067) 352 54 34 GSM: +38 (067) 674 50 68 E-mail: <a href="mailto:most-ukraina@ukr.net">most-ukraina@ukr.net</a></p>
<p><b>FRANCE Tizoc Chavez Wood-Mizer France</b> 556 chemin des Embouffus, ZAC des Basses Echarrieres 38440 SAINT JEAN DE BOURNAY Tel: +33-4 74 84 84 44 GSM: +33-607 52 02 82 Mail: <a href="mailto:tchavez@woodmizer.fr">tchavez@woodmizer.fr</a></p>	<p><b>NORWAY Odd Edvoll Wood-Mizer Nordic AS</b> Vardelia 17, 2020 Skedsmokorset Tel.: +47-63-87-49-89 Fax: +47-63-87-37-66 GSM: +47-930-42-335 e-mail: <a href="mailto:odd.edvoll@woodmizer.no">odd.edvoll@woodmizer.no</a></p> <p>e-mail: <a href="mailto:firmapost@woodmizer.no">firmapost@woodmizer.no</a></p>	<p><b>UNITED KINGDOM &amp; IRELAND Wood-Mizer UK</b> Hopfield Barn Kenward Road, Yalding Kent ME18 6JP, UK Tel.: +44-1622-813-201 Fax: +44-1622-815-534 e-mail: <a href="mailto:info@woodmizer.co.uk">info@woodmizer.co.uk</a></p>
<p><b>SLOVENIA Jan Fale FAMTEH d.o.o.</b> Gacnikova pot 2, 2390 Ravne na Koroskem Tel.: +386-2-62-04-232 Fax: +386-2-62-04-231 <b>Jan Fale</b> GSM: +386-2-62-04-230 e-mail: <a href="mailto:jan.fale@famteh.si">jan.fale@famteh.si</a></p> <p><b>Matjaz Kolar</b> Tel.: +386-2-62-04-232 GSM: +386-31-775-999 e-mail: <a href="mailto:matjaz.kolar@famteh.si">matjaz.kolar@famteh.si</a></p>		

<p><b>GERMANY Klaus Longmuss</b>  <b>Wood-Mizer Sägewerke GmbH</b>  Dorfstraße 5, 29485 Schletau  Tel.: +49-5883-9880-10  Fax: +49-5883-9880-20  e-mail: <a href="mailto:info@woodmizer.de">info@woodmizer.de</a></p> <p><b>Klaus Longmuss</b>  Tel.: +49-5883-9880-12  GSM: +49-17-298-55-892  e-mail: <a href="mailto:KLongmuss@woodmizer.de">KLongmuss@woodmizer.de</a></p>	<p><b>Subagent:</b>  <b>SWEDEN Kjell Larsson</b>  <b>Mekwood AB</b>  Slingan 14, 812 41 Gästrike-Hammarby  Tel.: +46-290-515-65  <b>Kjell Larsson</b>  GSM: +46-706-797-965  e-mail: <a href="mailto:kjell.larsson@mekwood.se">kjell.larsson@mekwood.se</a></p>	<p><b>IRELAND</b>  <b>Wood-Mizer Ireland</b>  Stephen Brennan  Cum Lahardane Ballina County Mayo  Tel: +353 96 51345</p> <p>E-mail: <a href="mailto:brennanmill@ericom.net">brennanmill@ericom.net</a></p>
<p><b>Subagents:</b>  <b>DENMARK Brian Jensen</b>  Amborgvej 9, 7330 Brande- Fasterholt  Tel.: +45-971-88-265  Fax: +45-971-88-266  <b>Brian Jensen</b>  GSM: +45-23-49-5828  e-mail: <a href="mailto:Fasterholt-Savvaerk@Mail.Tele.dk">Fasterholt-Savvaerk@Mail.Tele.dk</a></p>	<p><b>ROMANIA Adrian Echert</b>  <b>SC WOOD-MIZER RO SRL</b>  TRANSILVANIEI Nr. 5  Sibiu, Cisnadia 555300  Tel./Fax: : +40-369-405-433  GSM: +40-745-707-323  e-mail: <a href="mailto:aechert@woodmizer.ro">aechert@woodmizer.ro</a></p>	<p>Regional Manager - Asia  Wood-Mizer Asia Pte Ltd.  James Wong  Tel: +65 81216910  Fax: +65 6283 8636  WWW: <a href="http://www.woodmizerasia.com">www.woodmizerasia.com</a>  E-mail: <a href="mailto:jwong@woodmizerasia.com">jwong@woodmizerasia.com</a></p>
<p><b>Netherlands Chris Dragt</b>  Lange Brink 77d,  7317 BD Apeldoorn  Tel.: +31-55312-1833  Fax: +31-55312-2042  e-mail: <a href="mailto:Info@dragtbosbouw.nl">Info@dragtbosbouw.nl</a></p>	<p><b>Subagent:</b>  <b>ROMANIA M. Echert</b>  <b>S.C. Echert Comprod s.r.l</b>  Str. Schitului Nr. 6, Apt.7 etajul-1  725 70 Vatra Dornei, Romania  Tel./Fax: +40-230-374-235  Tel. : +40-740-35-35-74</p>	<p>Regional Manager - Africa  Wood-Mizer Africa  Jean-Jacques Oelofse  UNIT 3, LEADER PARK, NO: 20 CHARIOT ROAD  STORMILL, EXT 5, Roodepoort,  Johannesburg  Tel: +27 011 473 1313  Fax: +27 011 473 2005  Jean-Jacques Oelofse E-mail:  <a href="mailto:jjoelofse@woodmizerafrika.com">jjoelofse@woodmizerafrika.com</a>  Jean-Jacques Oelofse  Skype: <a href="https://www.skype.com/user/jean.jacques.pierre.oelofse">jean.jacques.pierre.oelofse</a></p>

**USA World Headquarters**

*Serving North & South America, Oceania, East Asia*

Wood-Mizer LLC  
8180 West 10th Street  
Indianapolis, IN 46214

Phone: 317.271.1542 or 800.553.0182  
Customer Service: 800.525.8100  
Fax: 317.273.1011  
Email: [infocenter@woodmizer.com](mailto:infocenter@woodmizer.com)

**Canadian Headquarters**

*Serving Canada*

Wood-Mizer Canada  
396 County Road 36, Unit B  
Lindsay, ON K9V 4R3

Phone: 705.878.5255 or 877.357.3373  
Fax: 705.878.5355  
Email: [ContactCanada@woodmizer.com](mailto:ContactCanada@woodmizer.com)

**Brazil Headquarters**

*Serving Brazil*

Wood-Mizer do Brasil  
Rua Dom Pedro 1, No: 205 Bairro: Sao Jose  
Ivoti/RS CEP:93.900-000

Tel: +55 51 9894-6461/ +55 21 8030-3338/ +55 51  
3563-4784  
Email: [info@woodmizer.com.br](mailto:info@woodmizer.com.br)

**Europe Headquarters**

*Serving Europe, Africa, West Asia*

Wood-Mizer Industries Sp z o.o.  
Nagorna 114  
62-600 Kolo, Poland

Phone: +48.63.26.26.000  
Fax: +48.63.27.22.327

**Branches & Authorized Sales Centers**

For a complete list of dealers, visit [www.woodmizer.com](http://www.woodmizer.com)

---

## **SECTION 1 INTRODUCTION**

Thank you for choosing Wood-Mizer wood processing equipment!

Wood-Mizer is committed to providing you with the latest technology, best quality and strongest customer service available on the market today. We continually evaluate our customers' needs to ensure we're meeting current wood-processing demands. Your comments and suggestions are welcome.

The present documentation contains information that should be used when preparing the machine for operation, working with it and when servicing or repairing it, as well.

### **1.1 Machine Description**

The WM1000 sawmill is intended for sawing wood only. The sawmill must not be used for any other purposes such as cutting ice, metal or any other materials.

Using the machine correctly, you will obtain a material of the highest quality and high degree of accuracy.


The WM1000 sawmill should be operated only by an adult who has read and understood the entire operator's manual.

The machine is built to be durable and easy to operate and maintain.

## 1.2 Machine and Site Preparation

The sawmill is delivered and installed at Customer's location by the Wood-Mizer Customer Service.

The major components of the WM1000 sawmill are shown in the figure below.

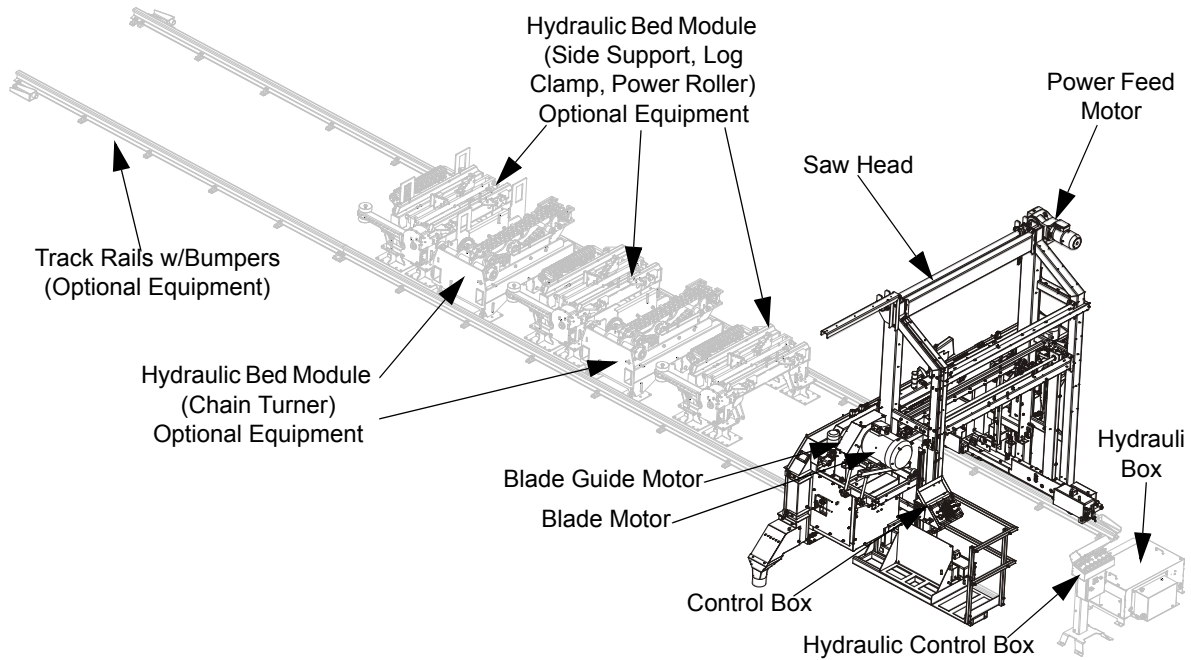

**FIG. 1-1**

## SECTION 2 SAFETY



This symbol calls your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions. This symbol accompanies a signal word. The word **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. **WARNING!** suggests a potentially hazardous situation which, if not avoided, could result in death or serious injury. **CAUTION** refers to potentially hazardous situations which, if not avoided, may result in minor or moderate injury to persons or equipment. Read all safety instructions before operating this machine and observe all safety warnings!



Warning stripes are placed on areas where a single decal would be insufficient. To avoid serious injury, keep out of the path of any equipment marked with warning stripes.

Read all safety instructions before operating this sawmill and observe them during operation of the machine! Also read any additional manufacturer's manuals and observe any applicable safety instructions including dangers, warnings, and cautions.

Always be sure that all safety decals placed on the machine are clean and readable. Replace immediately all damaged safety decals to prevent personal injury or damage to the equipment. Contact your local Wood-Mizer dealer, or call Wood-Mizer Customer Service Department to order more decals.

**IMPORTANT!** It is always the owner's responsibility to comply with all applicable federal, state and local laws, rules and regulations regarding the ownership, operation and towing of your Wood-Mizer sawmill. All Wood-Mizer mill owners are encouraged to become thoroughly familiar with these applicable laws and comply with them fully while using or towing the mill.

Always properly dispose of all sawing by-products, including sawdust and other debris, coolant, oil, fuel, oil filters and fuel filters.

Safety instructions are listed in this section by the following operations:

- Blade Handling,
- Sawmill Setup,
- Sawmill Operation,
- Sawmill Maintenance.

### 2.1 Blade Handling



**DANGER!** Always disengage the blade and shut off the sawmill motor before changing the blade. Failure to do so may result in serious injury.



**WARNING!** Always wear gloves and eye protection when handling bandsaw blades. Changing blades is safest when done by one person! Keep all other persons away from area when coiling, carrying or changing a blade. Failure to do so may result in serious injury.

## 2.2 Sawmill Setup



**WARNING!** Securely fasten rails of a sawmill to the floor before operating the sawmill. Failure to do so may result in serious injury or death.

**WARNING!** The sawmill should be set up on firm, level ground and must be fastened to the ground.



**CAUTION!** Changes in temperature could cause blade tension changes. Release the blade tension when the sawmill is not in use.

## 2.3 Sawmill Operation



**IMPORTANT!** The sawmill is intended for sawing wood only. See Section [7.3 Cutting Capacity](#) for log size capacities of the machine.

**IMPORTANT!** The sawmill's operator should get training in operation and adjustment of the machine.



**DANGER!** Make sure all guards and covers are in place and secured before operating. Failure to do so may result in serious injury.

Be sure the blade housing and pulley covers are in place and secured, and the safety switches located on them are engaged. Use the rubber latches to fasten the blade housing covers shut.

**DANGER!** Always keep hands away from moving bandsaw blade. Failure to do so may result in serious injury.

**DANGER!** Keep all persons out of the path of moving equipment and logs when operating the sawmill or loading and turning logs. Failure to do so may result in serious injury.

**DANGER!** Maintain a clean and clear path for all necessary movement around the mill and lumber stacking areas. Failure to do so may result in serious injury.

**DANGER!** Always be sure all persons are out of the path of the blade before starting the motor. Failure to do so may result in serious injury.

**WARNING!** When operating or servicing the machine, always wear eye, ear and foot protection as well as safety clothing. Failure to do so may result in serious injury.



**WARNING!** Secure all loose clothing and jewelry before operating the sawmill. Failure to do so may result in serious injury or death.

**WARNING!** Always make sure a log is clamped securely before sawing. Failure to do so may result in serious injury or death.

**WARNING!** Use ONLY oil specified in Section [7.10 Lube System Specifications](#) with the blade lube system. Never use flammable fuels or liquids! If these types of liquids are necessary to clean the blade, remove it and clean with a rag. Failure to do so may result in serious injury or death. When cutting in freezing temperatures, use an anti-freeze, non-flammable additive.



**CAUTION!** Make sure the side supports, log turner, clamp, and any other log handling accessories are below bed level before loading a log onto the bed. Failure to do so may result in machine damage or cause misalignment.

**CAUTION!** Before loading a log, make sure the saw head is moved far enough so the log does not hit it. Failure to do so may result in sawmill damage.

**CAUTION!** Do not try to force the saw head beyond its upper and lower travel limits. Damage to the up/down system may result.



**CAUTION!** Never clean the blade or the blade wheels with a brush or a scraper during sawmill operation.

**CAUTION!** Before installation of the blade, inspect it for damage and cracks. Use only properly sharpened blades. Always handle the blade with extreme caution. Use suitable carrier equipment for transporting blades.

**CAUTION!** Always wear gloves when handling the blade. Never grab the blade with bare hands!

**CAUTION!** If the blade breaks during sawmill operation, the blade motor will be stopped automatically. Wait until both wheels have come to a complete stop before you open the blade housing covers.

**CAUTION!** Be sure to stop the blade when returning the saw head. This will not only prevent the blade from being pulled off and ruined by a wood sliver, but also will increase the life of the blade.

**CAUTION!** The sawmill's work-stand should be equipped with a 4 kg or bigger dry powder extinguisher.

**CAUTION!** If at any time you need to immediately stop the blade motor, press the emergency stop button located on the control box.

**CAUTION!** The sawmill should be operated with a sawdust extraction system only.

**CAUTION!** When working in dusty conditions, use a protective dust mask.

## 2.4 Sawmill Maintenance



**WARNING!** Always secure the saw head with a chain or a brace before adjusting the up/down chain. The saw head may fall, causing severe injury or death.

**WARNING!** Always secure the saw head with a chain or a brace before adjusting the saw head guide rollers. The cutting head may fall, causing severe injury or death.

**CAUTION!** Do not use chain lube. It causes sawdust buildup in chain links.

**CAUTION!** Due to variations in the vertical mast, the guide roller spacing may vary throughout the travel of the saw head. Check the guide roller spacing at the top and bottom ends of the mast only. Rollers adjusted too tight will cause premature up/down motor failure.



**DANGER!** Always disconnect and lock out power supply before performing any maintenance work, cleaning or servicing the sawmill!

See Table 2-1. Pictographic safety decals placed on the WM1000 sawmill are shown in the table below.

**TABLE 2-1**

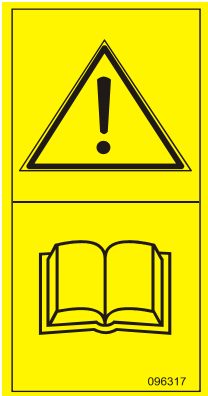

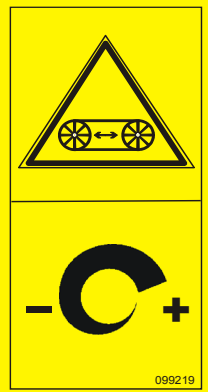

Decal View	Decal No.	Description
	096317	CAUTION! Read thoroughly the manual before operating the machine. Observe all safety instructions and rules when operating the sawmill.



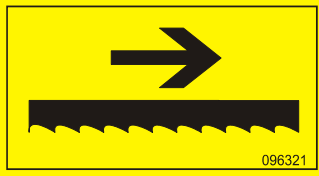




TABLE 2-1

	<p>099220</p>	<p>CAUTION! Close all guards and covers before starting the sawmill.</p>
	<p>099219</p>	<p>Blade tension. Turning the bolt clockwise will increase the blade tension, and turning the bolt counterclockwise will decrease the tension.</p>
	<p>099221</p>	<p>CAUTION! Keep all other persons at a safe distance from work area when operating the machine.</p>

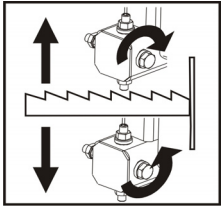
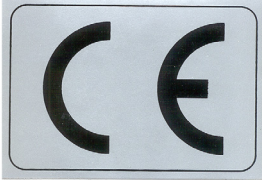


**TABLE 2-1**

<p>098176</p>	<p>098176</p>	<p>CAUTION! Keep a safe distance from the debarker blade!</p>
<p>096316</p>	<p>096316</p>	<p>CAUTION! Do not open or close the electric box when the switch is not in the "0" position.</p>
<p>096319</p>	<p>096319</p>	<p>CAUTION! Disconnect power supply before opening the box.</p>
<p>099222</p>	<p>099222</p>	<p>CAUTION! Sawdust chute. Protect eyes!</p>

TABLE 2-1

	<p>096321</p>	<p>Blade movement direction</p>
	<p>S12004G</p>	<p>CAUTION! Always wear safety goggles when operating the sawmill!</p>
	<p>S12005G</p>	<p>CAUTION! Always wear protective ear muffs when operating the sawmill!</p>
	<p>501465</p>	<p>CAUTION! Always wear safety boots when operating the sawmill!</p>
	<p>501467</p>	<p>Lubrication point</p>

**TABLE 2-1**

 <p>P11789b</p>	<p>P11789</p>	<p>Aligning the blade on the wheels</p>									
	<p>P85070</p>	<p>CE safety certification</p>									
 <p>099401</p>	<p>099401</p>	<p>Russian safety certification</p>									
 <p>S20097F</p>	<p>S20097F</p>	<p>Motor rotation direction - 1465 r.p.m.</p>									
<table border="1" data-bbox="268 1331 612 1482"> <thead> <tr> <th>Type</th> <th>psi</th> <th>bar</th> </tr> </thead> <tbody> <tr> <td>3"</td> <td>900-1000</td> <td>62-69</td> </tr> <tr> <td>4"</td> <td>1000-1100</td> <td>69-75</td> </tr> </tbody> </table> <p>511621</p>	Type	psi	bar	3"	900-1000	62-69	4"	1000-1100	69-75	<p>511621</p>	<p>Blade Tension Values</p>
Type	psi	bar									
3"	900-1000	62-69									
4"	1000-1100	69-75									

## SECTION 3 SAWMILL INSTALLATION


**DANGER!** Always disconnect and lock out power supply before servicing. Failure to do so may result in serious injury.

**WARNING!** The machine can be lifted with a forklift or a winch only. The forklift must be rated for at least 4000kg.

### 3.1 Fastening Tracks to the Floor


Set up the sawmill on firm and level footing. Fasten the machine to the floor to prevent any movement. It is highly recommended that cement pads with 21mm (0.827") diameter anchor bolts be made under the track rails and the bed (if equipped). The cement pad should be rated to support 40 T/m<sup>2</sup> (8192 pound/foot). The spacing of the track rail holes is shown in the figures below.

See Figure 3-1.

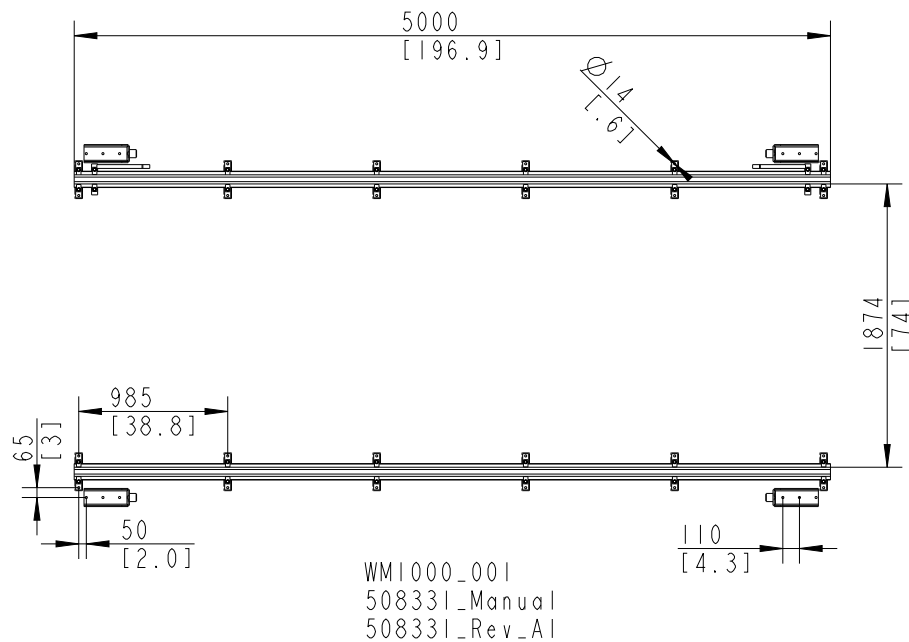


**FIG. 3-1 TRACK RAIL HOLE SPACING WM1000: TRACK 5M**

See Figure 3-2.

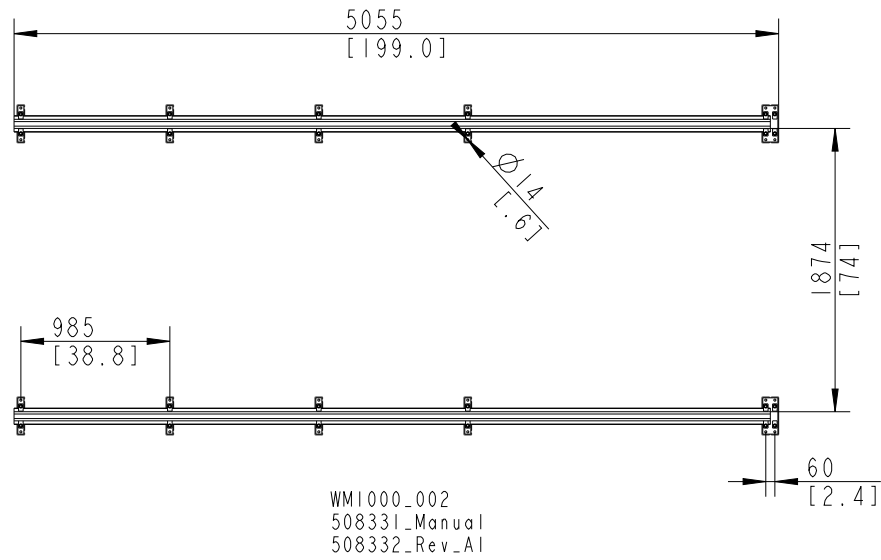

**FIG. 3-2 TRACK RAIL HOLE SPACING WM1000: EXTENSION TRACK 5M**

See Figure 3-3.

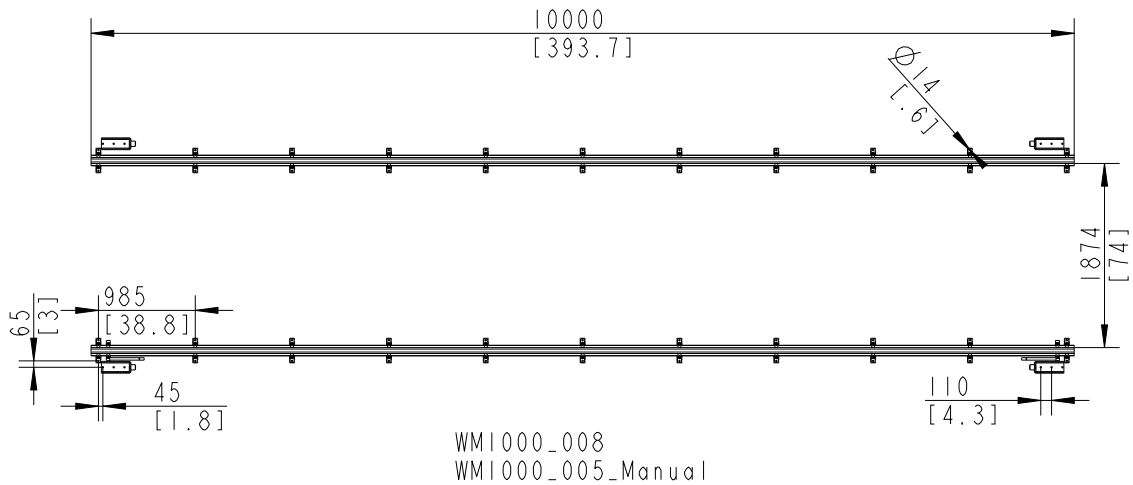

**FIG. 3-3 TRACK RAIL HOLE SPACING WM1000: TRACK 10M**

See Figure 3-4.

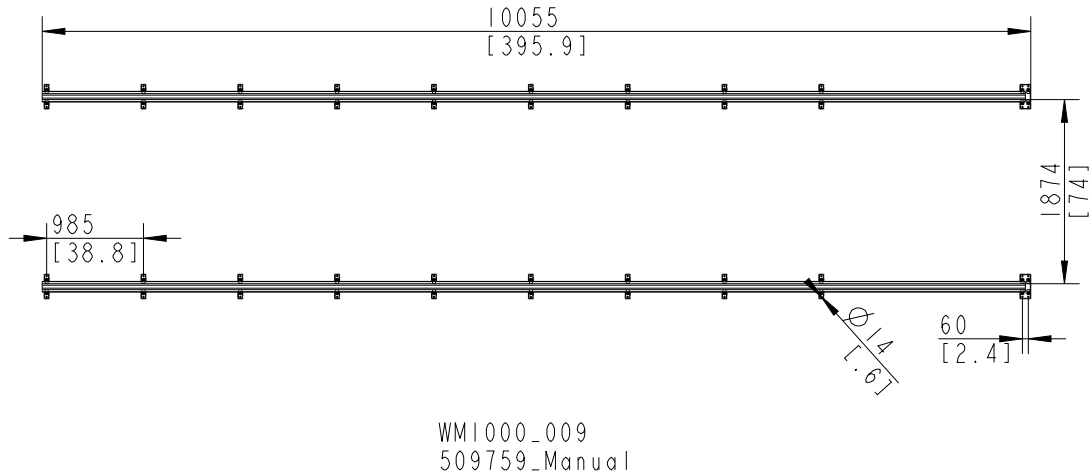


FIG. 3-4 TRACK RAIL HOLE SPACING WM1000: EXTENSION TRACK 10M

See Figure 3-5.


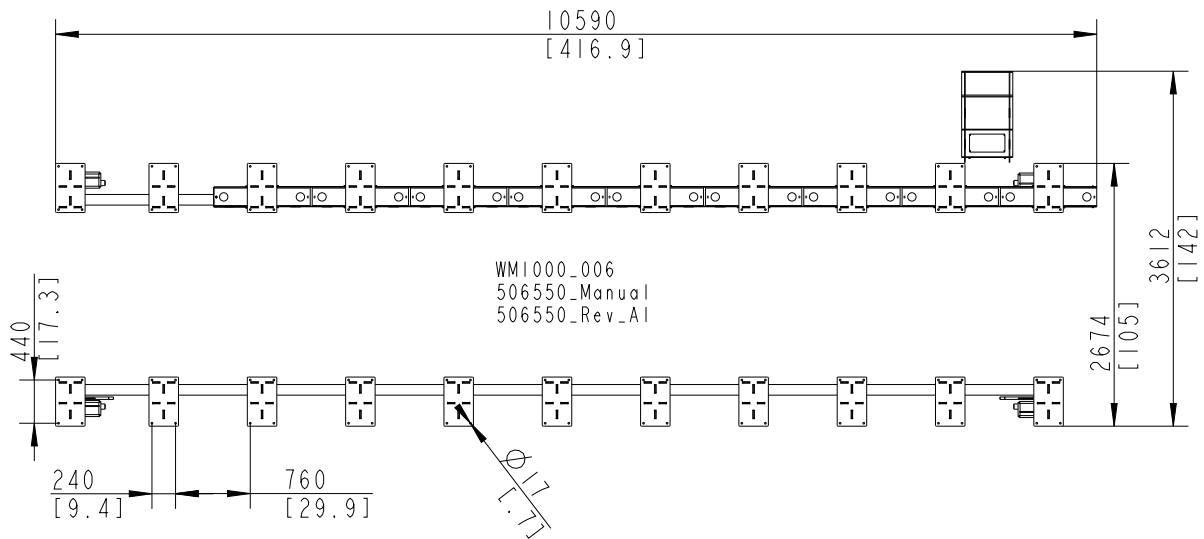


FIG. 3-5 TRACK RAIL HOLE SPACING WM1000: ELEVATED TRACK 10M

See Figure 3-6.

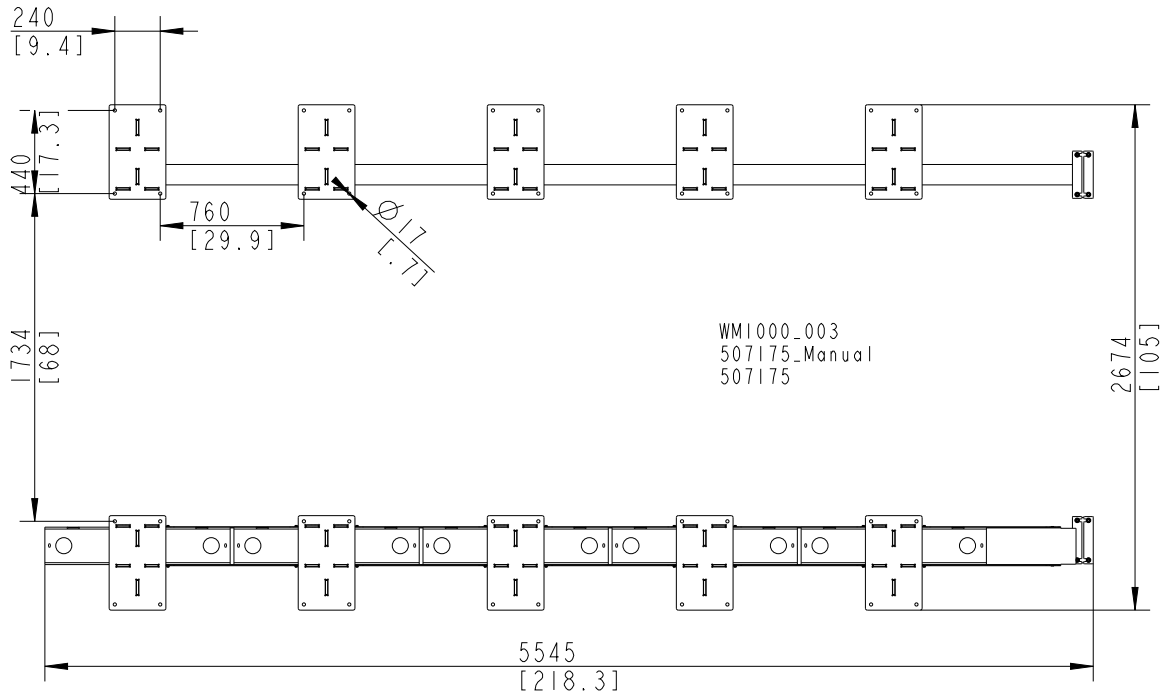

**FIG. 3-6 ELEVATED TRACK WM1000: ELEVATED TRACK EXTENSION 5M**

### 3.2 Mast Installation

1. First, bolt three vertical mast tubes as shown in the figure below.



See Figure 3-7.

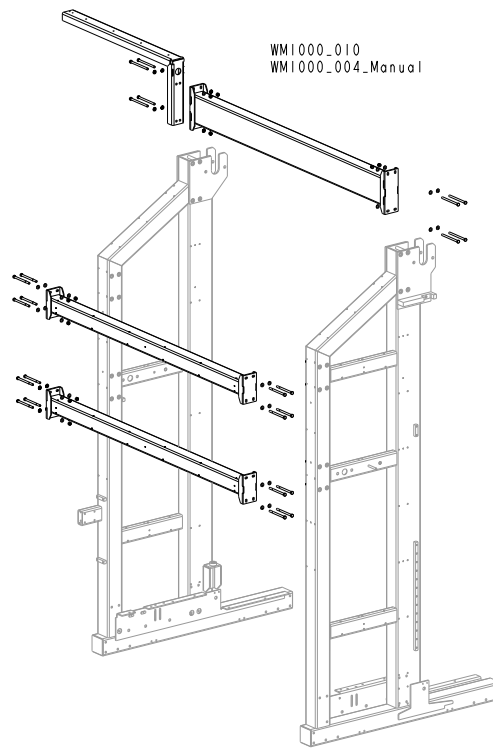


FIG. 3-7

2. Use a winch or forklift to place the mast on the track rails.

See Figure 3-8.

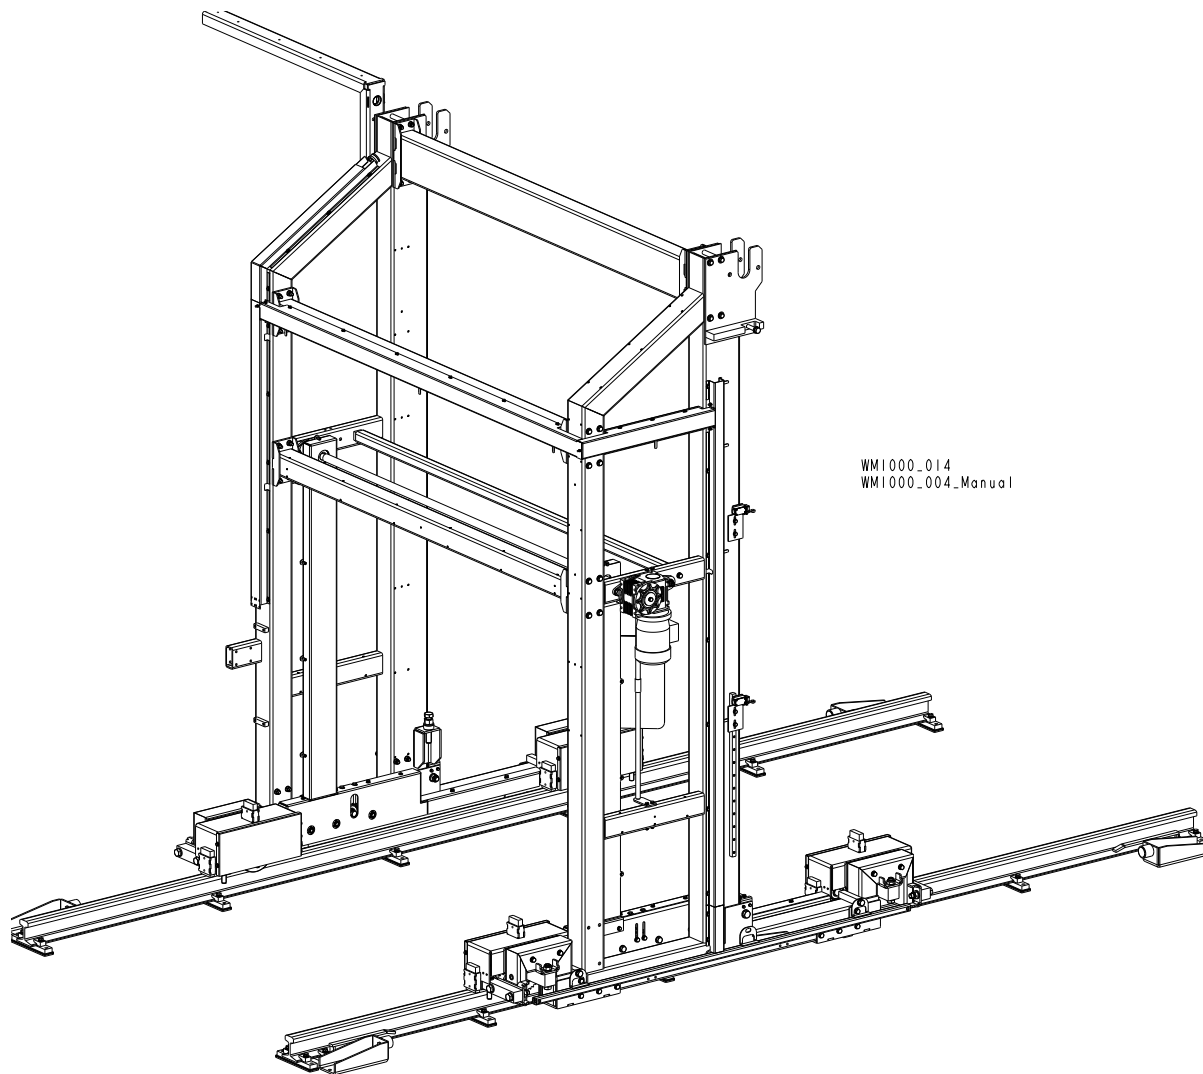


FIG. 3-8

3. Bolt the support blocks as shown in the figure below.

See Figure 3-9.

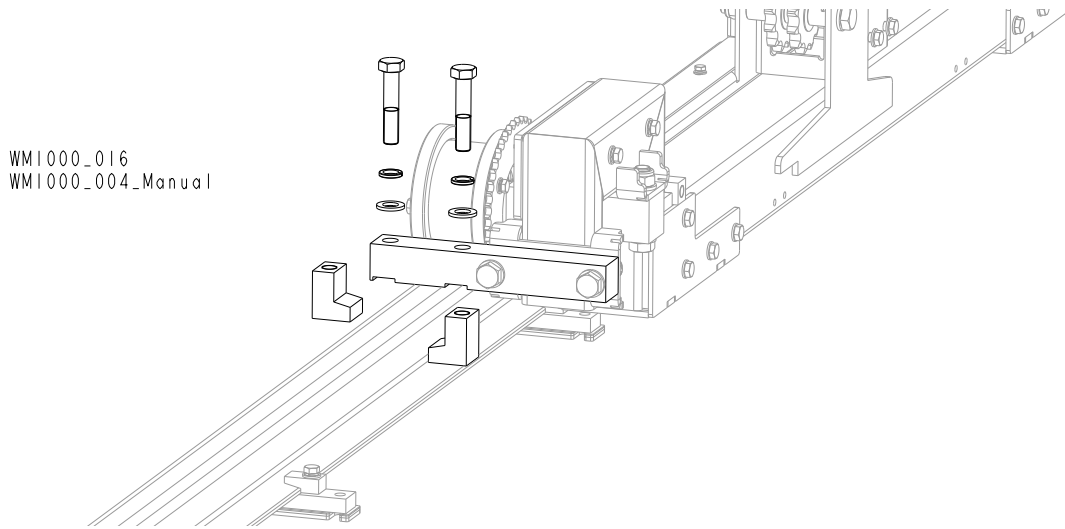


FIG. 3-9

4. Mount the track roller cover and insert the scrapers into the places shown in the figure below.

See Figure 3-10.


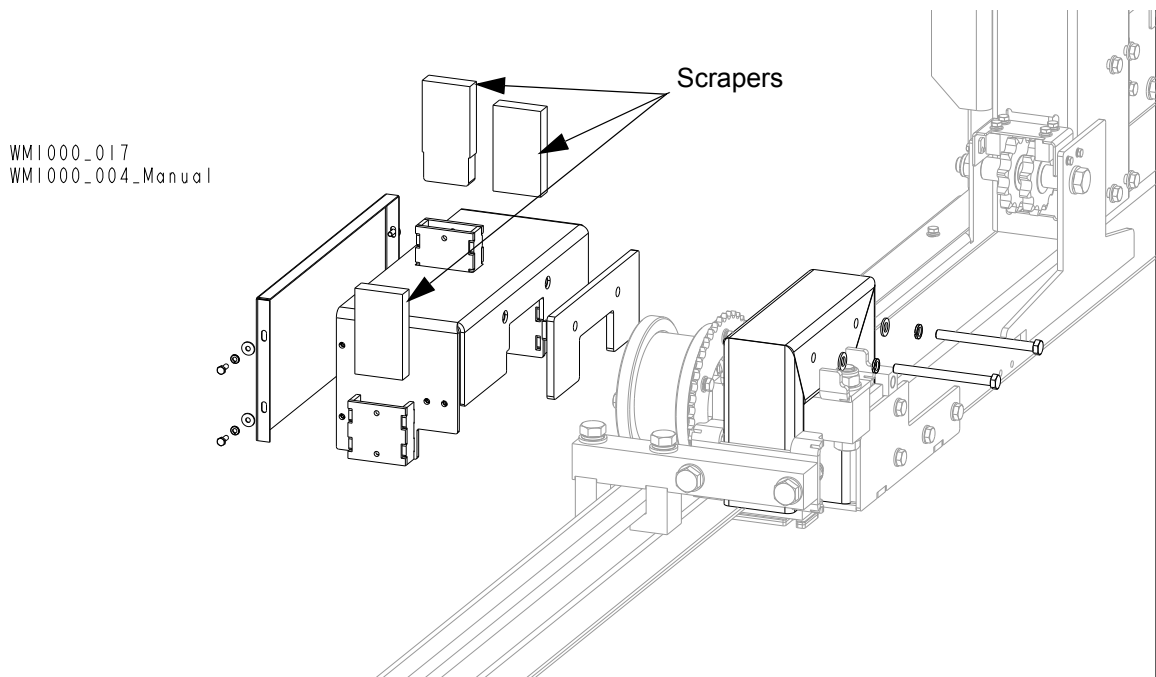


FIG. 3-10

### 3.3 Up/Down Shaft

1. Mount the up/down shaft to the mast. Next, install the motor with the up/down drive gear.

See Figure 3-11.

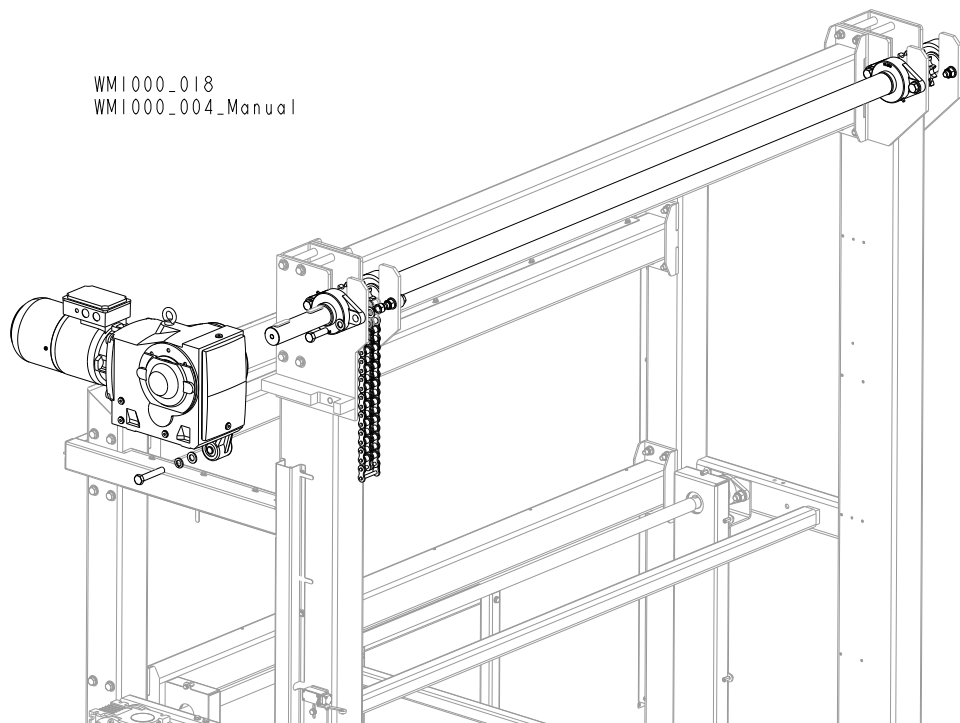

**FIG. 3-11**

### 3.4 Saw Head Assembly

1. The saw head is equipped with lifting brackets. Attach the winch hooks to the brackets shown in the figure below.

See Figure 3-12.


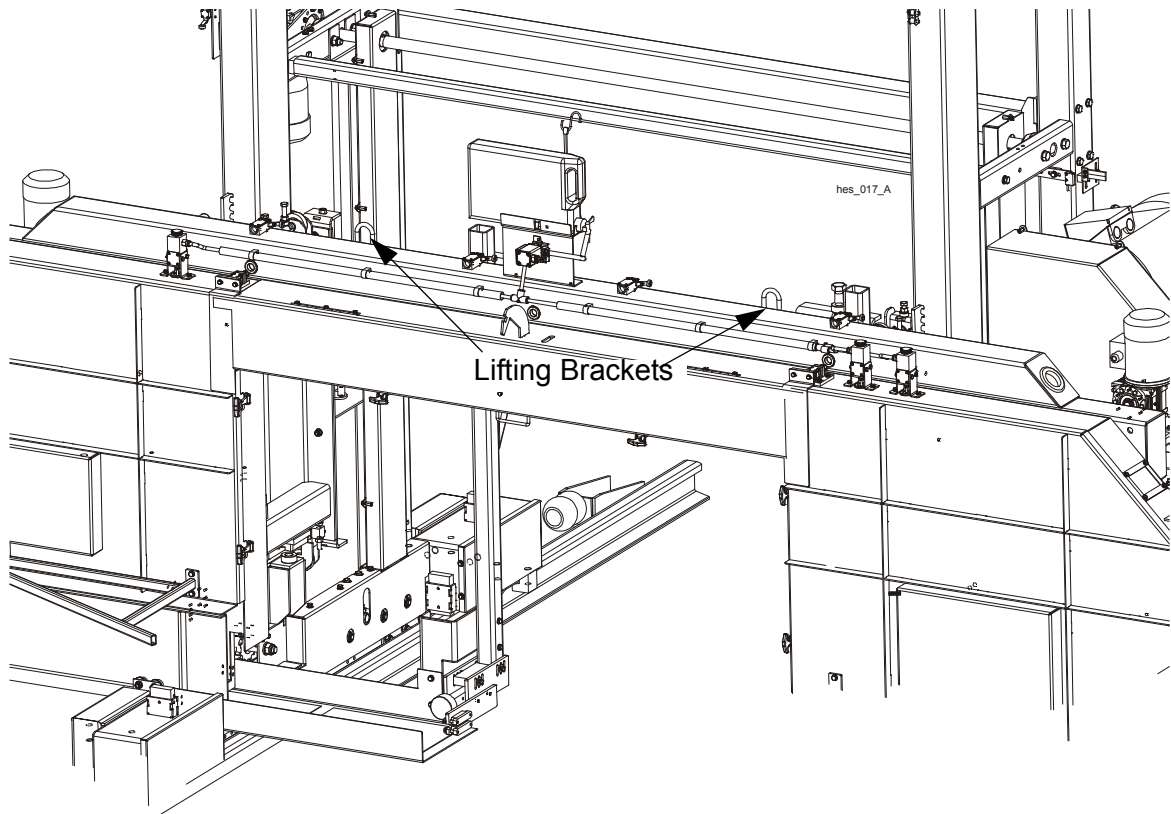


FIG. 3-12

2. Use a winch or a forklift to place the saw head as close as possible to the mast. Install the up/down drive chains to the upper chain brackets. Carefully lower the saw head to hang it on the chains. Use the level and adjustment nuts located on the chain brackets to adjust the saw head horizontally.

See Figure 3-13.

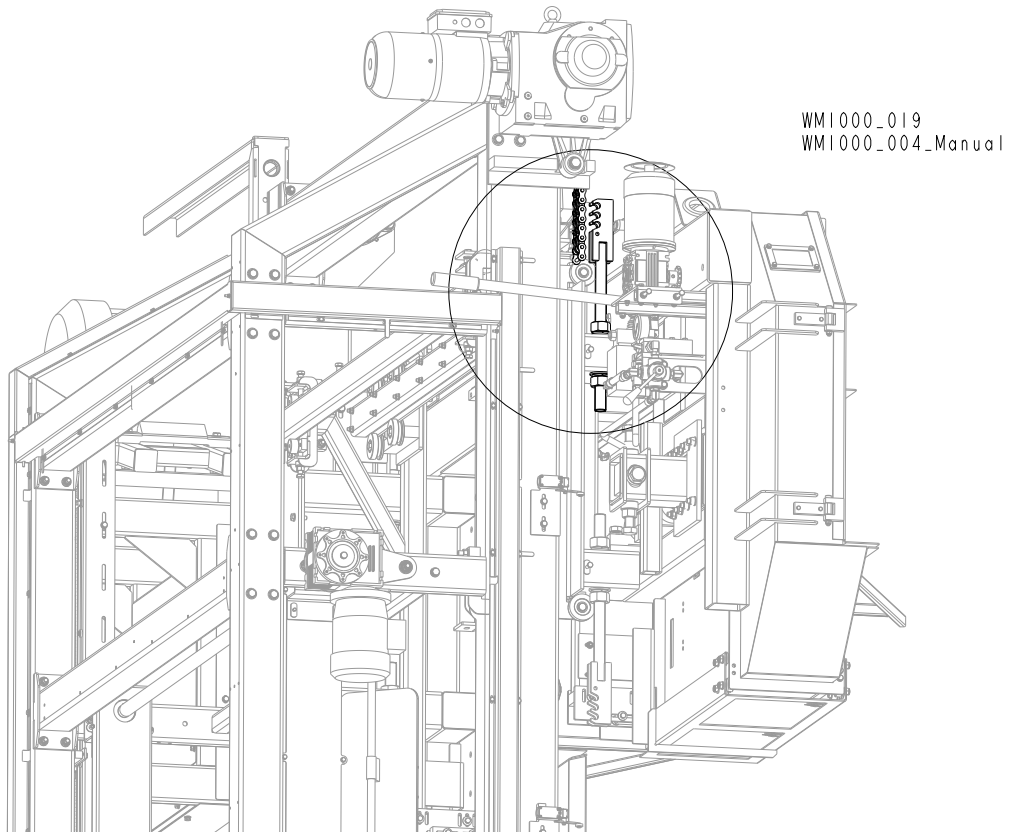

**FIG. 3-13**

3. Use the adjustment nuts of bottom chain bracket shown below to adjust the chain tension.  
[See section 5.10](#) for up/down chain adjustment.

See Figure 3-14.

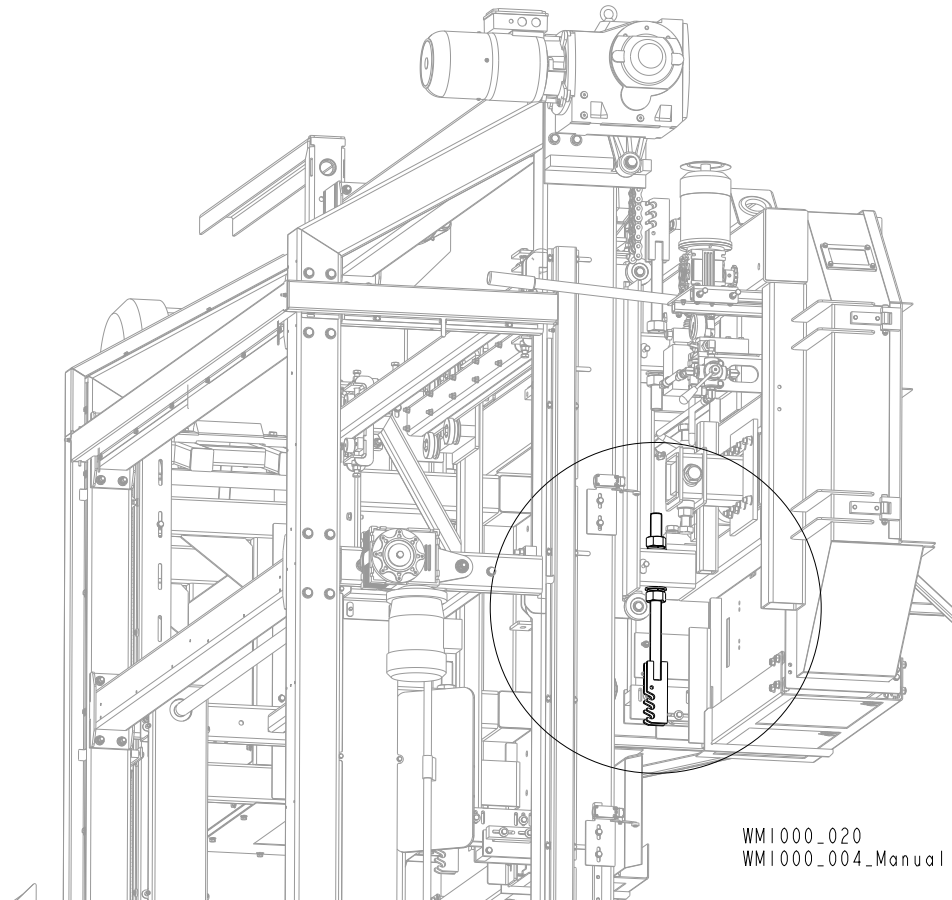


FIG. 3-14

### 3.5 Motor Installation

1. Mount the motor to the mounting plate as shown in the figure below.

See Figure 3-15.

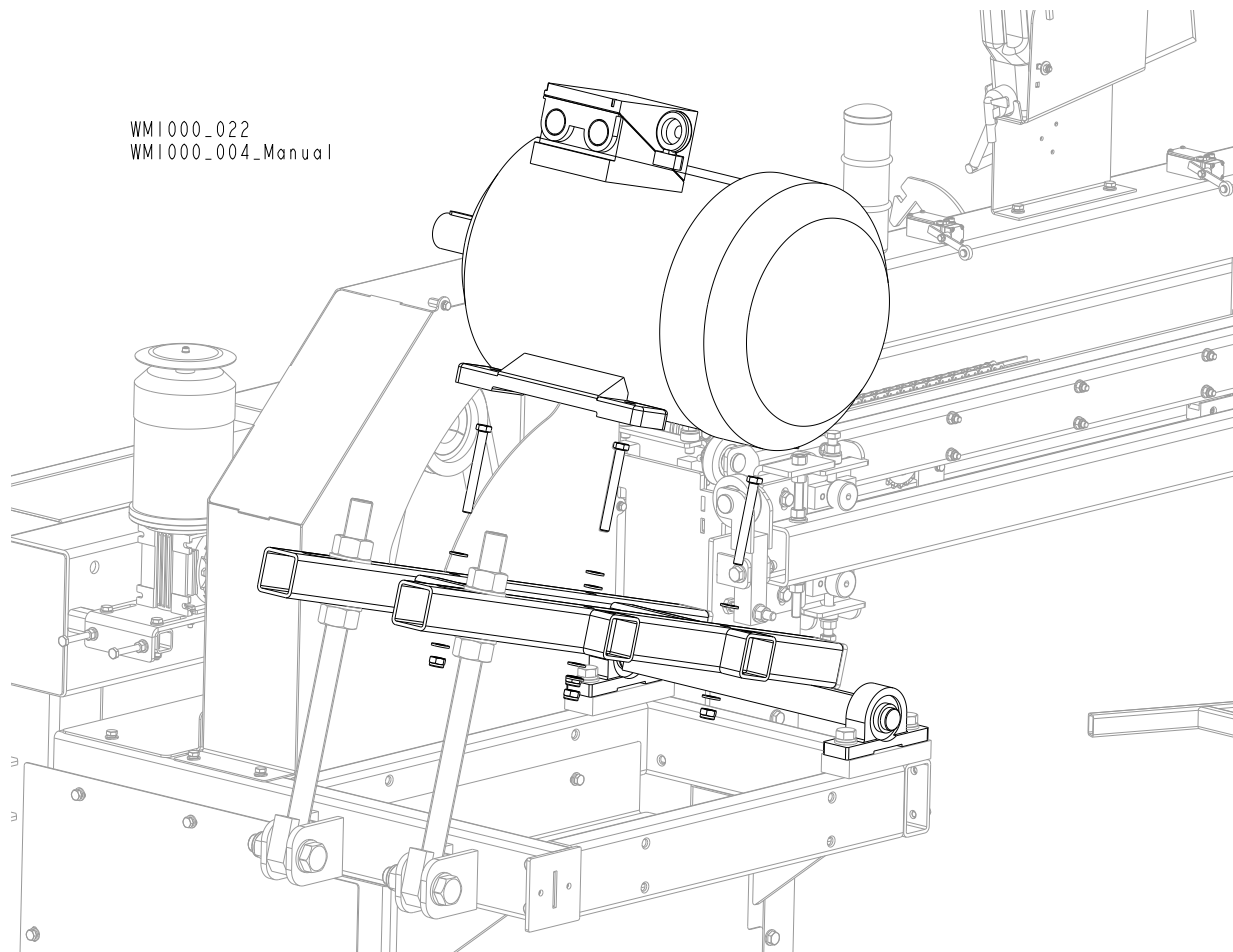


FIG. 3-15

2. Next, adjust the drive belt tension ([See section 5.8](#)) and align the drive belt ([See section 5.9](#)).
3. Make the electrical connections according to the electrical diagram.



### 3.6 Operator Platform

1. Bolt the operator platform to the mast.

See Figure 3-16.


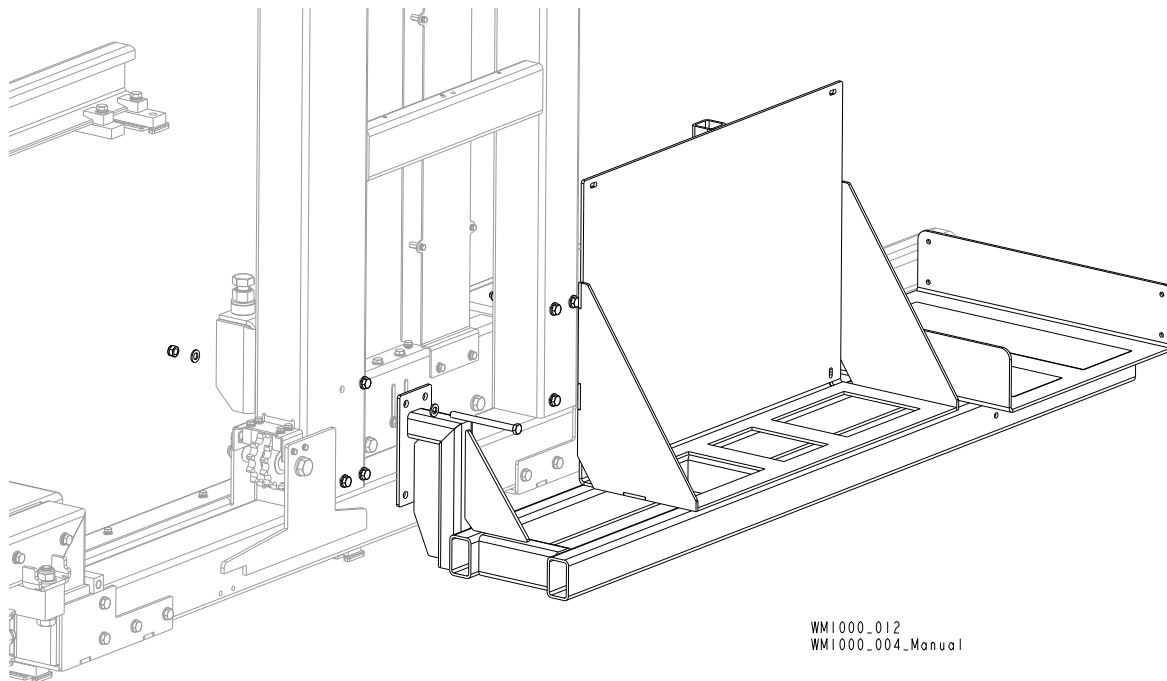


FIG. 3-16

2. Mount the protective rails to the mast and operator platform.


See Figure 3-17.

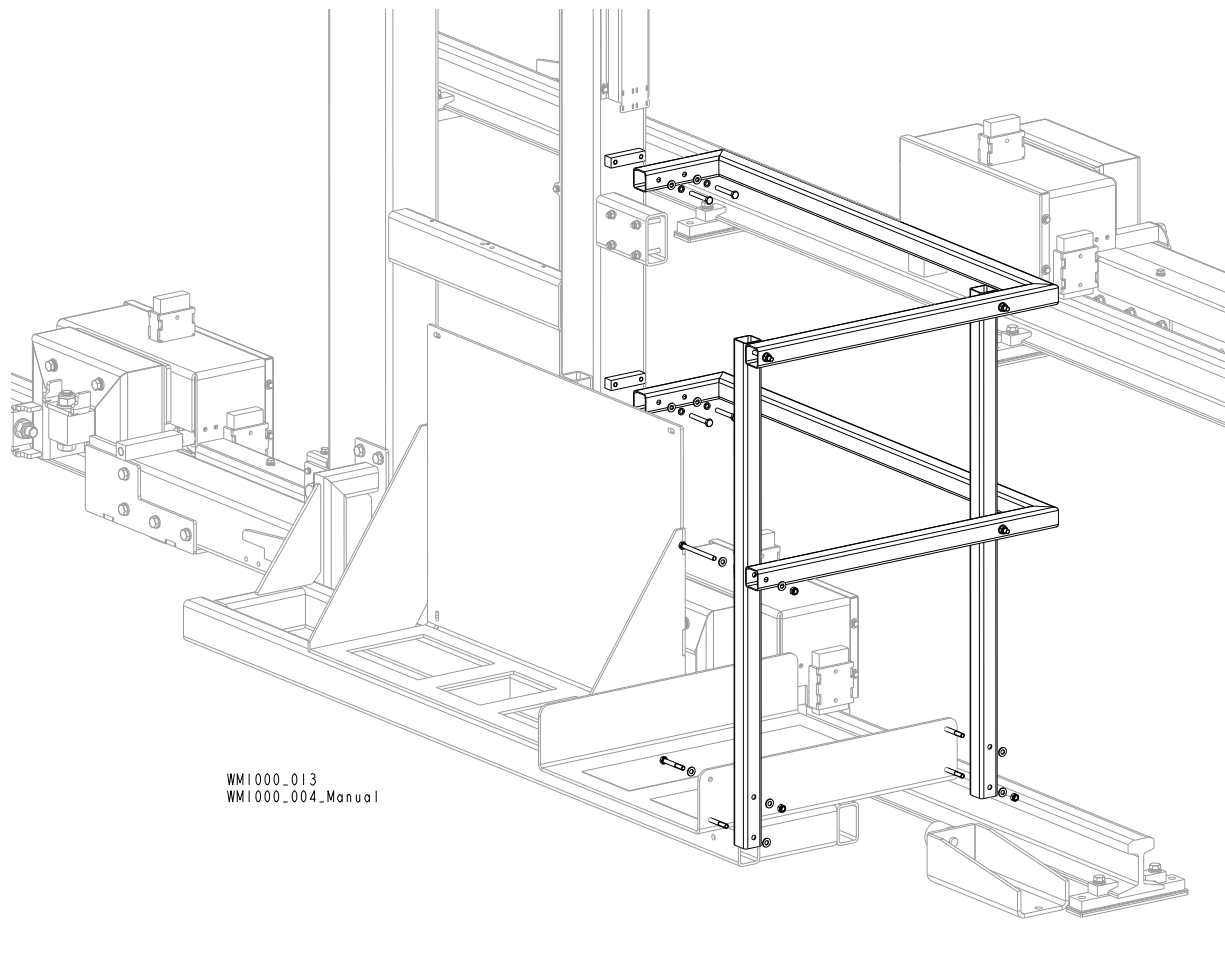

**FIG. 3-17**

3. Mount the control box on the bracket and then bolt these two connected components to the mast.

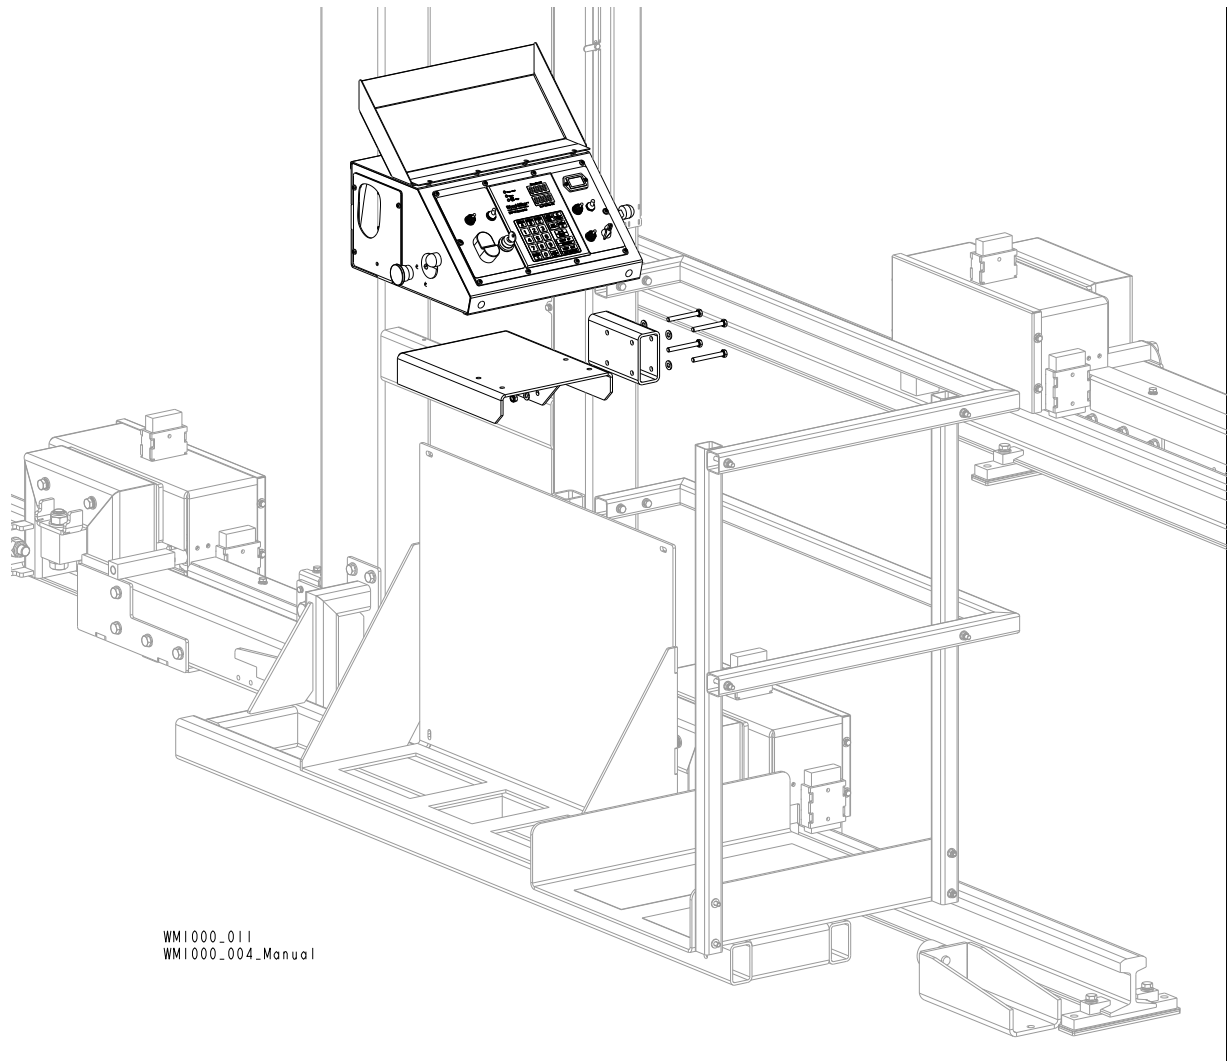See Figure 3-18.




WM1000\_011  
WM1000\_004.Manual

FIG. 3-18

### 3.7 Track Limit Switch Installation and Adjustment

1. Temporarily mount the limit switch to the track roller cover.

See Figure 3-19.

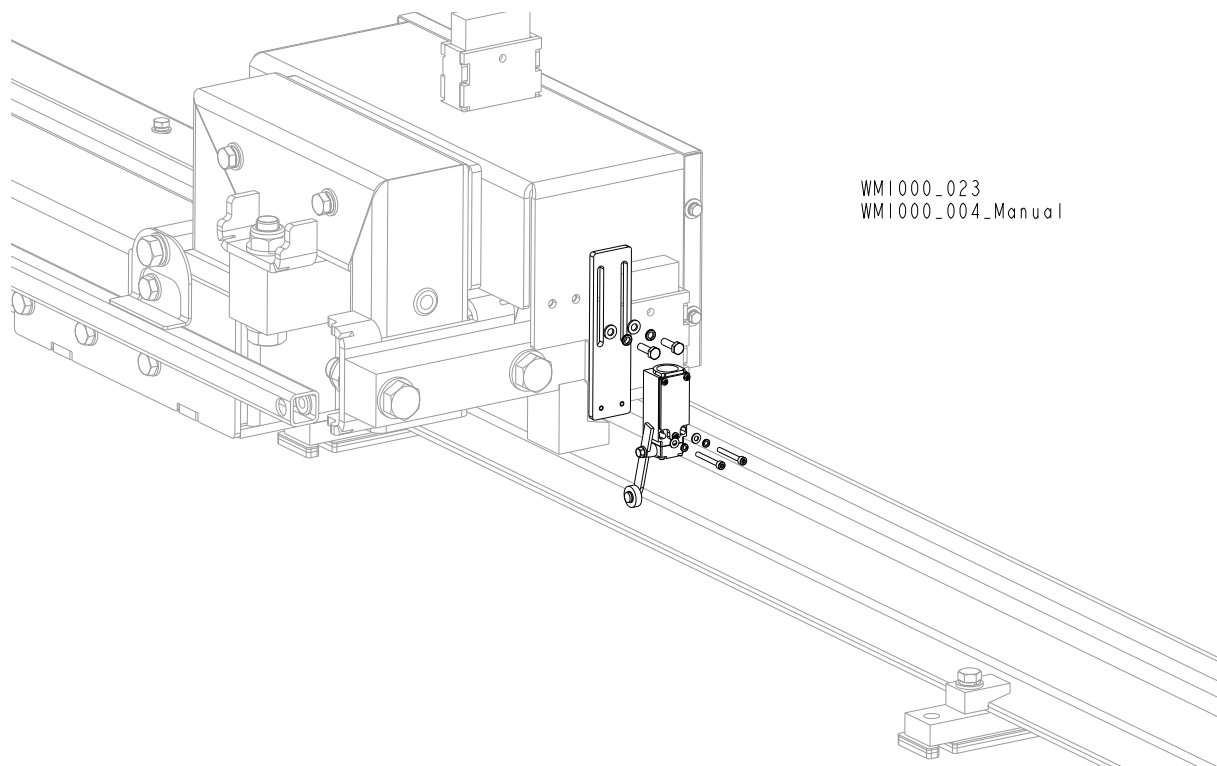

**FIG. 3-19**

2. Temporarily bolt the limit switch activator plate to the track rail.

See Figure 3-20.

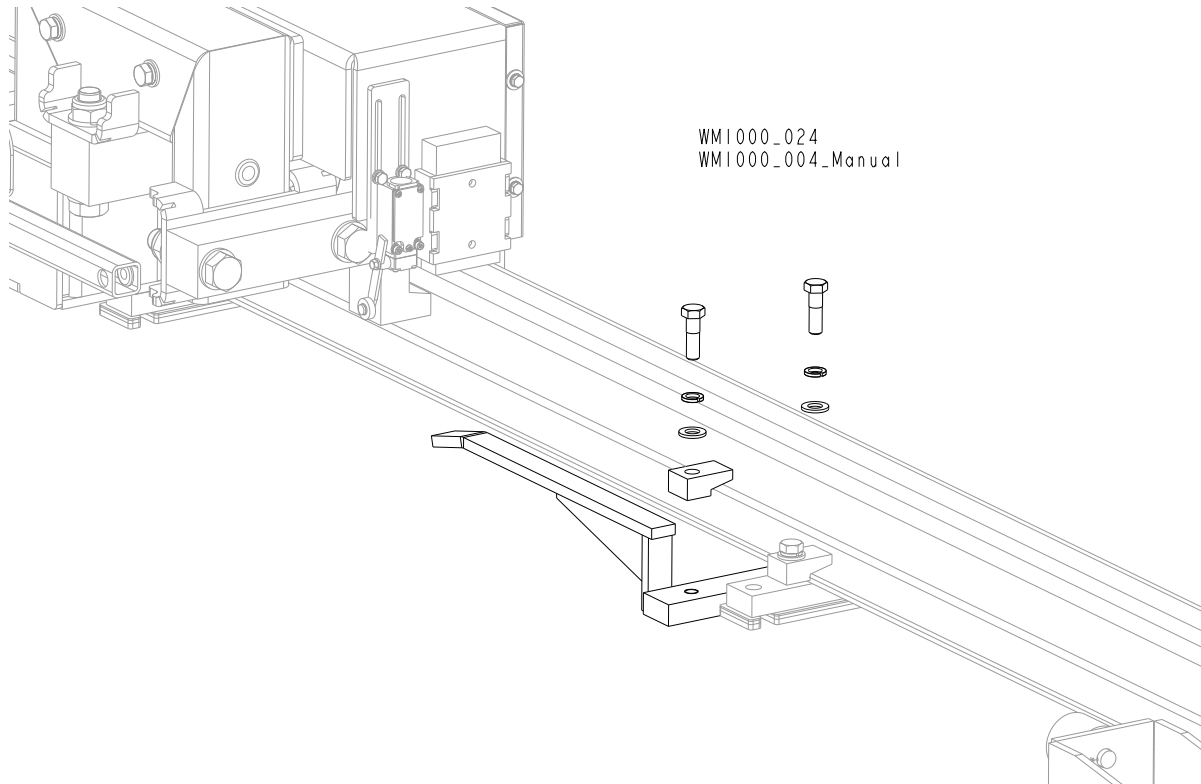


FIG. 3-20

3. Carefully move the saw head so that the limit switch is near the limit switch activator plate.
4. Adjust the limit switch so that the limit switch activator plate activates the limit switch.
5. Mount the limit switch activator plate on the track rail in such a place that the saw head can stop before hitting the bumper (approximately 1 meter from the bumper).

### 3.8 Electrical Connections

1. Make the electrical connections.
  - Have a qualified electrician install the power supply (according to EN 60204 Standard). The power supply must meet the specifications given in the table

below.

3-Phase Volts	Fuse Disconnect	Suggested Wire Size
EH30, EC30 22 KW 400 VAC 460 VAC	50 A	16 mm <sup>2</sup> length: up to 15 m 5 AWG length: up to 49 ft
EH40, EC40 30 KW 400 VAC 460 VAC	70 A	16 mm <sup>2</sup> length: up to 15 m 5 AWG length: up to 49 ft
EH50, EC50 37 KW 400 VAC 460 VAC	80 A	16 mm <sup>2</sup> length: up to 15 m 5 AWG length: up to 49 ft

**TABLE 3-1**



**DANGER!** It is recommended that a 30mA Ground Fault Interrupter (GFI) be used.

It is recommended that the power cables be routed so that they cannot be damaged by excessive kinking or bending. The cables must not be hauled over the floor. We suggest that the Festoon or similar fastening system be used (see the figure below).



## SECTION 4 SETUP & OPERATION

### 4.1 Sawmill Setup



**IMPORTANT!** Before starting to use the sawmill you have to meet the following conditions:

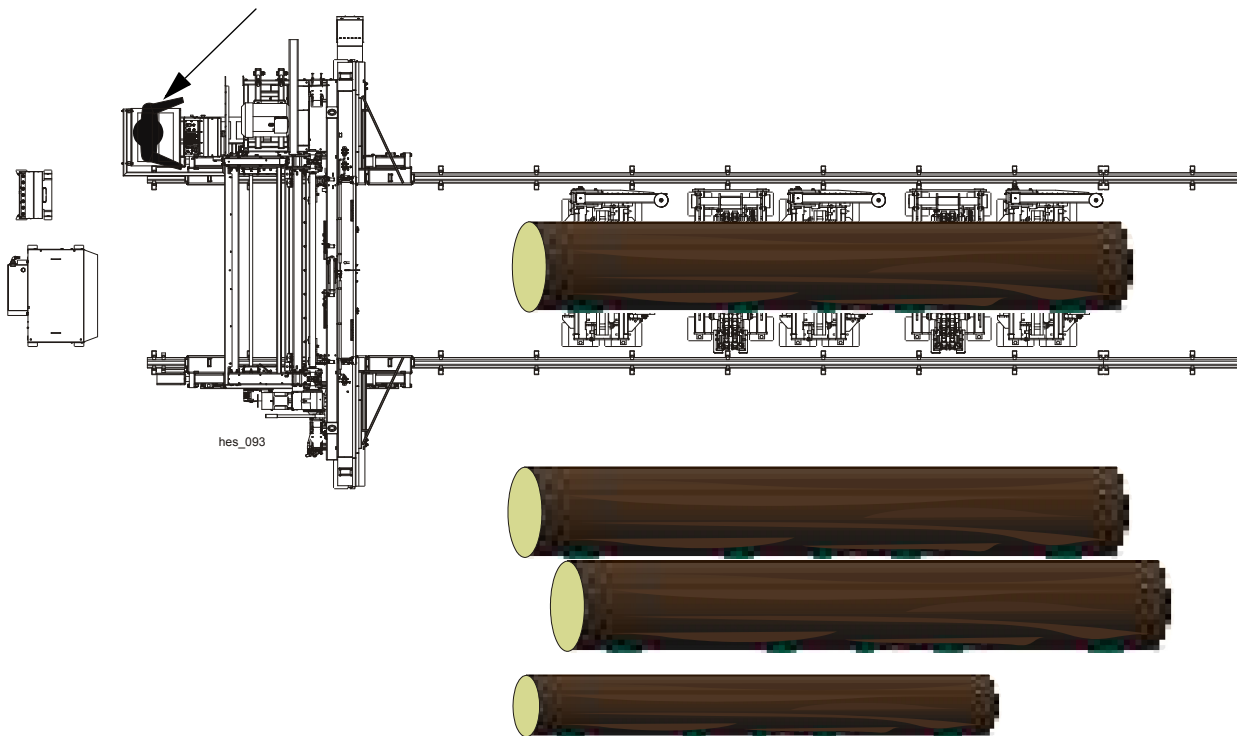
- Set up the machine on firm and level ground.
- The foundation must be within 19mm (3/4") from level for the installer to properly level the machine. If not, please consult with salesman or installation team so they can help you prepare for installation.
- The sawmill should be operated with a sawdust extraction system only.
- When it is raining/snowing, the electric sawmill can be operated under roof only.
- The sawmill should be operated in temperature range from -15°C do 40° (5°F to 104°F) only.
- The illumination at the operator's position should be at least 300lx<sup>1</sup>.

---

1.. The light source can not cause stroboscopic effect.

- The sawmill operator's position is shown below.

Operator's  
Position







- Have a qualified electrician install the power supply (according to EN 60204 Standard). The power supply must meet the specifications given in the table below.


3-Phase Volts	Fuse Disconnect	Suggested Wire Size
<b>EH30, EC30</b> 22 KW 400 VAC 460 VAC	50 A	16 mm <sup>2</sup> to 15m in length <b>5 AWG</b> to 49 ft. in length
<b>EH40, EC40</b> 30 KW 400 VAC 460 VAC	70 A	16 mm <sup>2</sup> to 15m in length <b>5 AWG</b> to 49 ft. in length
<b>EH50, EC50</b> 37 KW 400 VAC 460 VAC	80 A	16 mm <sup>2</sup> to 15m in length <b>5 AWG</b> to 49 ft. in length

TABLE 4-1

 **IMPORTANT!** When starting the machine for the first time, check that main motor rotation direction is as indicated by the arrow located on the motor body. If the rotation direction is incorrect, invert the phases in the phase inverter located in the power socket. Setting the phases in the phase inverter correctly will ensure correct rotation directions of all sawmill motors.

 **DANGER!** It is recommended that a 30mA Ground Fault Interrupter (GFI) be used.

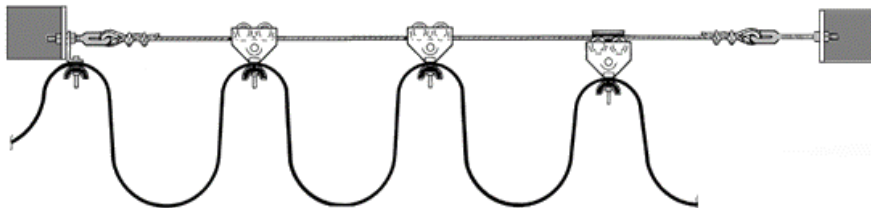It is recommended that the power cables be routed so that they can not be damaged by excessive kinking or bending. The cables must not be hauled over the floor. We suggest that the Festoon or similar fastening system be used (see the figure below).



Set up the sawmill on firm and level footing. Fasten the machine to the floor to prevent any movement. It is highly recommended that cement pads with 21mm (0.827") diameter anchor bolts be made under the track rails and the bed (if equipped). The cement pad should be rated to support 40 T/m<sup>2</sup> (8192 pound/foot).



**WARNING!** Fasten the sawmill to the floor before operating.

### EQUIPMENT SUPPORT

**Installer shall provide support for manufactured equipment, as follows:**


The foundation must be within 19mm (3/4") from level for the installer to properly level the machine. If not, please consult with salesman or installation team so they can help you prepare for installation.

Provide concrete slab with min. 3,000 psi design strength mix with equivalent of Type 1 Portland Cement, 1 inch coarse nominal aggregate, fine aggregate, potable water, 3% air entrained, and 4 inch x 4 inch #6/6 plain-steel welded wire fabric reinforcing placed at bottom one-third of slab. Place slab on prepared subgrade stripped of vegetation and with suitable, compacted drainage material as appropriate for geographic location and climate. Min. horizontal dimension shall be as required for anchoring of equipment support legs to concrete, using torque-controlled expansion anchor at each support leg.

**Option:** Provide 18 inch diameter post-hole foundations with min. 3,000 psi design strength, pre-manufactured concrete mix with potable water, mixed per concrete manufacturer's directions. Locate foundations to align with equipment support legs. Depth of foundation shall be min. 24 inches, or below frost depth as appropriate for geographical location and climate. Anchor each equipment support leg to each foundation using torque-controlled expansion anchors.

The machine can be lifted with a forklift or a winch only. The forklift must be rated for at least 4 T (8818 lb.). The sawmill head is equipped with lifting brackets. Attach the winch

hook to the brackets shown in the figure below..

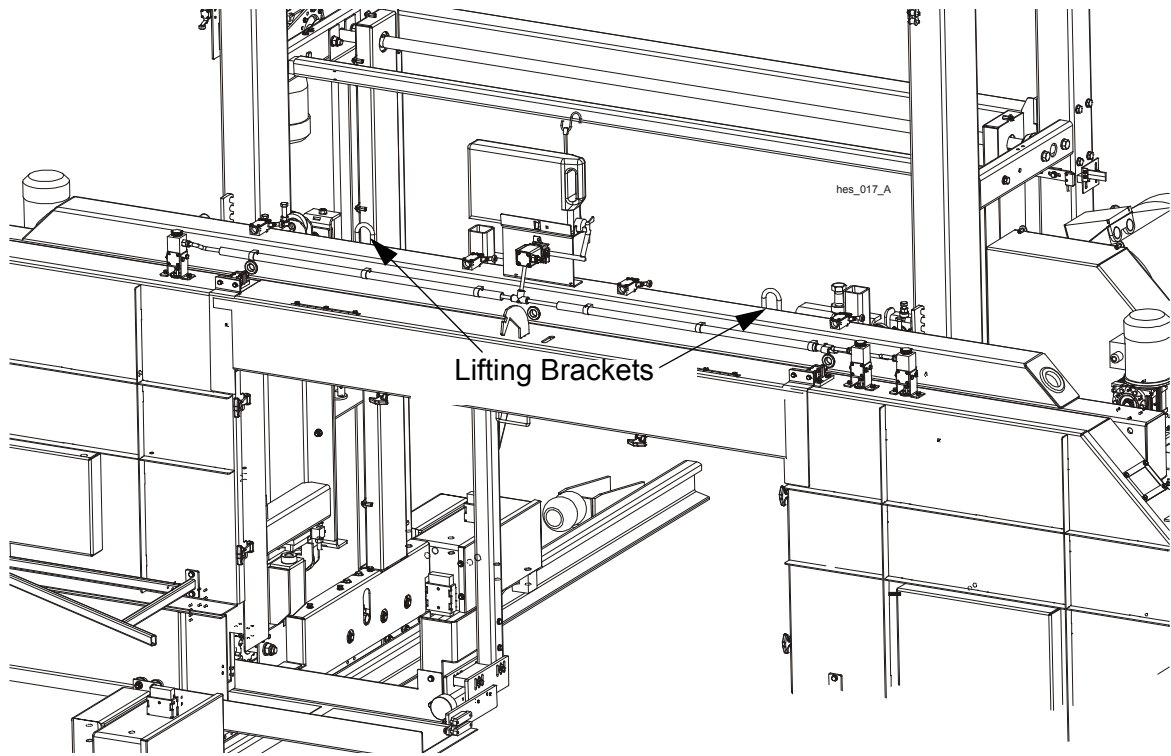

**FIG. 4-1**

## 4.2 Replacing the Blade



**DANGER!** Always shut off the sawmill motor before changing the blade. Failure to do so may result in serious injury.



**WARNING!** Always wear gloves and eye protection whenever handling a bandsaw blade. Changing blades is safest when done by one person! Keep all other persons away from work area when changing blades. Failure to do so may result in serious injury.

Move the right blade guide arm out.

Open the blade housing covers. Release the blade tension ([See Section 4.3](#)) until the wheel is pulled in and the blade is lying loose in the blade housing. Carefully remove the blade from the blade housing.

Install the blade so it is lying around the wheels. When installing the blade, make sure the teeth are pointing the correct direction. The teeth should be pointing toward the operator side of the sawmill when you are looking at the blade below the blade guides, as shown on the label located on the blade housing.

Position 2" wide blades on the wheels so the gullet is 5mm (0.196 ") out from the front edge of the wheel.

Close the blade housing. Next, use the blade tension handle to tension the blade correctly.



**CAUTION!** When adjusting the blade position, be extremely careful, because your fingers can get pinched.

### 4.3 Tensioning the Blade

See Figure 4-2.

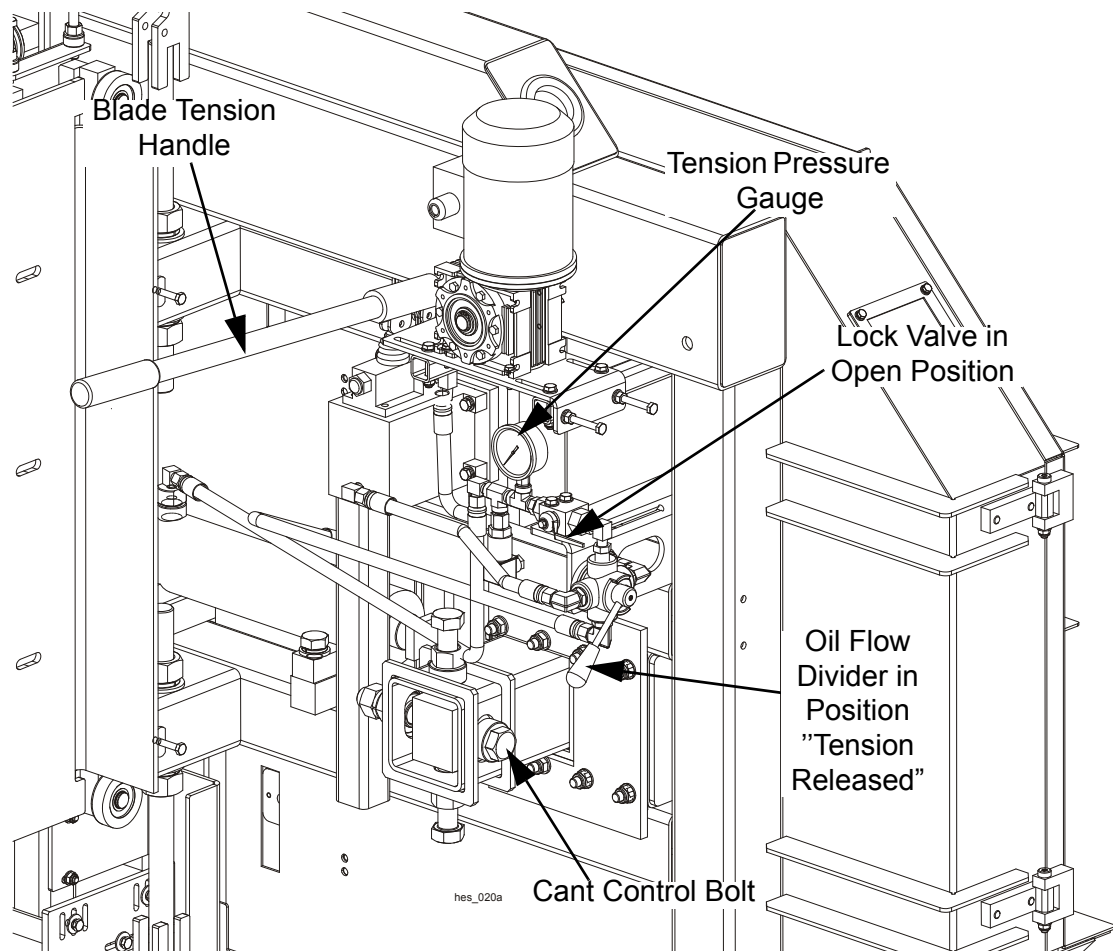


FIG. 4-2

The blade tension is adjusted with the blade tension handle and by setting properly the oil flow control valves shown in the figure above.

To release the tension, turn the lock valve right. Then turn the oil flow divider to the down position. Move the tension handle up and down to release the blade tension. Turn the lock valve left to the position "closed" and remove or install the blade.

To tension the blade, turn the lock valve left and set the oil flow divider in the up position. Moving the tension handle up and down, tension the blade until the tension pressure gauge indicates 50-60 bar (725 - 870 PSI) for 2" blade and 75-90 bar (1100-1300 PSI) for 3" blade. Turn the lock valve left to the position "closed" and read again the tension pressure on the gauge.

Check the blade tension occasionally when adjusting the cant control or while cutting. Also, ambient temperature changes can cause tension to change.

**IMPORTANT!** Loosen the blade when the machine is not in use. Tension the blade again before starting the motor.

The WM1000 sawmill is equipped with a safety switch that disengage the motor until the blade is properly tensioned (the motor is stopped also when the blade breaks).


#### 4.4 Tracking the Blade

1. Open the blade housing.
2. Turn the key switch to the "H" position (If machine is equipped with motor brake).



3. Carefully spin by hand one of the blade wheels until the blade positions itself on them.
4. Check if the blade is properly positioned on the blade wheels.

**See Figure 4-3.** Position 2" (50mm) wide blades on the wheels so the gullet is 5mm (0.196") out from the front edge of the wheel and 8 mm (0.314") in case of 3" (75mm) blade.

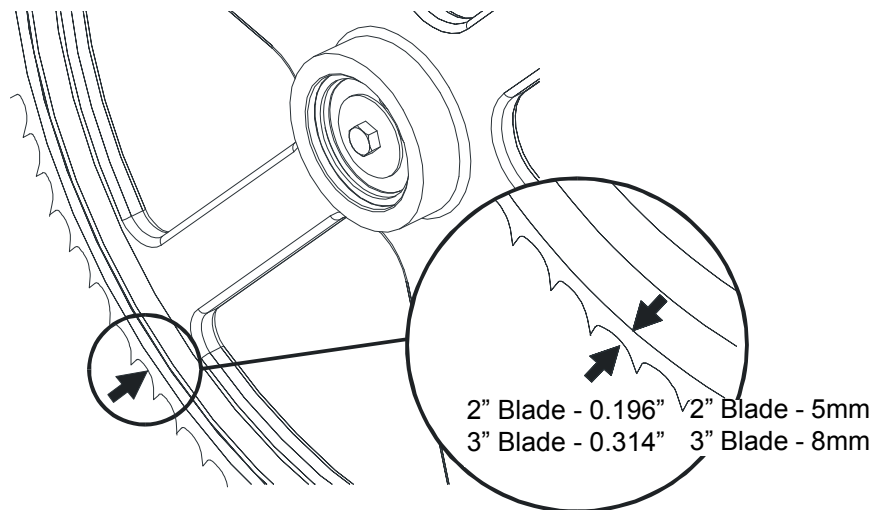

**FIG. 4-3**

5. Use the cant adjustment bolt, shown in **Figure 4-2**, to adjust when the blade travels on the blade wheels.

To move the blade out on the blade wheel, turn the cant adjustment bolt clockwise.

To move the blade in on the blade wheel, turn the bolt counterclockwise.

6. After making the cant adjustment, tension the blade properly and then re-check the cant adjustment.
7. Close the blade housing.



**DANGER!** Make sure all guards and covers are in place and secured before operating or towing the sawmill. Failure to do so may result in serious injury. Be sure the blade housing covers are in place and secured.

**DANGER!** After adjusting the blade wheels, always recheck the blade tracking.

## 4.5 Starting the Motor

See the appropriate manual supplied with your specific motor configuration for detailed starting and operating instructions.



**IMPORTANT!** For safe operation of the sawmill, one person is sufficient, however in case of manual collection of sawn material, at least two persons should be assigned to these activities in order not to exceed the manual lifting standard.



**CAUTION!** Before starting the sawmill, the operator must warn all persons who are nearby of the intention of starting the machine.



**IMPORTANT!** The sawmill should be operated only by a qualified person of age, being in good state of health confirmed by a medical certificate.

**IMPORTANT!** When starting the machine for the first time, check that the main motor rotation direction is as indicated by the arrow located on the motor body (fan guard). If the rotation direction is incorrect, invert the phases in the phase inverter in the power socket (electric box). Setting the phases in the phase inverter correctly will ensure correct rotation directions of all sawmill motors.



**CAUTION!** Make sure all guards and covers are in place and secured before operating. Failure to do so may result in serious injury. Be sure the blade housing covers are in place and secured.



**CAUTION!** Always wear eye, ear, respiration and foot protection when operating the machine. Secure all loose clothing and jewelry before operating the sawmill.

**CAUTION!** Before starting the sawmill, connect a sawdust extraction system to the sawdust chute and start the extraction system. [See Section 1.13](#) for the sawdust extractor specifications.

**CAUTION!** If at any time you need to immediately stop the blade motor, press the emergency stop button located on the control box.

Before starting the sawmill at a new location, at least once a year or after every repair have a qualified electrician (having appropriate measurement qualifications) check the insulation resistance and the electric shock protection of the electrical system.

The electric box should be protected against dust and moisture. Regularly disconnect the power supply and clean the inside of the electric box of dust, sawdust, etc. Do not operate or leave the sawmill with the electric box door open.




**CAUTION!** Hazardous voltage inside the electric box (even if disconnected with the main disconnect switch) and at the motor can cause shock, burns, or death. Always disconnect the power supply before servicing!




## 4.6 Hydraulic Control Operation

The hydraulic control levers become operational when the main switch located on the starter box is in the “1” position and the saw head is close enough to the front or rear end of the mill to activate the hydraulic limit switch.

The power supply wire must be attached to the power supply located under the hydraulic control box and the switch turned to position “1” (the white indicator light will come on).

 **DANGER!** It is recommended that a 30mA Ground Fault Interrupter (GFI) be used.

See Figure 4-4.

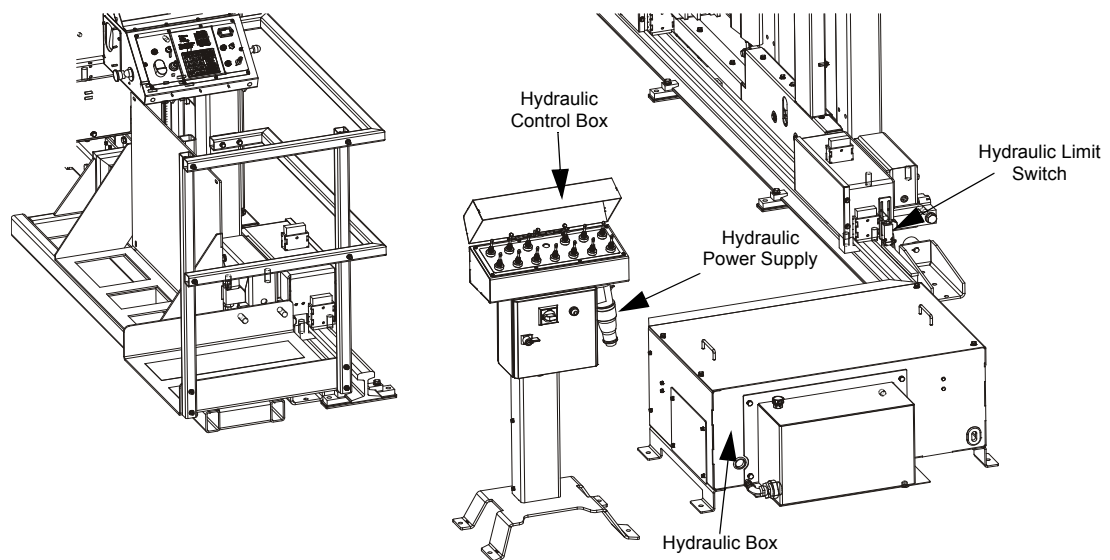

**FIG. 4-4**

The hydraulic pump turns on automatically by moving the control levers. After placing the control levers in the neutral position, the pump still works for 5 seconds. It prevents the hydraulic motor from frequently starting and overheating.

After performing all of the above steps, if the hydraulic system still is not working properly, you must make sure that the OFF switch on the starter box is in the position “1” and the voltage indicator is lit. Next, you must check to see whether the safety switch on the left side of the control box is turned on. Also, the motor rotation may need to be checked (the hydraulic pumps can run in one direction only). You can adjust the motor rotation with a screwdriver by adjusting the switch located on the left side of the electric box located on the hydraulic box.

See Figure 4-5. The hydraulic units have thirteen control levers to clamp, turn and level logs.

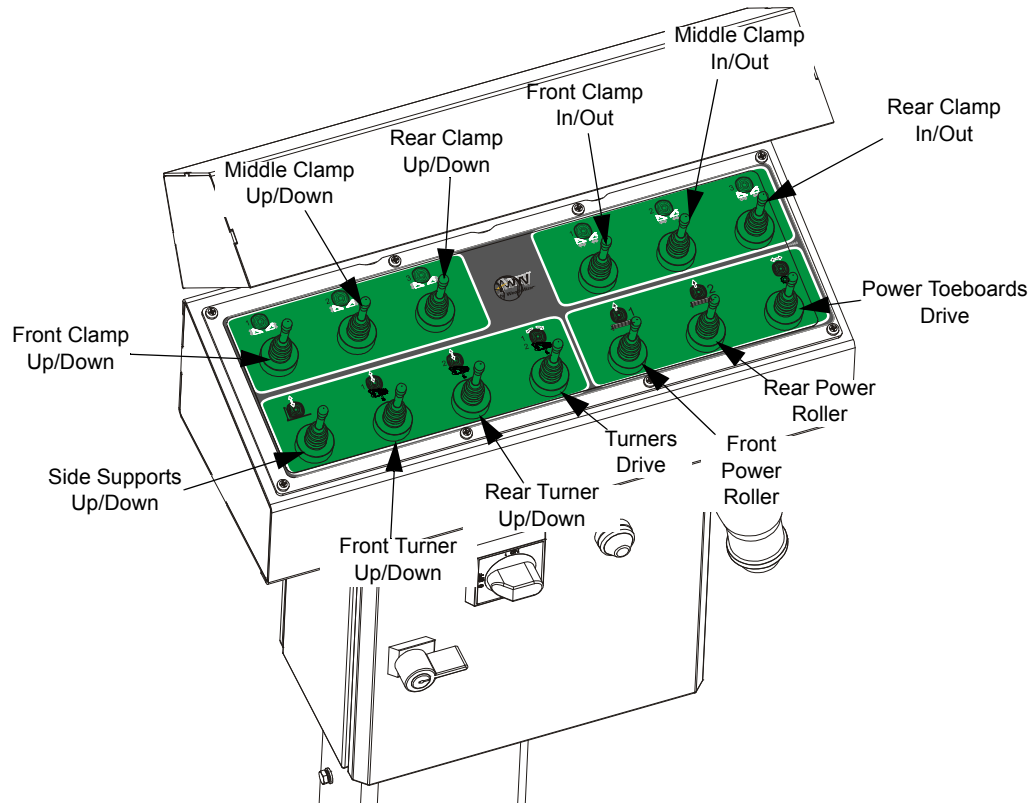


FIG. 4-5

Use the hydraulic control levers to get the mill ready to load a log.



**DANGER!** Keep all persons out of the path of moving equipment and logs when operating the sawmill or loading and turning logs. Failure to do so will result in serious injury.

1. Move the clamp out and down so it will not get in the way of logs being loaded onto the bed.



Using the clamp in/out lever, move the clamps out.



Using the clamp up/down lever, position the clamps about 10 cm above the bed level.

2. The front and rear power rollers should be below the bed level. Once a tapered log has been loaded, the front or rear end of the log may be lifted to parallel the heart of the log to the path of the blade.



The front power roller is raised by lifting the front power roller lever up. The rear toeboard

is raised by lifting the rear toeboard lever up. Once a flat has been made and the log is ready to be turned, push the appropriate power roller lever down to lower either toeboard until it falls below the bed level.

## 4.7 Loading, Turning And Clamping Logs

### To Load Logs

1. Move the saw head to the front end of the frame.



**CAUTION!** Before loading a log, be sure the cutting head is moved far enough forward so the log does not hit it. Failure to do so may result in machine damage.



**CAUTION!** Be sure the log clamp, turning arm and toeboards are adjusted out of the path of the log before loading a log onto the bed. Failure to do so may result in machine damage or cause misalignment.



**CAUTION!** Do not load a log heavier than 4000kg (8817 lb). Loading heavier logs may result in machine damage or cause misalignment.

1. Using the clamp in/out lever, move the clamps out.
2. Using the clamp up/down lever, position the clamps about 10 cm above the bed level. Mount the appropriate type of clamping jaws.

The WM1000 log clamps are equipped with three types of jaws. One set of jaws is for round logs and two sets (longer and shorter) of jaws are for cants.

See Figure 4-6.

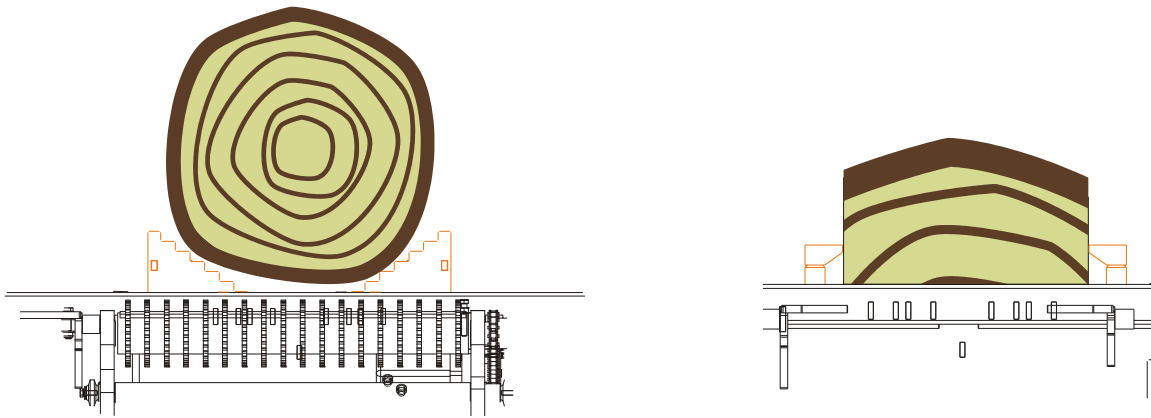


FIG. 4-6

3. Raise the side supports on the sawmill bed to prevent the log from falling off the side of the bed.
4. Load the log onto the sawmill bed using a crane or a forklift with lifting capacity of at least 4500 kg.
5. Using the clamp up/down lever, raise the clamp up to prevent the log from rolling of the bed.
6. Using the clamps and the power roller, position and secure the log on the sawmill bed.



**WARNING!** After loading the log onto the mill, raise the log clamp up to prevent the log from rolling of the bed.

### To Turn Logs

1. Raise the levers of both turners to engage the log turner arm. Let the arms raise until they touch the log. Then raise the turner drive lever to turn the log. Always use both turners to turn the log.
2. Spin the log against the side supports until it is turned the way you want it for cutting.
3. Using the clamps, secure the log on the sawmill bed.

### To Level A Tapered Log



Raise the appropriate lever to raise the front, middle or rear toeboard until the heart of the log measures the same distance from the bed rails at each end of the log. Use the power roller drive to position the log on the bed.

## 4.8 Up/Down Operation


1. Install a blade and check for correct blade tension. ([See Section 2.4.](#))
2. Set the cutting head at the desired height. (The blade height scale shows the height of the blade above the track rails, bed rail or ground depending on the sawmill installation.)



**See Figure 4-7.** The up/down switch is located on the right side of the control panel. Push the switch up to raise the saw head; push the switch down to lower the saw head.



Hold the switch in position until the saw head reaches the desired height and then release.

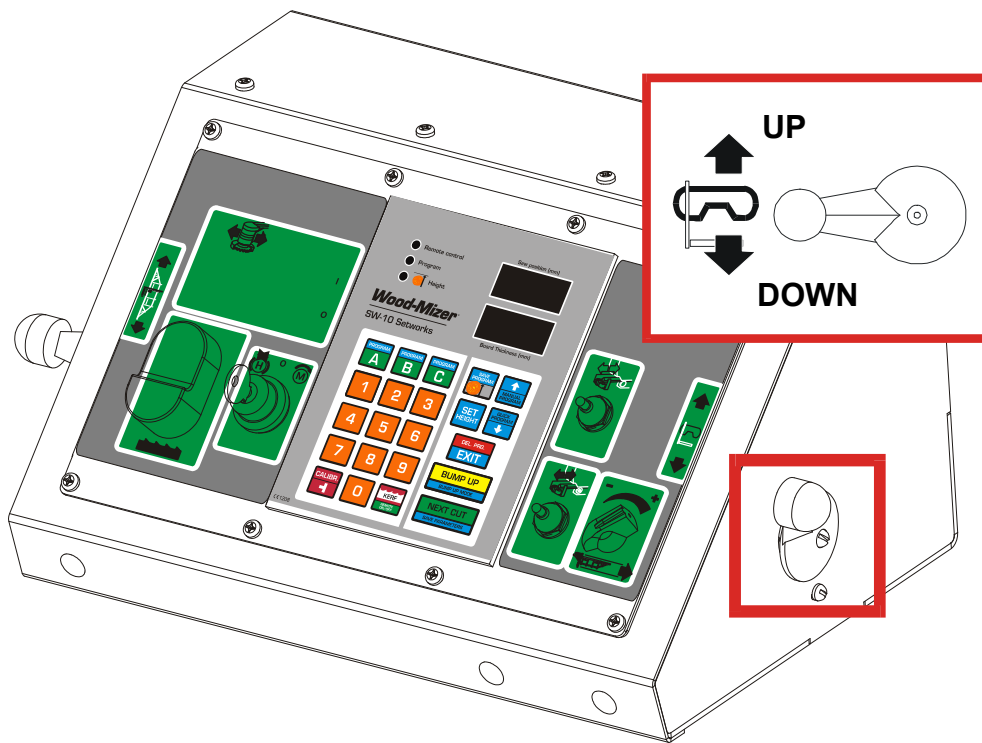

**FIG. 4-7**

The up/down switch is designed to return to the neutral position when released. If the switch remains engaged, manually move it to the neutral position. Repair the switch immediately.

## 4.9 Blade Guides Setting

1. Look down the length of the log to see its maximum width. The blade guides should be adjusted to clear the widest section of the log by about 25mm (1").
2. Use the blade guide toggle switches on the control panel to adjust the blade guides as necessary.



See Figure 4-8.

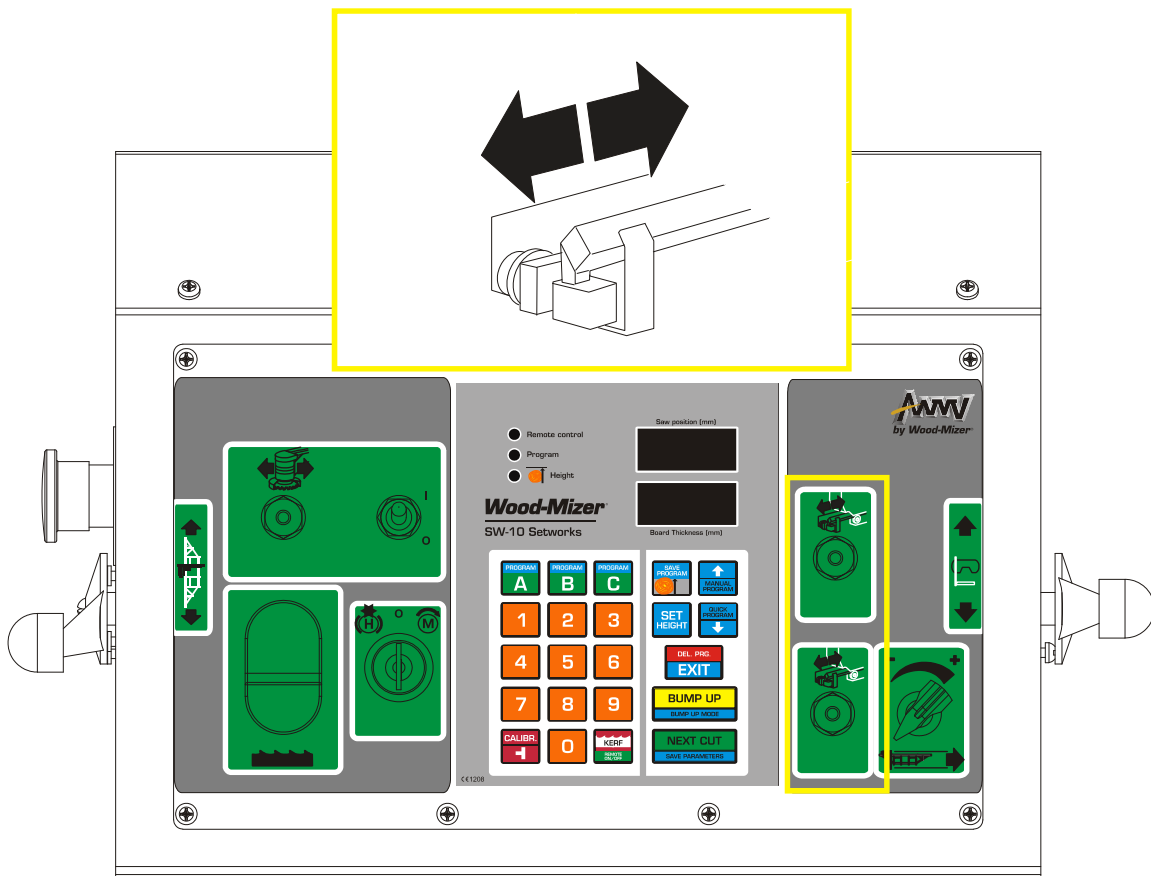


FIG. 4-8

## 4.10 Power Feed Operation

See Figure 4-9. The power feed system moves the saw head forward and backward by using two switches on the control panel.

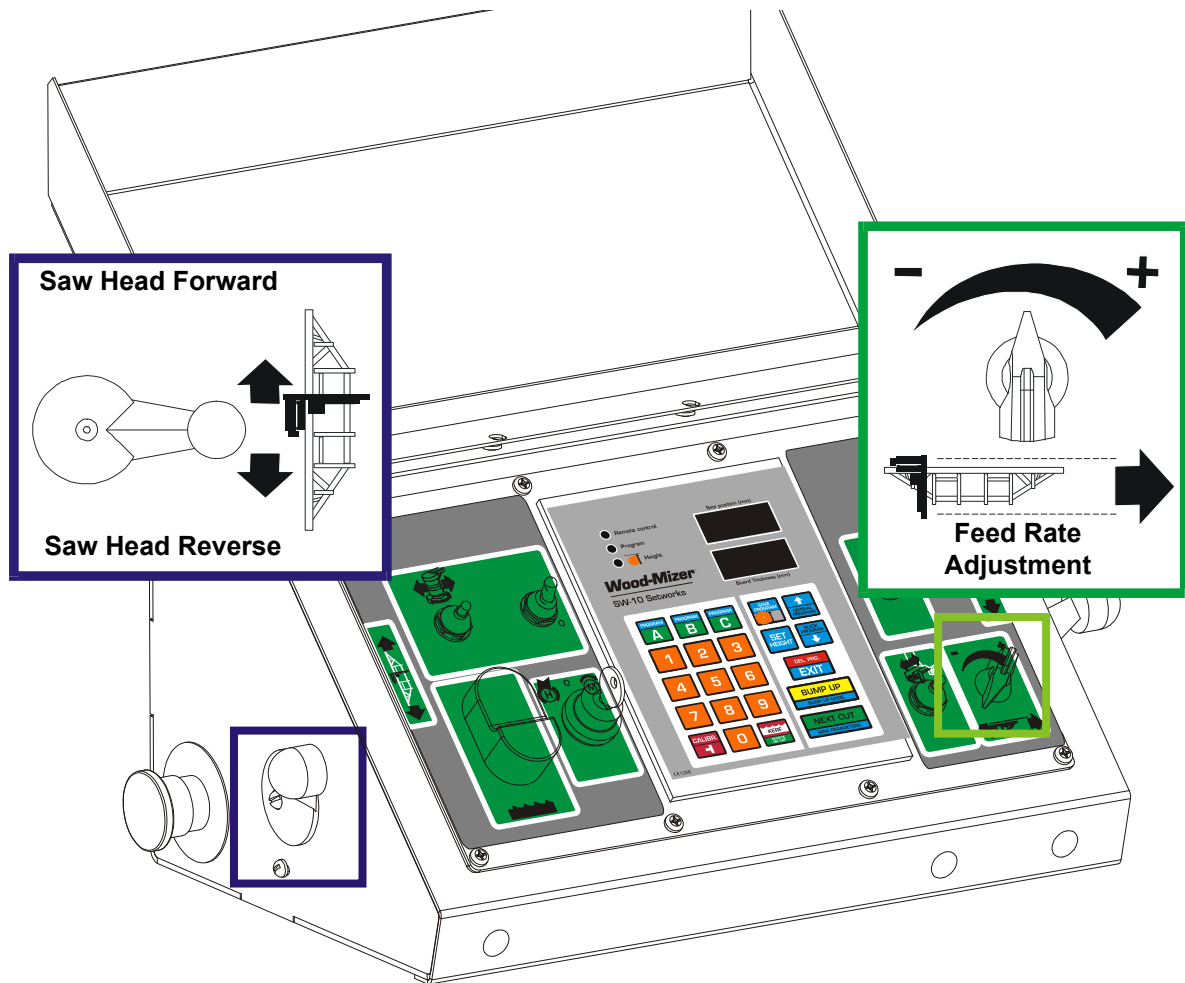


FIG. 4-9

### Saw Head Feed Rate



The saw head feed rate switch controls the speed at which the saw head travels forward. Turn the switch clockwise to increase the speed; turn it counterclockwise to reduce the speed.

### Saw Head Forward and Reverse



The power feed switch controls the direction in which the saw head travels. Turn the switch upward to move the saw head forward; turn it down to move the saw head backward.



**NOTE:** Always disengage the blade before returning the saw head and raise the saw head slightly to make sure it clears the log.

The middle position (shown in the figure above) is the neutral position. The power feed switch is designed to return to the neutral position when released. If the switch remains engaged, manually move it to the neutral position. Repair the switch. ([See Section Maintenance.](#))



**WARNING!** Be sure the power feed switch is in the neutral position before turning the key switch to the ON position. This prevents accidental saw head movement which may cause serious injury or death.

### Feed Rate

**HINT:** To get a straight cut in the first part of the log, the blade should be fed into the log at a slow speed. This will stop the blade from flexing and dipping up or down. Turn the saw head feed rate switch to a slow speed until the whole width of the blade has entered the cut. Then use the saw head feed rate switch to increase the feed rate as desired. Maximum feed rate varies with width and hardness of the wood. Over-feeding results in motor and blade wear, and also produces a wavy cut.



Then use the saw head feed rate switch to increase the feed rate as desired. Maximum feed rate varies with width and hardness of the wood. Over-feeding results in motor and blade wear, and also produces a wavy cut.



Stop the saw head at the end of the cut by turning the saw head feed rate switch counterclockwise until the saw head stops moving.

- Using the STOP button, disengage the blade. This will stop the blade. Remove the board from the log.



**CAUTION!** Be sure to stop the blade when returning the saw head.

- To return the saw head to the front of the sawmill, turn the power feed switch down. The power feed motor will bypass the saw head feed rate switch and the saw head will automatically return at the fastest speed available. **Always disengage the blade before returning the saw head for the next cut.**



- Make sure that the blade does not catch on the end of the log. Raise the saw head slightly to make sure the blade clears the log when returned. **HINT:** Try to stop the blade while the heel of the blade is still on the log. Then bring the saw head back without adjusting the blade up. This lets you keep the blade at the current height so you can make the next blade height setting more quickly.



## 4.11 Cutting the Log

The following steps guide you through normal operation of the Wood-Mizer sawmill.

1. Once the log is placed where you want it and clamped firmly, position the blade close to the end of the log.
2. Use the blade height scale or SW-10 Setworks to determine where to make your first cut. ([See Section 4.12.](#)) Set the blade to the desired height with the up/down switch. Make sure that the blade will clear the side supports and the clamps.
3. Adjust the blade guides to clear the widest section of the log using the blade guide toggle switches.



4. Make sure all guards and covers are in place. Engage the blade. To do this, turn the key switch to the "M" position and press the START button.

5. To prevent sap buildup on the blade, open the oil tank valve. ([See Section 2.19.](#))
6. Feed the blade into the log slowly. ([See Section 4.10.](#)) Once the blade completely enters the log, increase the feed rate as desired. Always try to cut at the fastest speed you can while keeping an accurate cut. Cutting too slowly will waste blade life and lower production!
7. As you get to the end of the log, slow down the feed rate. When the teeth exit the end of the log, turn the power feed switch to the neutral position. Then disengage the blade using the STOP button. Remove the board that you have just cut from the log.
8. Use the power feed switch to move the saw head to the front of the sawmill. Always disengage the blade before returning the saw head for the next cut.
9. Repeat until the first side of the log is cut as desired. Set aside the usable flitches (boards with bark on one or both sides). You can edge them on the sawmill later.
10. Lower the toe boards if they were used (optional equipment). Release the clamps or carefully remove the wedges and turn the log 90 or 180 degrees. Using the wedges or the toeboards, level the log until the heart of it is parallel to the bed/ground.
11. Repeat the steps used to cut the first side of the log until the log is square. Cut boards from the remaining cant by adjusting the blade height for the thickness of boards that you want.

**Example:** Remember that the blade cuts a 1/16-1/8" (1.5-3.0 mm) wide kerf. If you want to get 1" (25 mm) thick boards, lower the saw head 1 1/16 - 1 1/8" (27-29 mm) for each board. If SW-10 Setworks is used, the kerf value is included automatically. See *SW-10 Setworks Operator's Manual*.

## 4.12 Blade Height Scale

See Figure 4-10. The blade height scale is attached to the saw head frame. It includes:

- a blade height indicator
- a metric/inch scale

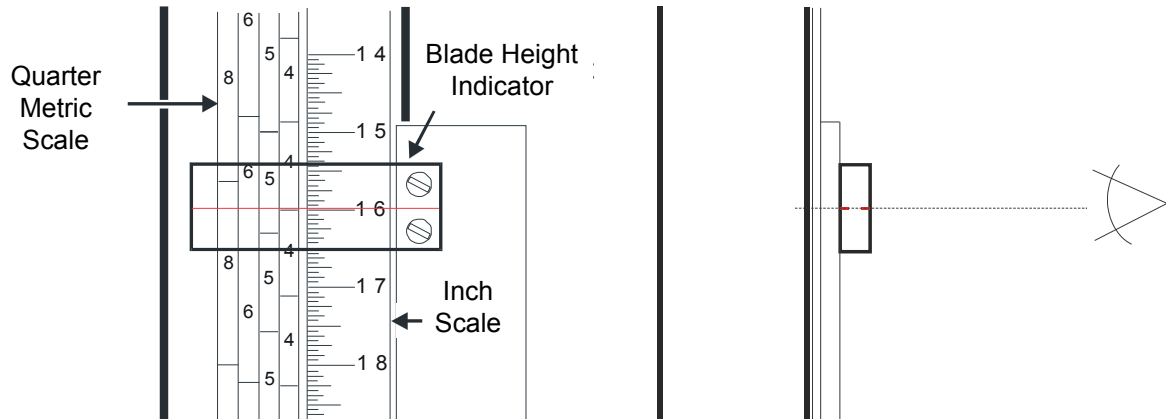


FIG. 4-10

### Blade Height Indicator

The blade height indicator has two horizontal, red lines on both sides. Readings should be taken with eyes level with the indicator, when the two red lines are in line. This will allow to avoid the parallax error (different scale readings depending on the angle of vision).

### Metric/Inch Scale

The horizontal red line on the blade height indicator shows how many inches the bottom of the blade is above the sawmill bed. If you know the height of your blade at each cut, you can determine the thickness of lumber you are sawing.

**Example:** You want to cut 1" (25mm) random width boards from a log. Position the blade for the first cut. Move the saw head to an even measurement on the scale. Make a trim cut. Return the saw head for the second cut and lower it 1 1/8" (28 mm) below the original measurement. (The extra 1/8" (3 mm) allows for saw kerf and shrinkage of the lumber.)

The yellow area on the scale identifies where the blade could encounter a side support or a log clamp (if equipped). Check that these items are below the blade level before sawing.

## Quarter Scale

**See Table 4-1** Two quarter scales are provided with four sets of marks. Each set represents a specific lumber thickness. Saw kerf and shrinkage allowance are included, but actual board thickness will vary slightly depending on blade thickness and tooth set.

To choose which scale to use, determine what finished thickness you want to end up with. The Grade Hardwood Quarter Scale provides thicker finished boards usually required by commercial buyers. The Standard Quarter Scale allows for kerf and shrinkage of finished boards suitable for most custom applications. Always check with your customer before you saw to determine what actual finished thickness is required.

Standard Quarter Scale		Grade Hardwood Quarter Scale	
Scale	Board Thickness	Scale	Board Thickness
4/4	1" (25 mm)	4/4	1 1/8" (29 mm)
5/4	1 1/4" (32 mm)	5/4	1 3/8" (35 mm)
6/4	1 1/2" (38 mm)	6/4	1 5/8" (41 mm)
8/4	2" (51 mm)	8/4	2 1/8" (54 mm)

**TABLE 4-1**

To use the quarter scale, look at the blade height indicator. Line up the horizontal red line on the indicator with the nearest mark on the scale you want to use. Make a trim cut. When you return the saw head for a second cut, lower the saw head to the next mark on the scale. This mark shows where the blade should be positioned to cut a certain thickness of lumber, without having to measure on the inch scale.

**Example:** You want to cut 1" (25 mm) (4/4) random width boards from a log. Position the blade for the first cut. Adjust the quarter scale so a 4/4 mark is aligned with the red line on the indicator. Make a trim cut. Return the saw head for the second cut. Now, instead of having to measure down 1 1/8" (29 mm) on the inch scale, you can simply lower the blade so the indicator is aligned with the next 4/4 mark on the quarter scale. Turn the log 90 degrees and repeat.

### 4.13 Lube System Operation

See Figure 4-11. The Lube System keeps the blade and the wheels clean and cools them. The coolant (ACP-1 oil) flows from a 5-liter tank through hoses to both sides of the blade and surfaces of the wheels. Drip feed lubricators located on the saw head control the amount of oil flow.

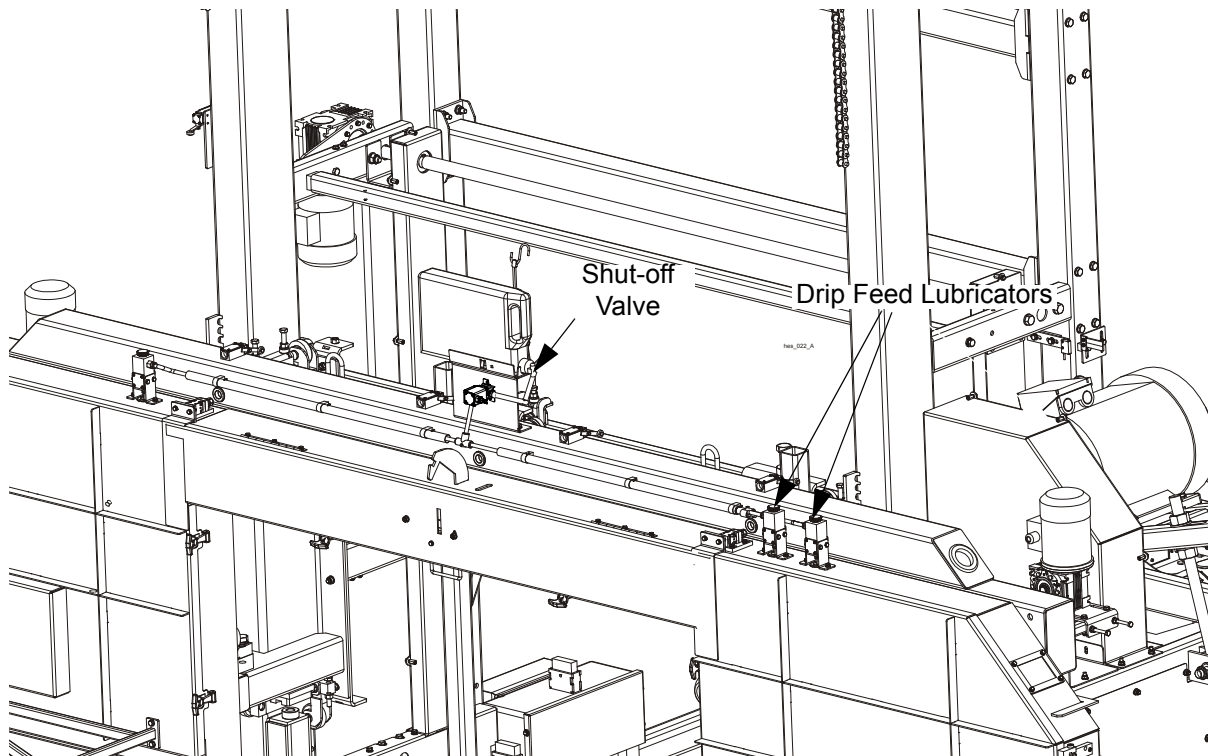


FIG. 4-11

Use just as much coolant as it is necessary to keep the blade clean. Usually, it is sufficient to set the drip feed lubricators so that one drop flows every 3 seconds.



**WARNING!** Never use flammable fuels or liquids! If these types of liquids are necessary to clean the blade, remove it and clean with a rag. Failure to do so may result in serious injury or death.

Before removing the blade, start the motor with the START button. Let the blade spin with oil running on it for about 15 seconds. This will clean the blade of sap buildup. Wipe the blade dry with a rag before storing or sharpening.

If you are sawing in temperatures below  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ), remove the oil tank from the sawmill when done sawing and store it in a warm place. Blow any remaining oil from the lube hose.

## SECTION 5 MAINTENANCE

This section lists the maintenance procedures that need to be performed.

The Short Interval Maintenance Schedule lists procedures that need to be performed every 4, 8 or 25 hours. The Maintenance Log lists procedures that need to be performed every 50, 100, 200, or 1000 hours. Keep track of machine maintenance by filling in the machine hours and the date you perform each procedure.



**This symbol** identifies the interval (hours of operation) at which each maintenance procedure should be performed.

### 5.1 Wear Life

**See Table 5-1.** This chart lists estimated life expectancy of common replacement parts if proper maintenance and operation procedures are followed. Due to the many variables which exist during sawmill operation, actual part life may vary significantly. This information is provided so that you may plan ahead in ordering replacement parts.

Part Description	Estimated Life
Up/Down Motor	2000 hours
Up/Down Drum Switch	1000 hours
Blade Guide Blocks	200 hours
Power Feed Drum Switch	1200 hours
Drive Belt	1250 hours
Power Feed Motor	1500 hours

**TABLE 5-1**

## 5.2 Blade Guides

1. Check the rollers for performance and wear every blade change. Make sure the rollers are clean and spinning freely. If not, replace them.

### Steel Guide Blocks

2. Inspect the blocks for damage or wear every 100 hours of operation.

As the blocks wear, the block surfaces that contact the blade will wear more than the rest of the block. If you have access to appropriate equipment, you can grind or mill the blocks to a new flat surface and reuse them. Otherwise, it is necessary to replace the block. It is recommended you develop a routine schedule for replacing the blade guide blocks based on your sawing conditions and experience.

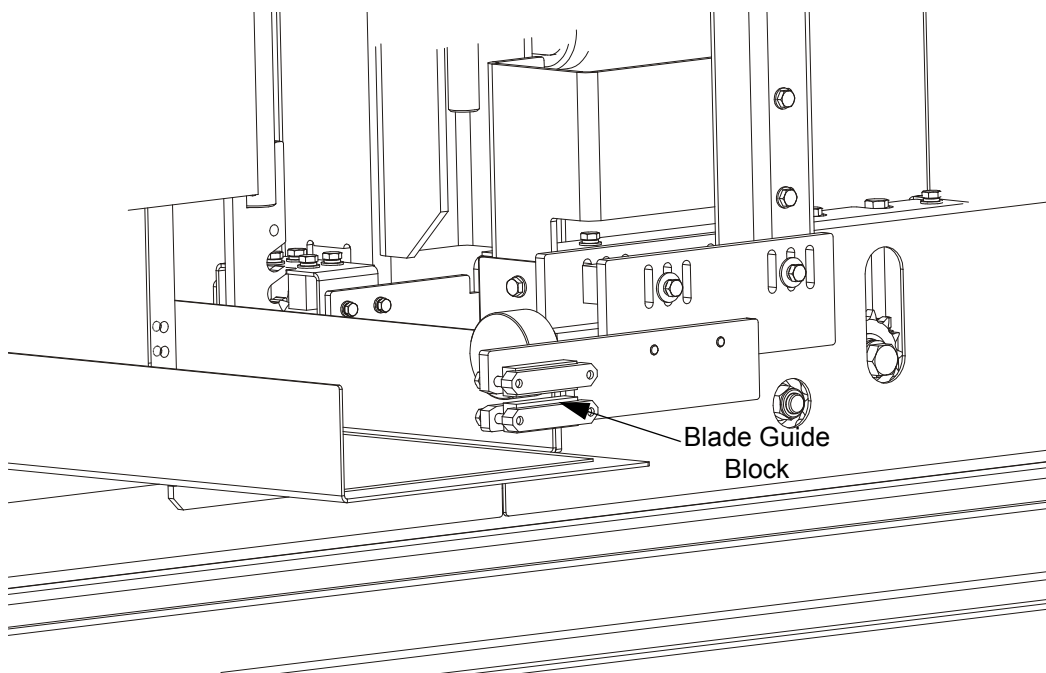


FIG. 5-1

3. Check that the blocks are properly spaced from the bottom of the blade every 25 hours of operation. The blocks should be adjusted 17-18mm (0,67 - 0,71") from the blade. [See Section: Blade Guides.](#)

25



**IMPORTANT!** The blocks should be parallel to the blade. Check the spacing between the disks and the blade on each side of the disks to ensure they are parallel. Inspect the blade guide assemblies for proper alignment every time you change the blade. [See Section: Blade Guides](#) for blade guide adjustment instructions.

A/R



**WARNING!** Blade guide alignment is essential for optimal cutting performance, blade life and safety. Failure to check and maintain proper blade guide alignment will result in stress cracks forming in the blade.

These cracks will lead to premature blade breakage. If the blade breaks during operation and the blade has multiple stress cracks, the blade could shatter into several pieces and escape from the protective guards of the sawmill. Small blade pieces projected into the area around the sawmill creates a safety hazard for the operator and any bystanders surrounding the mill.




**WARNING!** DO NOT use blades with stress cracks. Blades with stress cracks can shatter causing bodily injury and/or machine damage.

### 5.3 Sawdust Removal

1. Remove the excess sawdust from the blade wheel housings, sawdust chute and blade guides every blade change.
2. Remove all sawdust and debris from the inside of the track rollers housing.

25

3. Remove all sawdust from the surfaces of the mast tubes marked in the figure below.

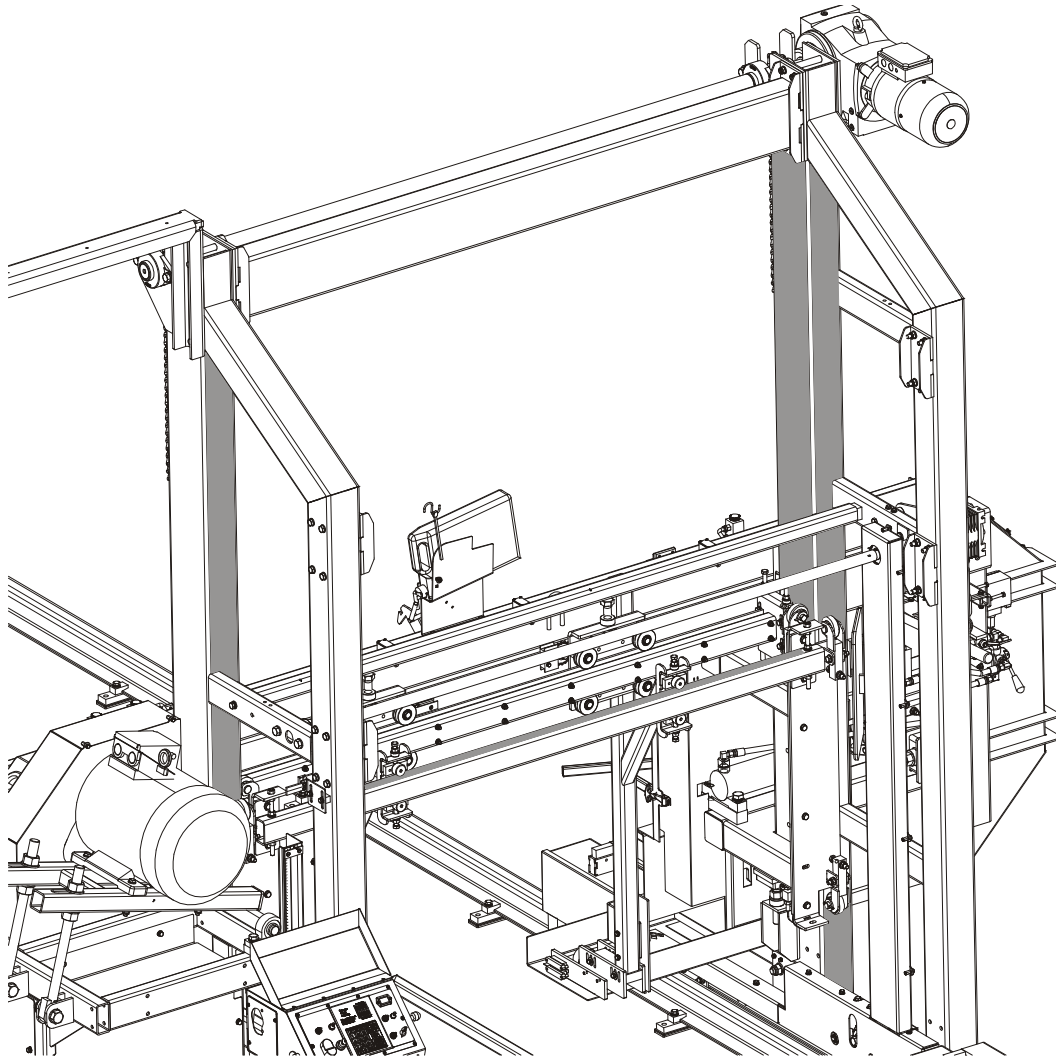**FIG. 5-2**

## 5.4 Saw head Track, Wiper & Scrapers

Properly maintaining the sawmill saw head track is critical in preventing corrosion that can cause pitting and scaling on the rail surfaces. Pitted and scaled surfaces can, in turn, cause rough cuts or jerky power feed movement.

1. Clean the track rails to remove any sawdust and sap buildup every eight hours of operation.

8

Use a light-grade sandpaper or an emery cloth to sand off any rust or other adhering particles from the rails.

Lubricate the rails by wiping them with Dexron III ATF transmission fluid, 10W30 motor oil, or 3-in-1 turbine oil. Oil lubrication will help protect the rails from corrosive elements such as acid rain and/or



moisture from nearby bodies of saltwater (if applicable). This lubrication is essential to maintain the integrity of the track rails and track rollers and to achieve long service life.

2. Remove sawdust from the track roller housings.

25

Remove the track roller housing covers and brush any sawdust buildup from the housings.

3. Check the track and the feed roller scrapers as needed. Make sure the scrapers fit firmly against the rail/roller. Replace the worn scrapers.


4. Check the blade wheel scrapers and felt wipers every 100 hours of operation.

100




**IMPORTANT!** Always remember to turn on the oil flow. It is not allowed to cut without oiling the blade.

See Figure 5-3.

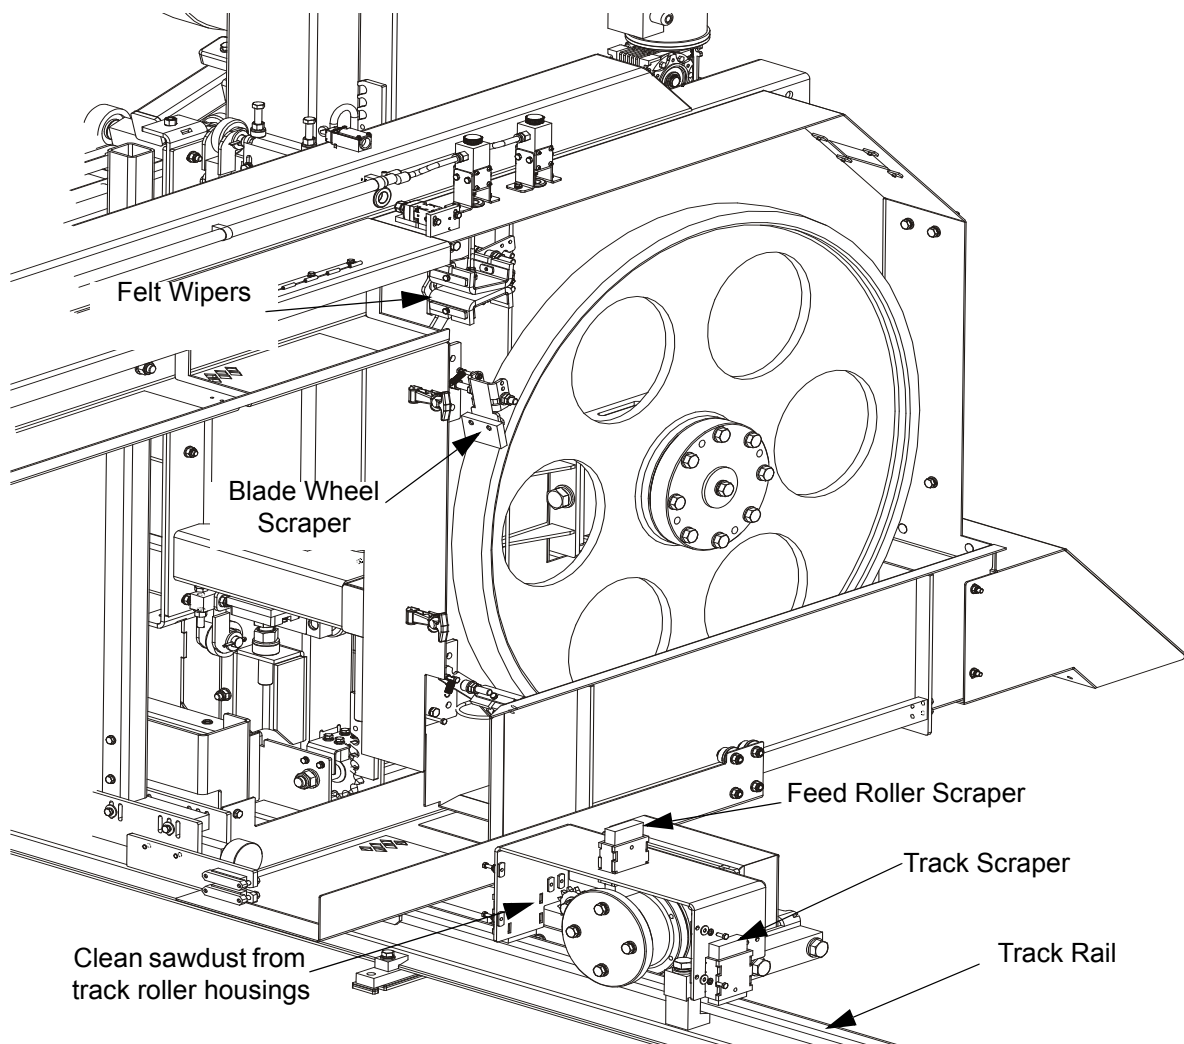

**FIG. 5-3**

 
## 5.5 Vertical Mast Rails

-  Clean and lubricate the vertical mast rails every 50 hours of operation. Clean with solvent and remove any rust with a light-grade sand paper or emery cloth. Lubricate the mast with motor oil or automatic transmission fluid (ATF).



**CAUTION!** Never use grease on the mast rails as it will collect sawdust.

## 5.6 Drum Switches

-  Lubricate the up/down and power feed drum switch contacts inside the control panel every fifty hours of operation. Use only contact grease supplied by Wood-Mizer. Remove the control panel cover. Use a cotton swab to apply grease to the switch contact ends.



 
**WARNING!** Drum switch grease contains Petroleum Hydrocarbon Lubricant. Eye and skin irritant. If introduced into eyes, flush with water for at least 15 minutes. If film or irritation persists, seek medical attention. Wash skin with soap and water. If ingested, do not induce vomiting - contact a physician. KEEP OUT OF THE REACH OF CHILDREN.

## 5.7 Miscellaneous

-  1. Oil all chains with Dexron III ATF every fifty hours of operation.



**CAUTION!** Do not use chain lube. It causes sawdust buildup in chain links.

-  2. Lubricate the drive blade wheel shaft with a NLGI No. 2 grade lithium grease. Apply grease to the grease fitting shown below.

See Figure 5-4.

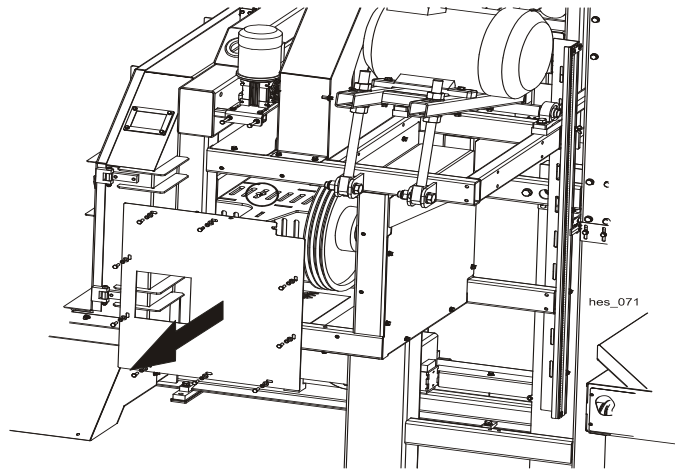


FIG. 5-4

3. Check the mill alignment every 100 hours of operation.
4. Make sure all safety warning decals are readable. Remove sawdust and dirt. Replace any damaged or unreadable decals immediately. Order decals from your Customer Service Representative.

## 5.8 Drive Belt Adjustment



**DANGER!** Never adjust the drive belts while the motor is running. Failure to do so may result in serious injury.



Periodically check the drive belt for wear. Replace any damaged or worn belts as needed.

**See Figure 5-5.** Adjust the drive belt tension using the nuts on the bolts supporting the motor weldment. To tighten the drive belt, loosen the upper nuts and tighten the lower nuts. To loosen the drive belt, first loosen the lower bolts and then tighten the upper bolts. The drive belt deflection in the place shown

# 5 Maintenance

## Drive Belt Adjustment

below should be 4mm (0,15") with a 15kg (33lb, 150N) force.


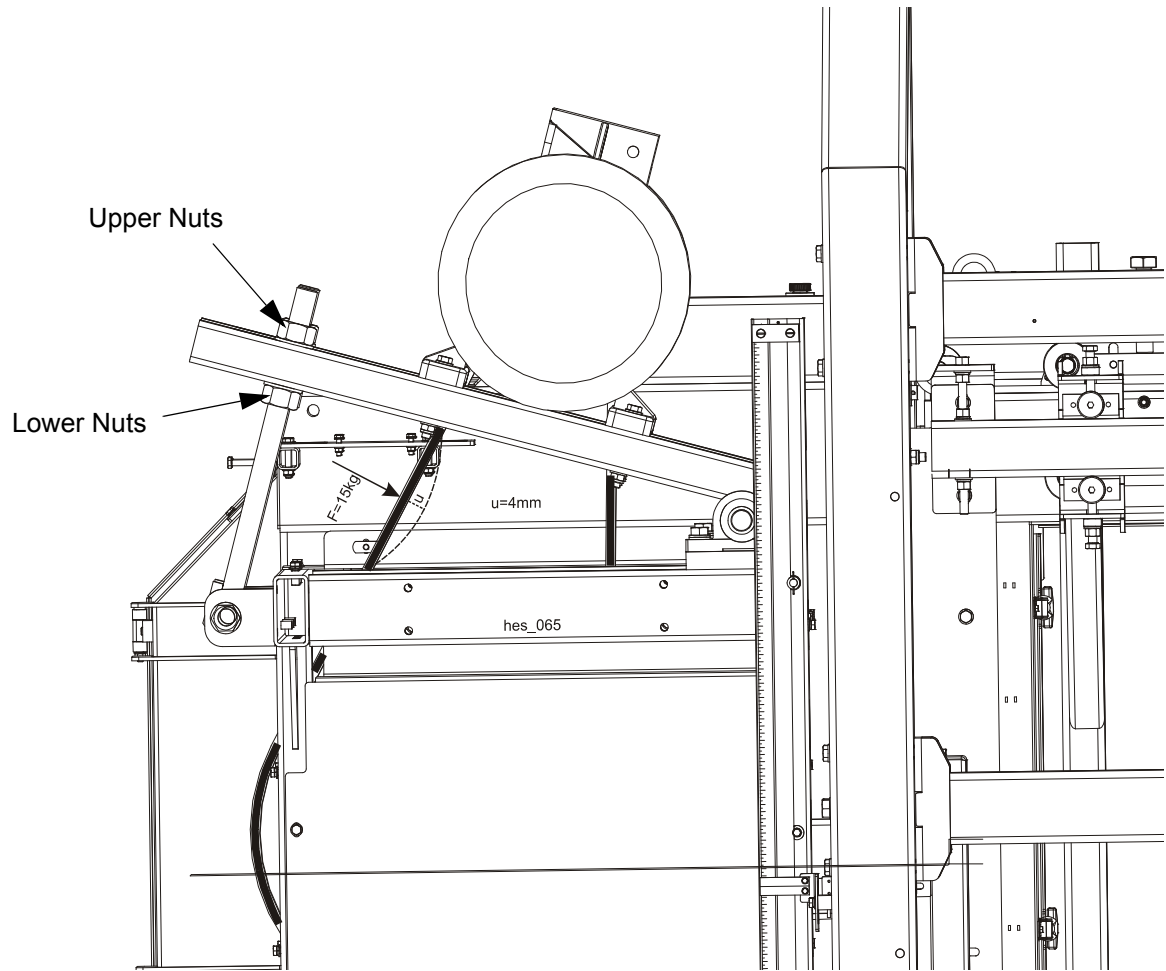


FIG. 5-5

## 5.9 Drive System Alignment

See **Figure 5-6**. To align the drive system, loosen the bushing located on the drive wheel shaft. Adjust the pulley until it is aligned with the motor shaft pulley. Tighten the pulley bushing located on the drive wheel shaft.

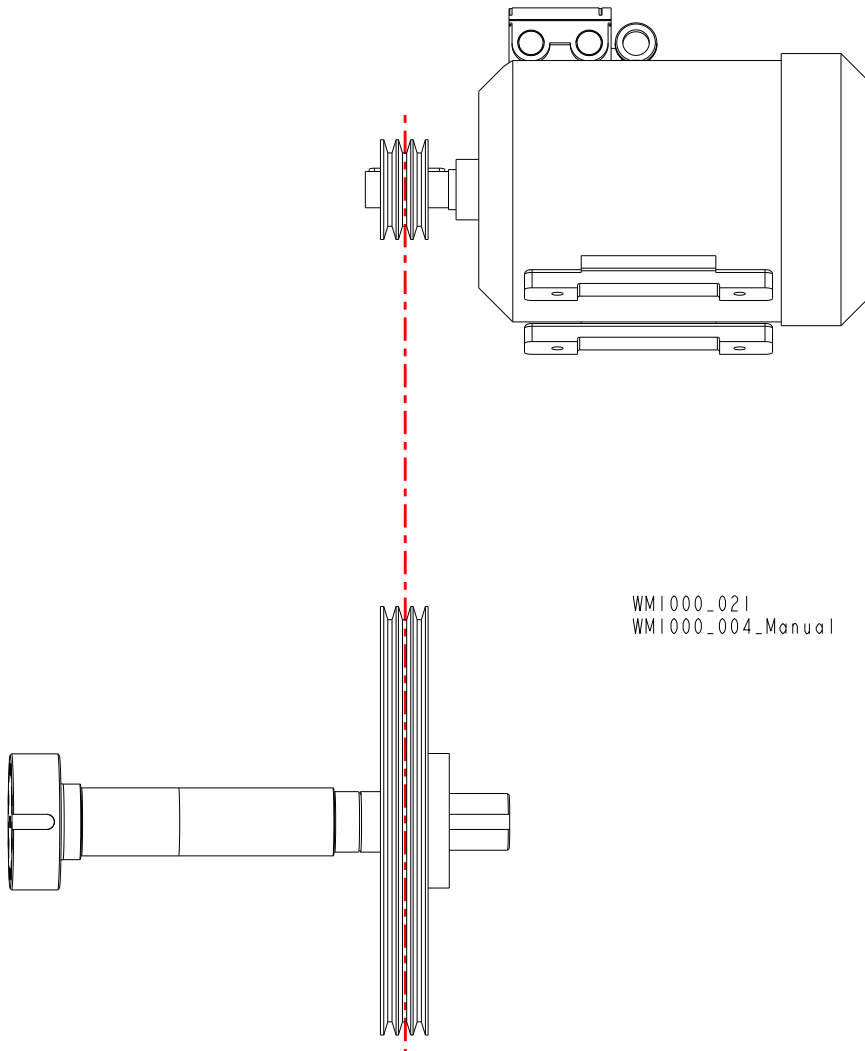


**FIG. 5-6**

## 5.10 Up/Down System

500

Adjust the up/down chain tension every 500 hours of operation. Measure the chain tension with the head all the way to the top of the vertical mast. Find the chain adjusting bolt at the bottom of the mast. Use the adjustment bolt to adjust the bolt until the center of the chain can be deflected 2cm ( 0.787" ) with a 2.5 KG (5.5 lbf) (24.5 N) deflection force.

**CAUTION!** Do not overtension the chain. Overtensioning the chain may lead to early failure of the gear reducer, the sprockets and the chains.

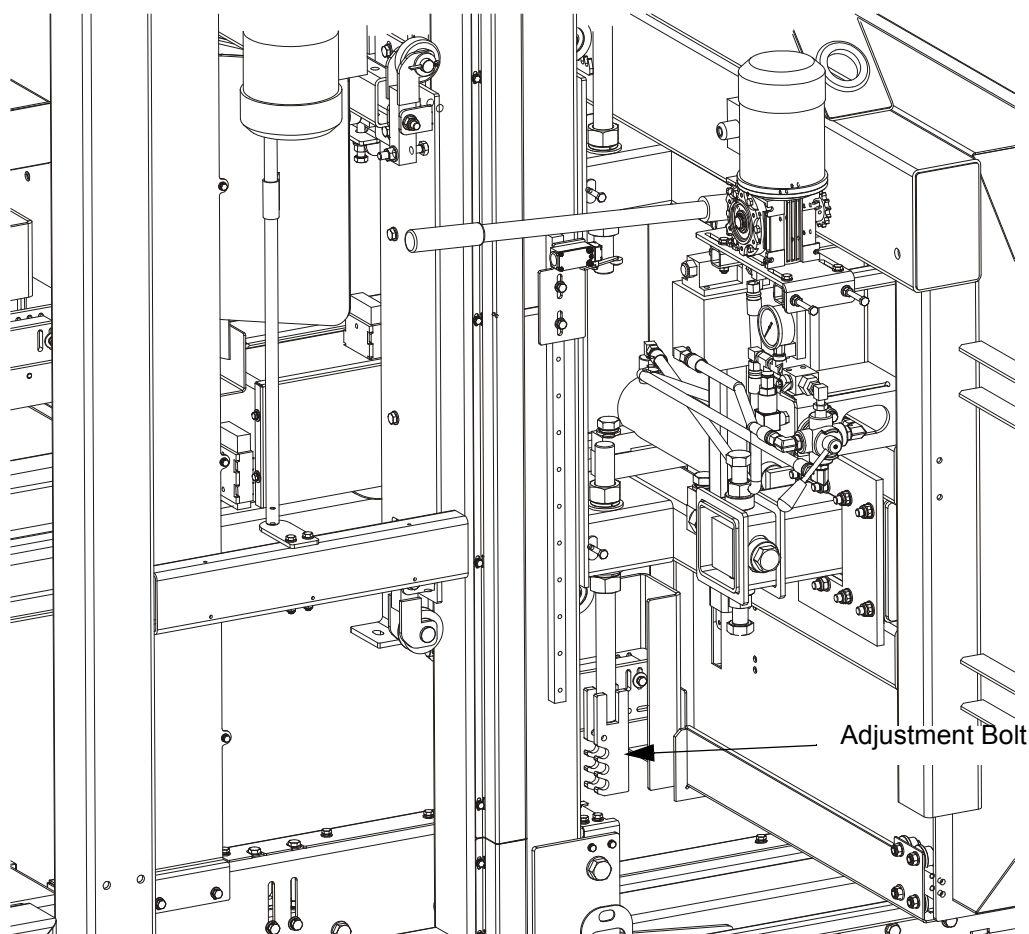

**FIG. 5-7**

5. Check the gear reducer for leaks. When oil leaks from the gear reducer, please contact Customer Service.

## 5.11 Power Feed


1. Adjust the power feed chain every 500 hours of operation. Measure the chain slack in the middle of the chain, between the feed rollers. Adjust the chain until the slack is 2 cm ( 0.787" ).

500



**CAUTION!** Do not overtighten the feed chain. Damage to the power feed motor may result.

See **Figure 5-8**. To adjust the feed chain tension, first loosen the locking bolts and then use the adjustment bolts to change the chain tension. Tighten the locking nuts when the adjustment is complete.

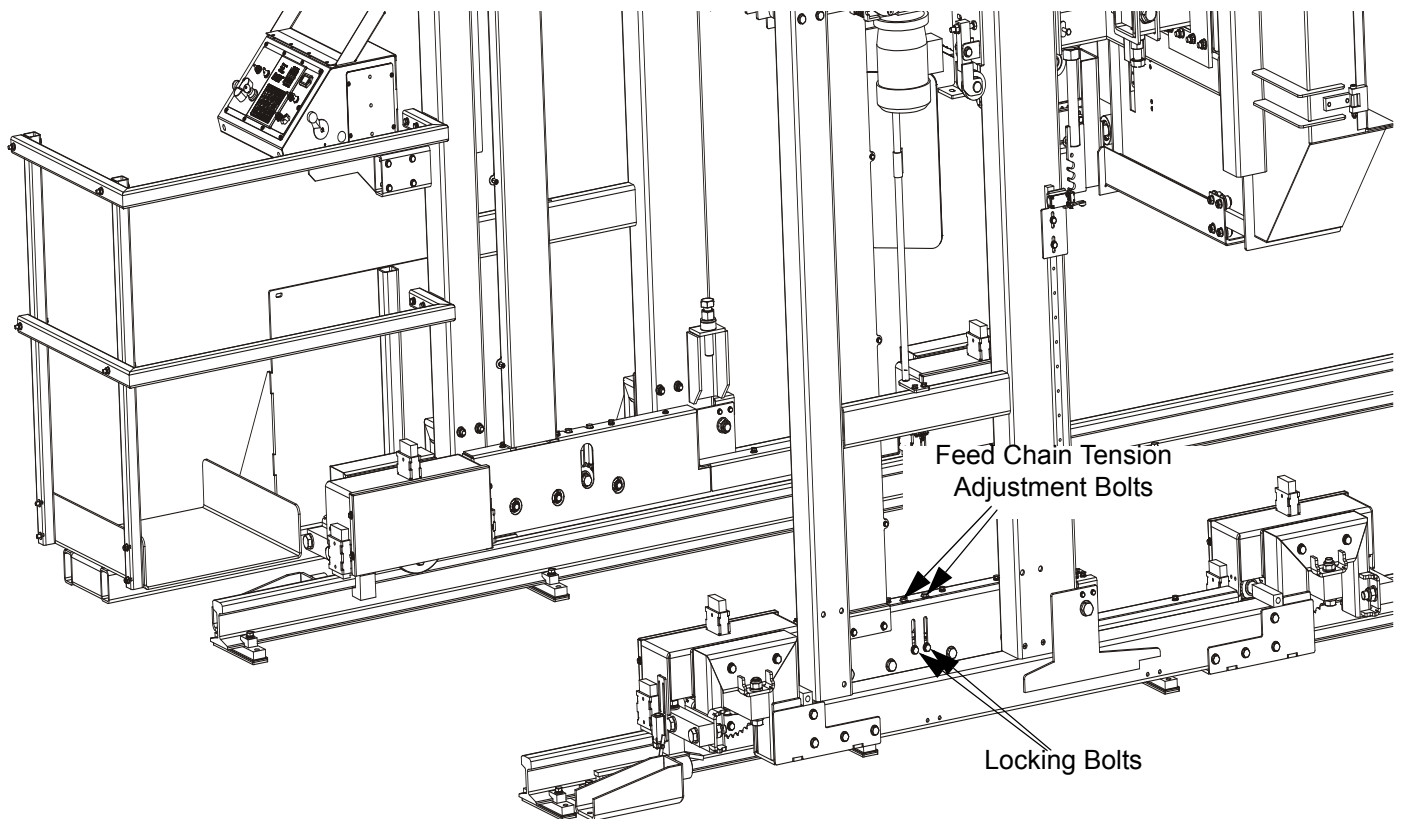

**FIG. 5-8**

See Figure 5-9.

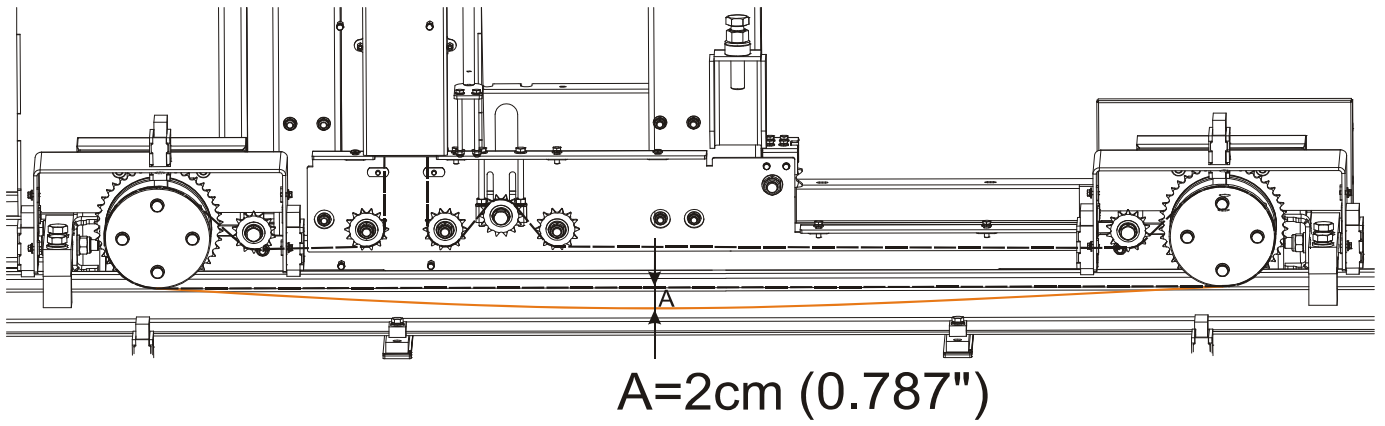


FIG. 5-9



## 5.12 Blade Guide Chain Tension


1. Adjust the chains of the blade guides every 500 hours of operation. Measure the blade guide chain slack with the blade guide in its most inward position. Adjust the chain until the slack is 2 cm (0.787").

500



**CAUTION!** Do not overtighten the chains of the blade guides. Damage to the gearbox or motor may result.

**See Figure 5-10.** To adjust the blade guide chain tension, first loosen the locking bolts and then use the adjustment bolts to change the chain tension. Tighten locking nuts.

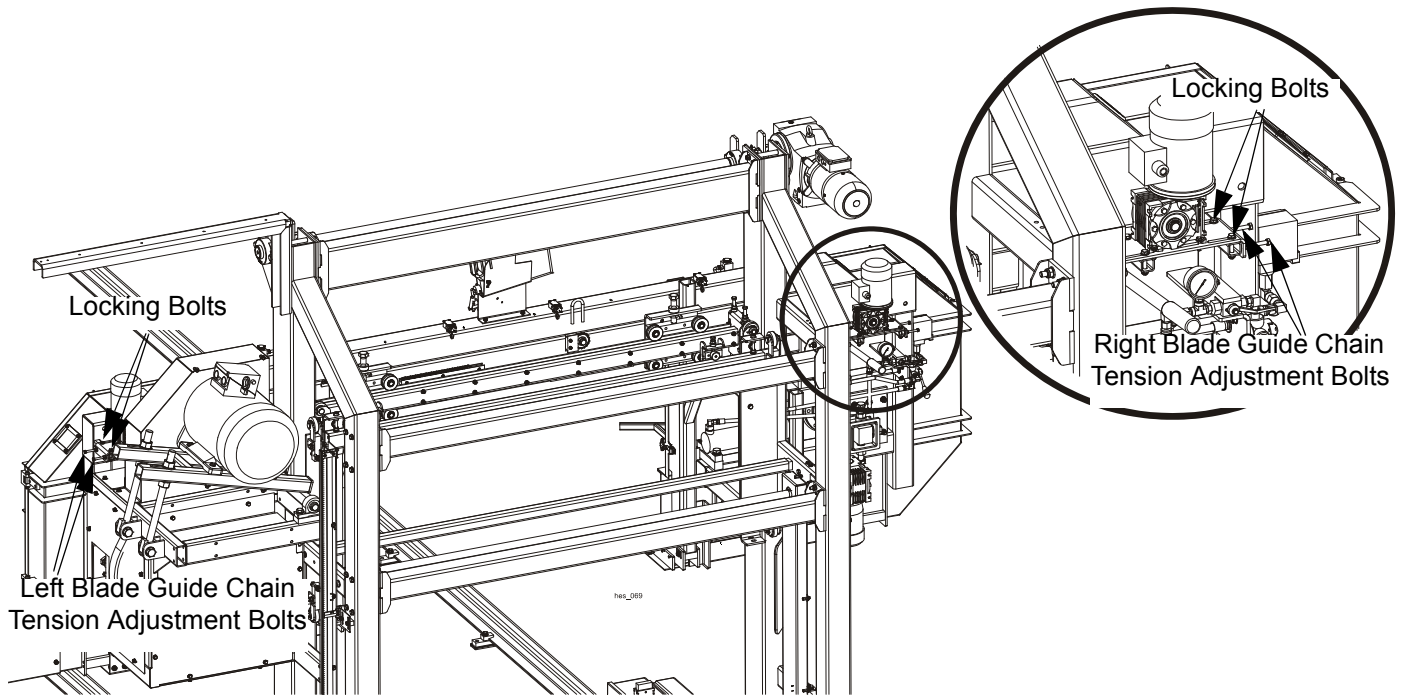

**FIG. 5-10**

## 5.13 Safety Devices Inspection

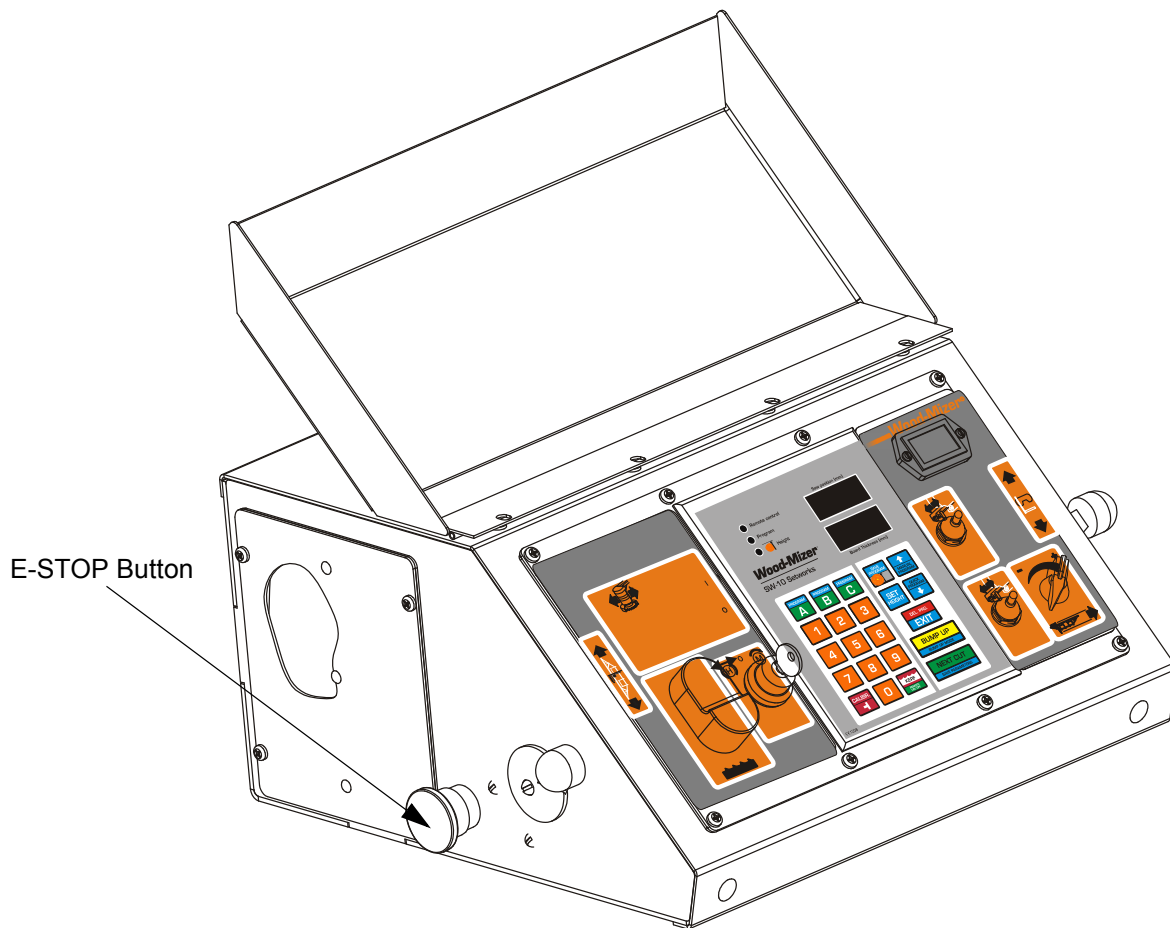
### *WM1000 – Safety Devices Inspection*

Safety devices on the WM1000 machine which must be checked before every shift:

- E-STOP button and its circuit
- Control circuits with the E-STOP button pressed
- Blade cover safety switch #1 and its circuit
- Blade cover safety switch #2 and its circuit
- Motor brake and its circuit

#### **1. E-STOP button and its circuit inspection**

- Turn on the blade motor;
- Press the E-STOP button located on the left side of the control box. The blade motor should be stopped. Pressing the START button should not start the motor until the E-STOP button is released.



## 2. Inspection of the control circuits with the E-STOP button pressed

- Turn on the blade motor;
- Press the E-STOP button located on the left side of the control box. The blade motor should be stopped.
- With the E-STOP button pressed, try to move the saw head up and down using the switch and the Setworks buttons, and forward/backward using the power feed switch. Both systems should not start.
- With the E-STOP button pressed, try to start the debarker blade motor and move the debarker arm in and out. The debarker should not work.
- With the E-STOP button pressed, try to move the blade guide arm in and out. The blade guide arm should not work.
- With the E-STOP button pressed, try to start the board return system. The board return system should not work.

## 3. Blade cover safety switch #1 and its circuit inspection

- Turn on the blade motor;
- Open the blade housing cover #1;
- The blade motor should be stopped;
- Try to start the motor. The blade motor should remain stopped;
- Close the blade housing cover #1;
- The blade motor should remain stopped until it is restarted with the START button.

#### **4. Blade cover safety switch #2 and its circuit inspection**

- Turn on the blade motor;
- Open the blade housing cover #2;
- The blade motor should be stopped;
- Try to start the motor. The blade motor should remain stopped;
- Close the blade housing cover #2;
- The blade motor should remain stopped until it is restarted with the START button.

#### **5. Motor brake and its circuit inspection**

- Turn on the blade motor. Stop the motor using the STOP button. Measure the braking time.
- Turn on the blade motor. Stop the motor by switching the key to the “0” position. Measure the braking time.
- Turn on the blade motor. Stop the motor by switching the key to the “2” position. Measure the braking time.
- The braking time should always be shorter than 10 seconds. If the braking time is longer, it is necessary to adjust or replace the motor disk brake. See your motor option manual.

## SECTION 6 SAWMILL ALIGNMENT

The Alignment instructions should be performed as necessary to solve sawing problems not related to blade performance or approximately every 1500 hours of operation.

### 6.1 Alignment Procedure

#### *Blade Installation*

1. Check the blade and the blade wheels. Remove any sawdust buildup from the surface of the wheels.
2. Install a clean blade and apply the appropriate tension ([See Section 4.3 Tensioning the Blade](#)).
3. Check the blade guides are properly adjusted ([See Section Blade Guides](#)).
4. Adjust the idle-side and drive-side cant control to track the blade ([See Section Blade Wheels Adjustment](#)).
5. Turn the key switch to #3 position.
6. Manually spin one of the blade wheels until the blade positions itself on the blade wheels.

#### *Saw Head Tilt*

The saw head must be leveled.

1. Place a water level on the saw head main tube.
2. Use the up/down chain adjustment bolts to level the saw head.

# 6 Sawmill Alignment

## Alignment Procedure

See Figure 6-1.

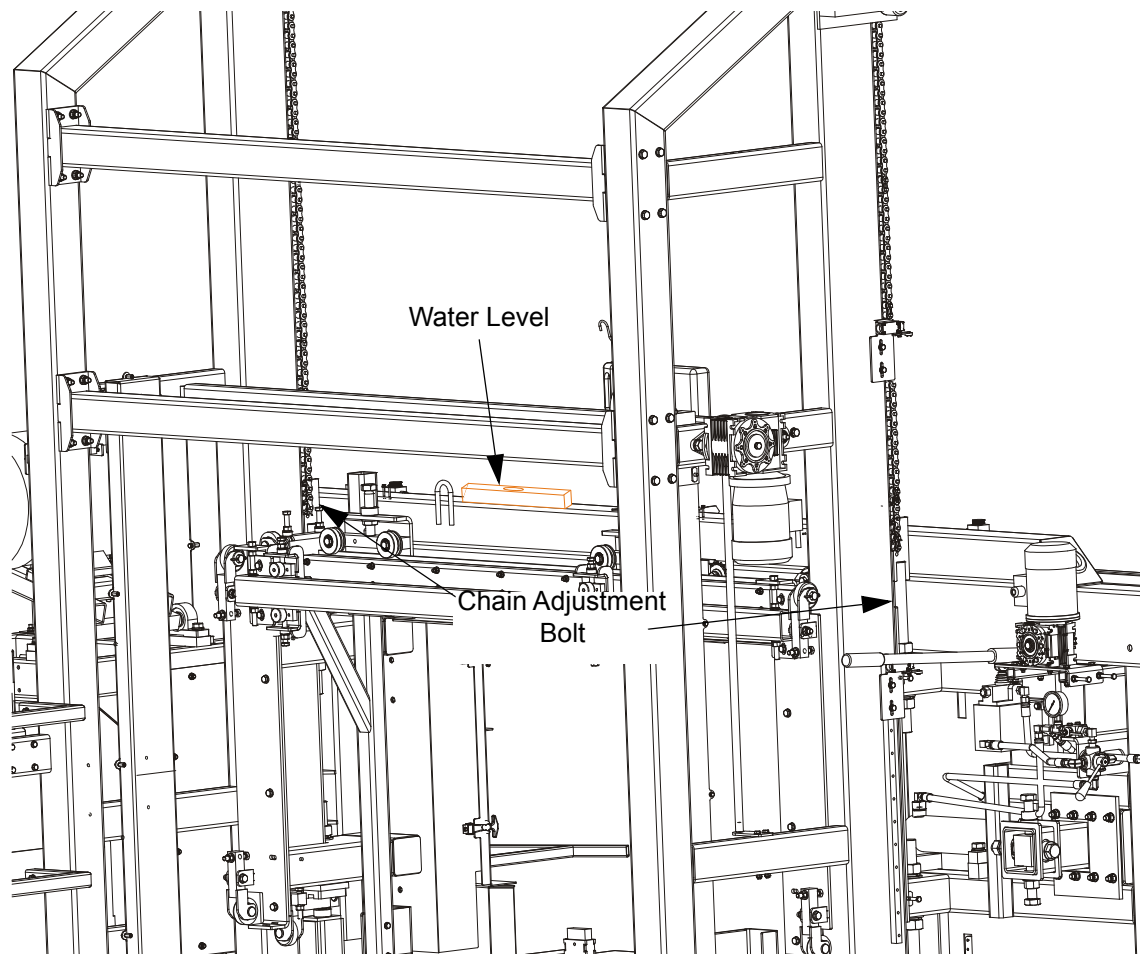


FIG. 6-1

**NOTE:** To make the tilt adjustment easier, it is recommended to completely lower the saw head until it rests on the stop bolts, tighten or loosen adjustment bolts. Then raise the saw head to check the saw head tilt.

3. After levelling the saw head, check the saw head rollers adjustment. All twelve rollers must touch the mast tube or may have maximum 0.5 mm (0,02") of clearance. Use the adjustment bolts shown below if necessary.

See Figure 6-2.

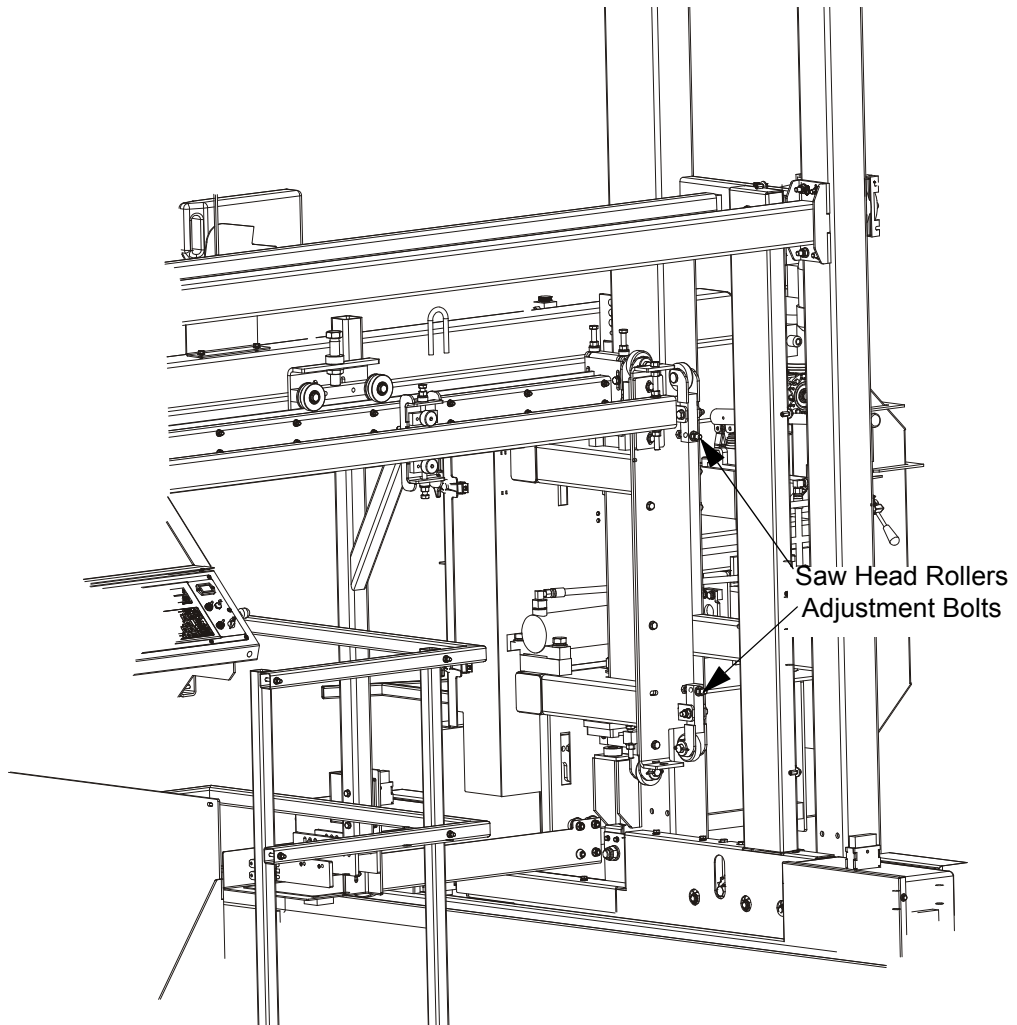


FIG. 6-2

### Blade Wheels Adjustment

The blade wheels should be adjusted so they are level in the vertical and horizontal planes. If the blade wheels are tilted up or down, the blade will want to travel in the tilted direction. If the blade wheels are tilted horizontally, the blade will not track properly on the wheels.

1. Set left and right blade guide arms to its extreme outer position. Be sure the blade guide rollers or blocks do not deflect the blade. Use the blade guide alignment tool to check the vertical alignment of each blade wheel. Attach the tool to the blade near the left blade guide mount. Be sure the tool does not rest on a tooth or burr, and is lying flat against the bottom of the blade.

See Figure 6-3.

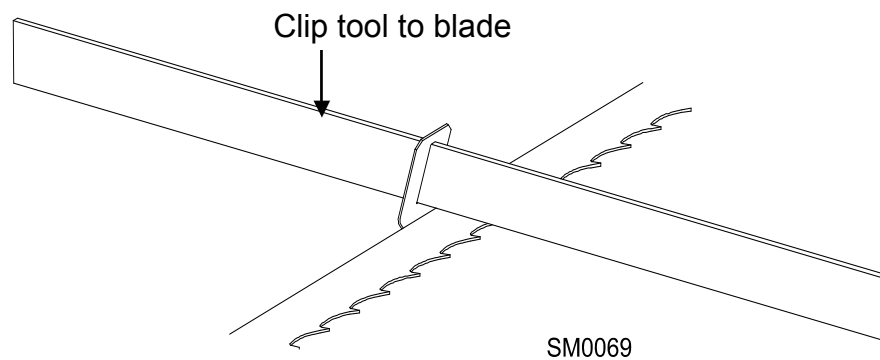



FIG. 6-3

2. Choose a reference point on the ground, floor or bed frame (if equipped).
3. Move the saw head so the front end of the tool is positioned over the reference point. Measure the distance from the bottom of the tool to the reference point.
4. Move the saw head so the rear of the tool is positioned over the reference point. Measure the distance from the bottom of the tool to the reference point.
5. If the two measurements differ by more than 1.5 mm (1/16"), adjust the vertical tilt of the drive-side blade wheel.

**See Figure 6-4.** Unbolt and remove inner cover of the the drive side wheel. Use the vertical adjustment screws to adjust the drive-side blade wheel. To tilt the wheel down, loosen two lock bolts and the top adjustment screw one quarter turn. Loosen the jam nut on the bottom adjustment screw and tighten the screw. Tighten the top and bottom jam nuts and lock bolts. To tilt the wheel up, loosen two lock bolts and the bottom adjustment screw one quarter turn. Loosen the jam nut on the top adjustment screw and tighten the screw. Tighten the top and bottom jam nuts and lock bolts. Mount the inner cover of the drive



side wheel.

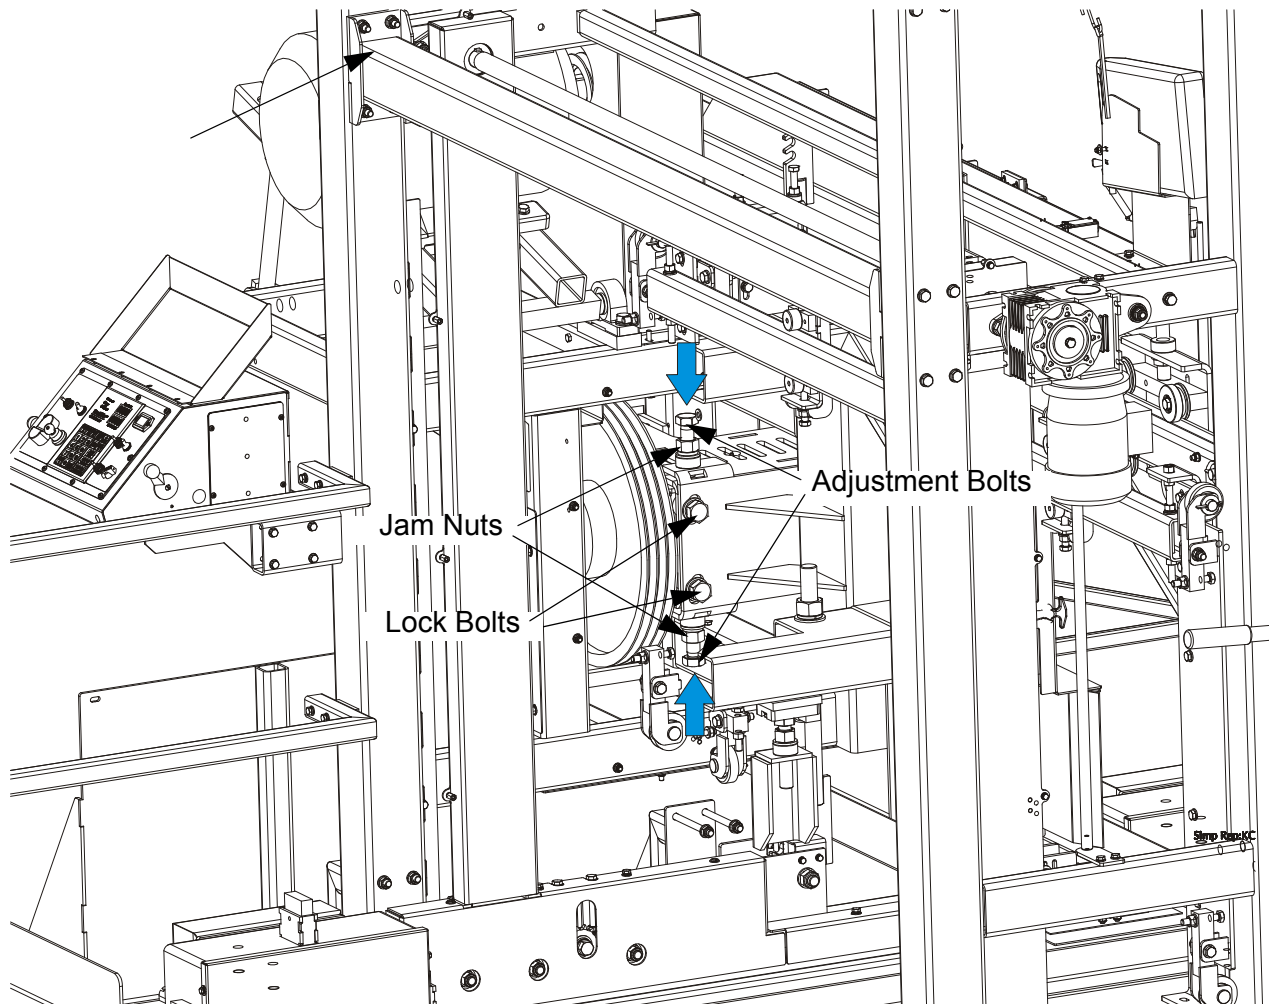


**FIG. 6-4 DRIVE SIDE WHEEL VERTICAL ADJUSTMENT (SOME PARTS WERE HIDDEN INTENTIONALLY)**

6. Recheck the vertical tilt of the drive-side blade wheel with the blade guide alignment tool. Readjust the blade wheel as necessary until the front and rear of the tool are the same distance from the reference point (1/16") (1.5mm).
7. Remove the tool from the blade and reattach it near the outer blade guide assembly.
8. Measure from the tool to the reference point at both ends of the tool. If the measurements at the front and rear ends of the tool differ by more than 1.5mm (1/16"), adjust the vertical tilt of the idle-side blade wheel.

**See Figure 6-5.** Use the vertical adjustment screws to adjust the idle-side blade wheel. To tilt the wheel up, loosen the bottom adjustment screw one quarter turn. Loosen the jam nut on the top adjustment screw and tighten the screw. Tighten the top and bottom jam nuts.

To tilt the wheel down, loosen the top adjustment screw one quarter turn. Loosen the jam nut on the bottom adjustment screw and tighten the screw. Tighten the top and bottom jam nuts.

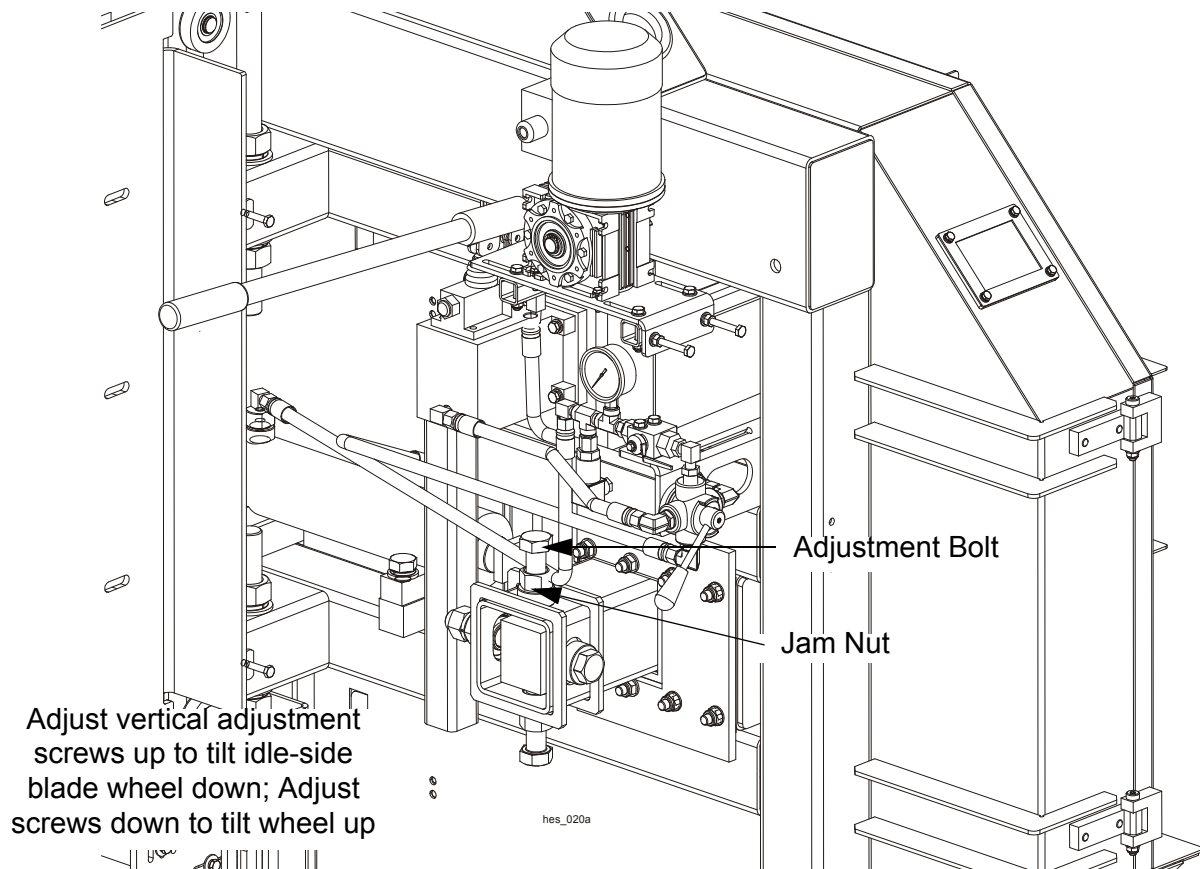


**FIG. 6-5**

9. Recheck the vertical tilt of the idle-side blade wheel with the blade guide alignment tool. Readjust the blade wheel as necessary until the front and rear of the tool are the same distance from the reference point (within 1.5 mm (1/16")).


10. Check the position of the blade on the idle-side blade wheel.

See **Figure 6-6**. The horizontal tilt of the blade wheel should be adjusted so that the gullet of a 2" (50 mm) blade is 5mm (0.196") out from the front edge of the wheel and 8 mm (0.314") in case of 3" (75 mm) blade. Do not let the teeth ride on the wheels.

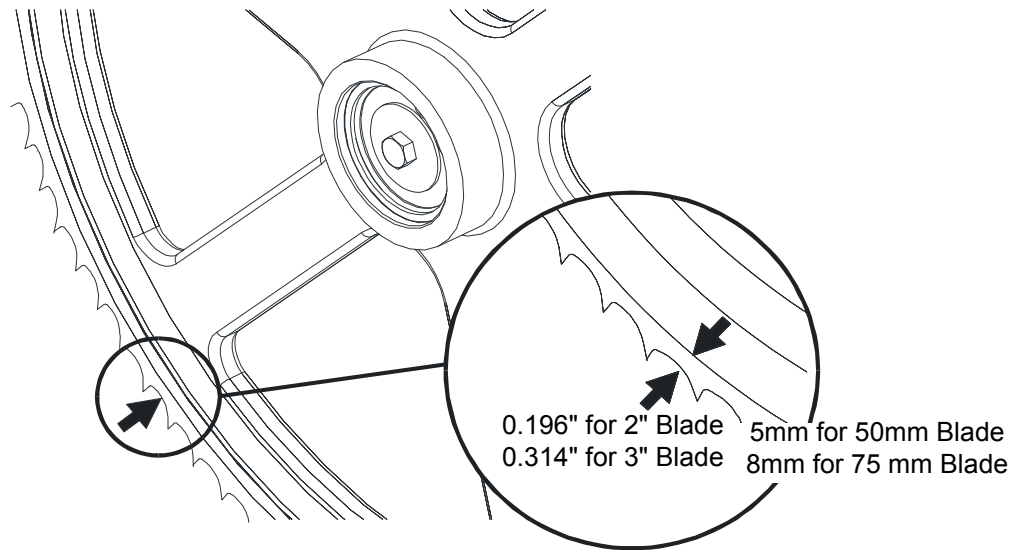

**FIG. 6-6**

See **Figure 6-7**. Use the cant control adjustment to adjust the idle-side blade wheel. If the blade is too far forward on the wheel, turn the cant control counterclockwise. If it is too far back on the wheel, turn the cant control clockwise.

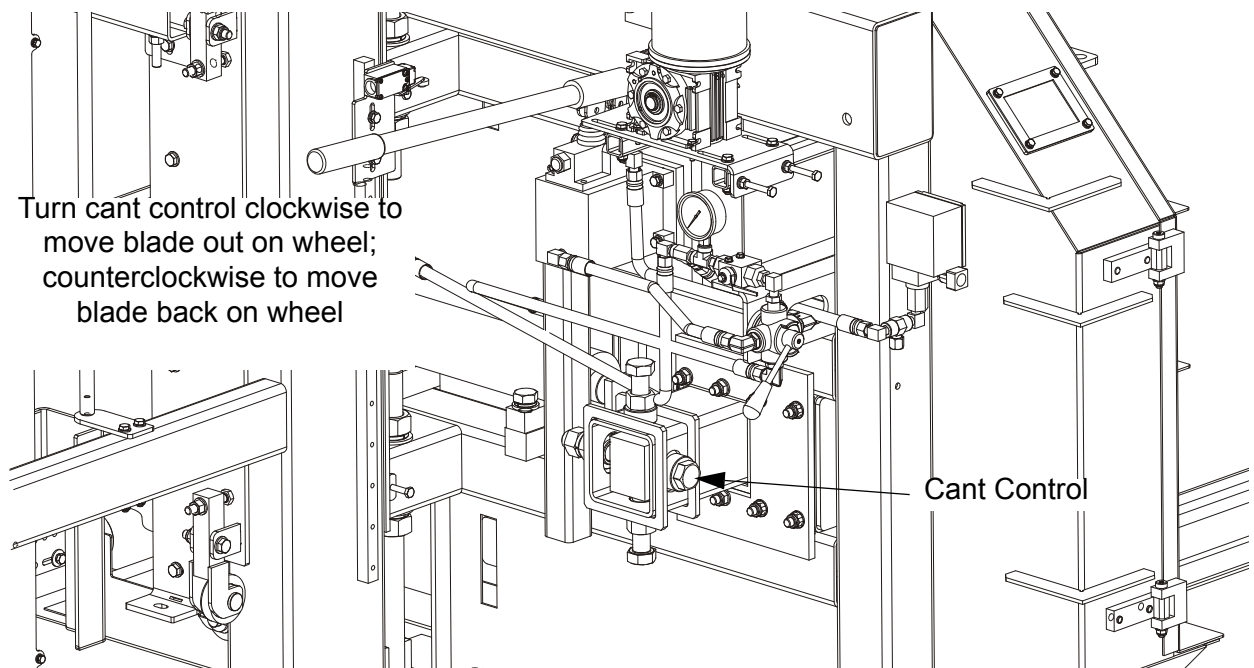

**FIG. 6-7**

# 6

## Sawmill Alignment

### Alignment Procedure

11. Check the position of the blade on the drive-side blade wheel. The blade should be positioned on the wheel as described for the idle-side blade wheel. Adjust the drive-side blade wheel if necessary.

**See Figure 6-8.** Remove the saw head side cover. Use the horizontal adjustment bolt to adjust the drive-side blade wheel. To move the blade back on the wheel, loosen the jam nuts on the adjustment bolt and turn the bolt counterclockwise. Tighten the jam nuts.

To move the blade out on the wheel, loosen the jam nuts on the adjustment bolt and turn the screw clockwise. Tighten the jam nuts. After adjustment is finished, mount the saw head side cover.

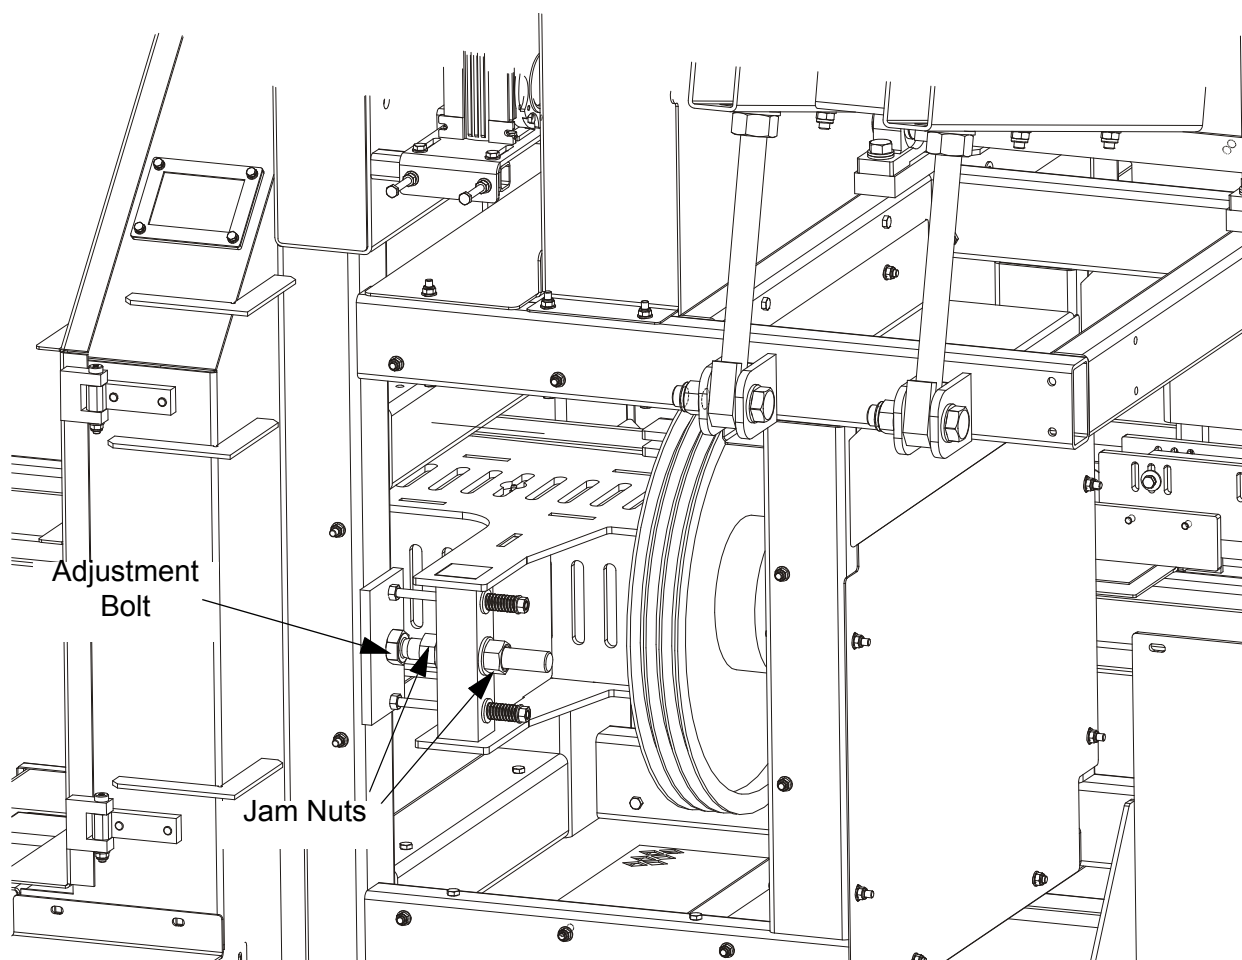


FIG. 6-8

12. After blade wheels adjustment always check drive belt tension and blade tension.

## Blade Guides

1. Check if the blade guides front horizontal tube is level.

**See Figure 6-9.** Place a water level on the blade guides front horizontal tube. The tube must be leveled. If adjustment is necessary, loosen the mounting bolts and lock nuts. Use adjustment bolts shown below to level this tube. Tighten lock nuts and mounting bolts when adjustment is done.

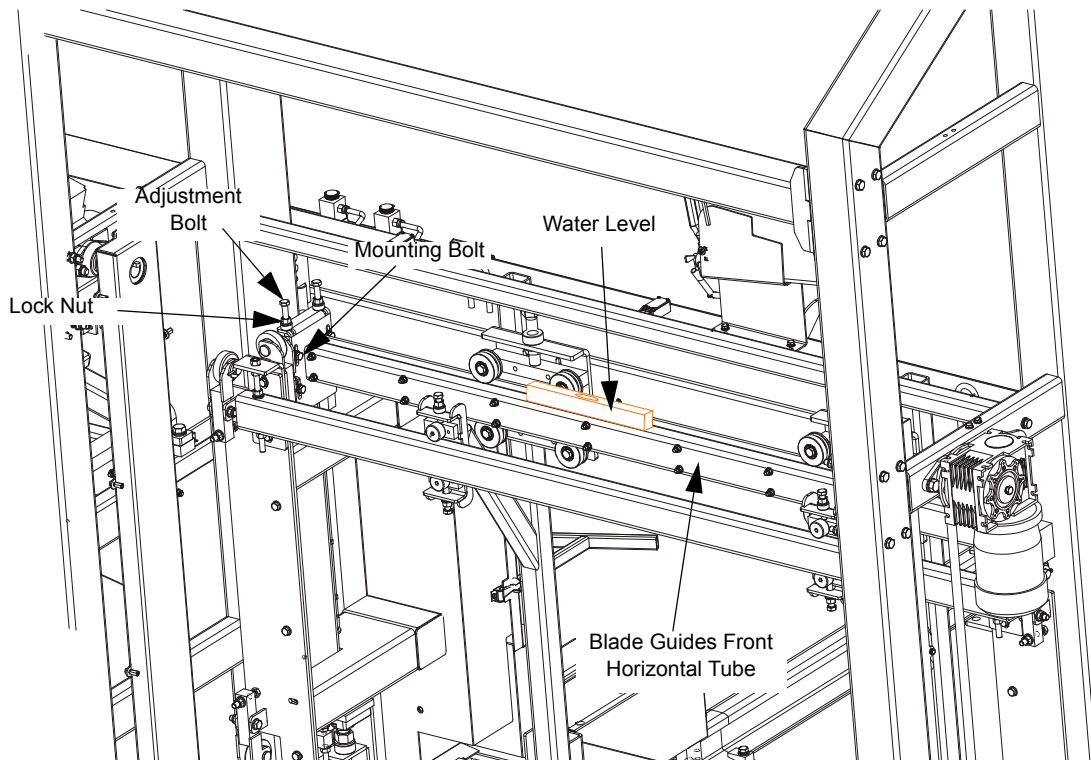


FIG. 6-9


# 6

## Sawmill Alignment

### Alignment Procedure

2. Check if the blade guides back horizontal tube is level.


**See Figure 6-10.** Place a water level on the blade guides back horizontal tube. The tube must be leveled. If adjustment is necessary, loosen the mounting bolts and lock nuts. Use adjustment bolts shown below to level this tube. Tighten lock nuts and mounting bolts when adjustment is done.

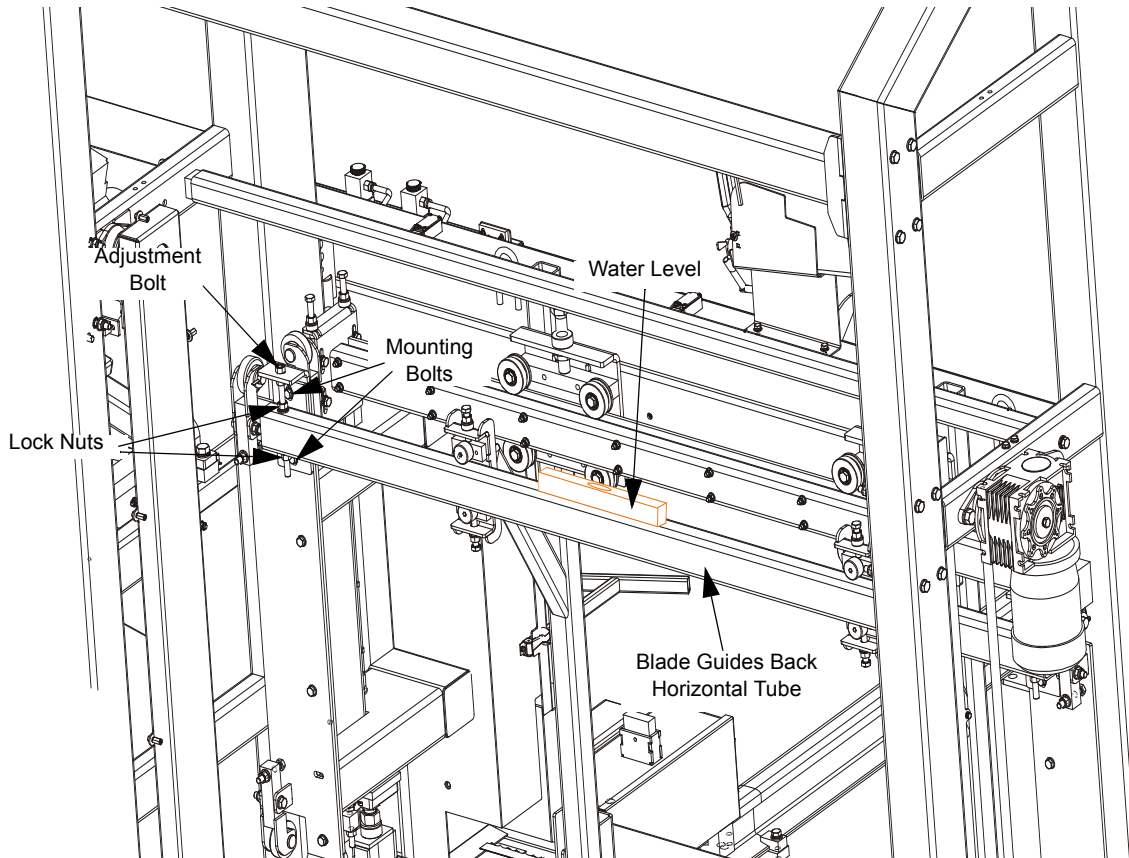

**FIG. 6-10**

3. Check if the blade guides vertical tubes are perpendicular.

**See Figure 6-11.** Put a water level against the left and then right blade guides vertical tubes. The tubes must be perpendicular. To adjust loosen the lock nuts and turn the adjustment bolts shown below left or right to make the vertical tube perpendicular. Tighten lock nuts when adjustment is done.

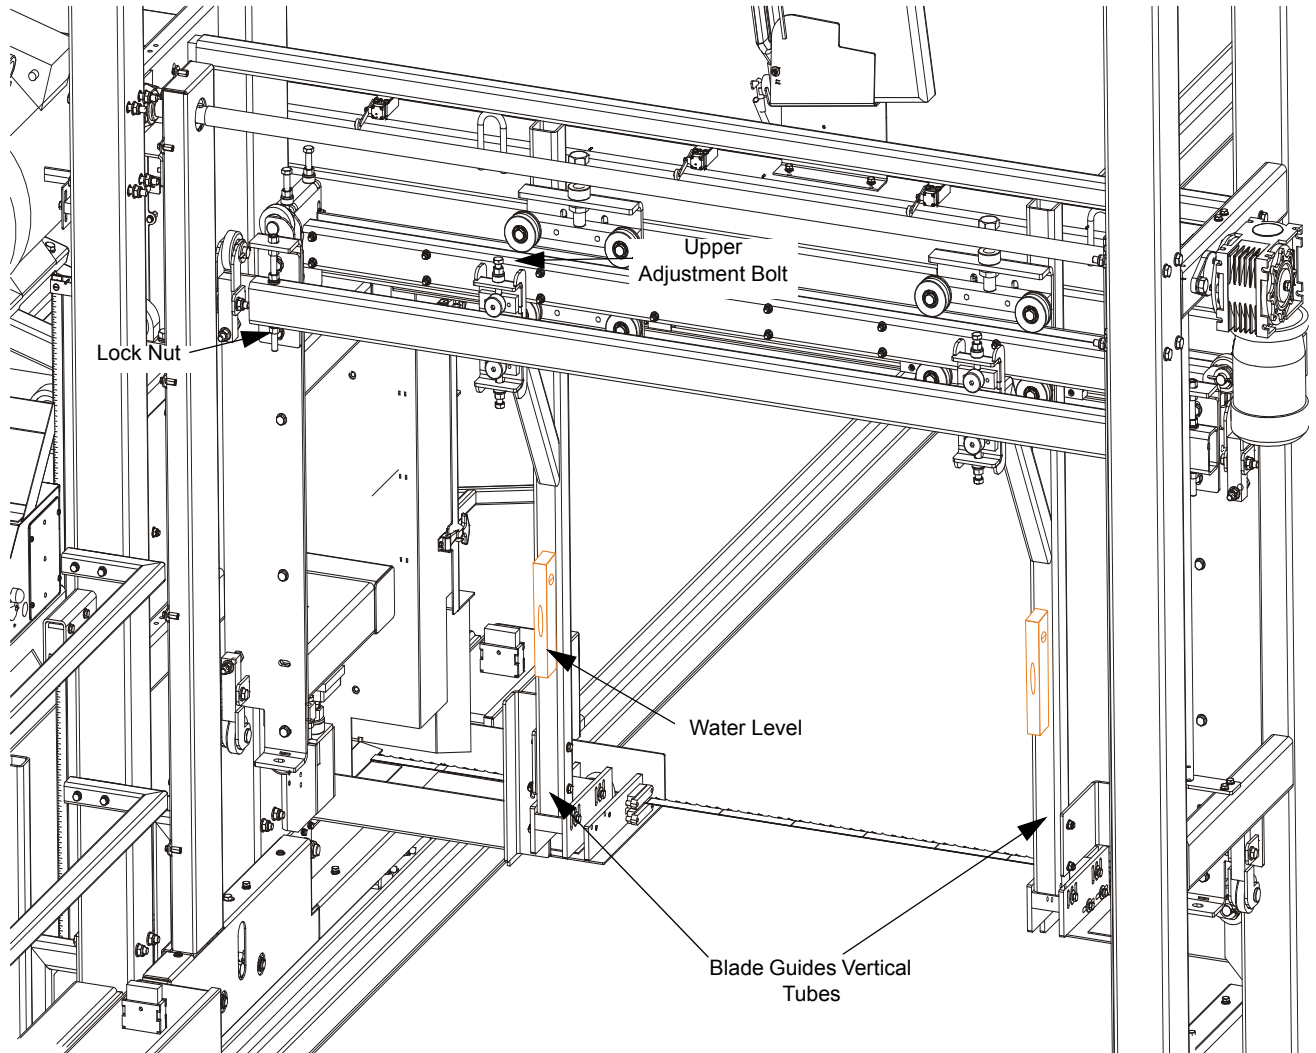

**FIG. 6-11 BLADE GUIDE VERTICAL TUBES ADJUSTMENT (SOME PARTS WERE HIDDEN INTENTIONALLY)**

# 6

## Sawmill Alignment

### Alignment Procedure

4. Measure the distance between front surface of the blade guide roller and the back of the blade. This distance should be 8-10mm (0.314"-0.393").

See Figure 6-12.


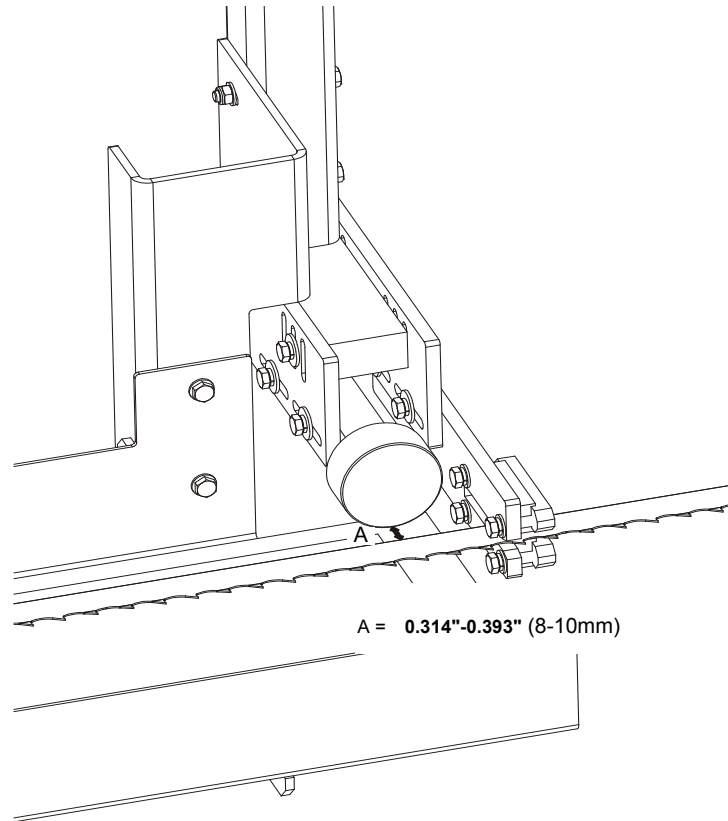


FIG. 6-12

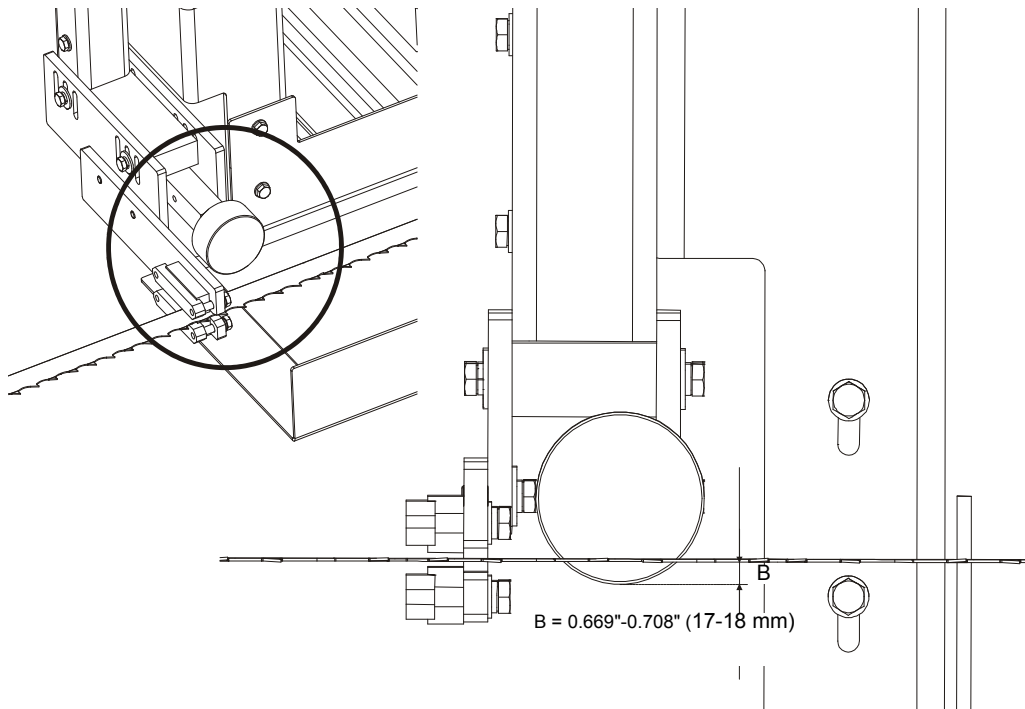

5. Measure the distance between bottom of the blade guide roller and the bottom side of the blade. This distance should be 17-18 mm (0.669"-0.708").

See Figure 6-13.

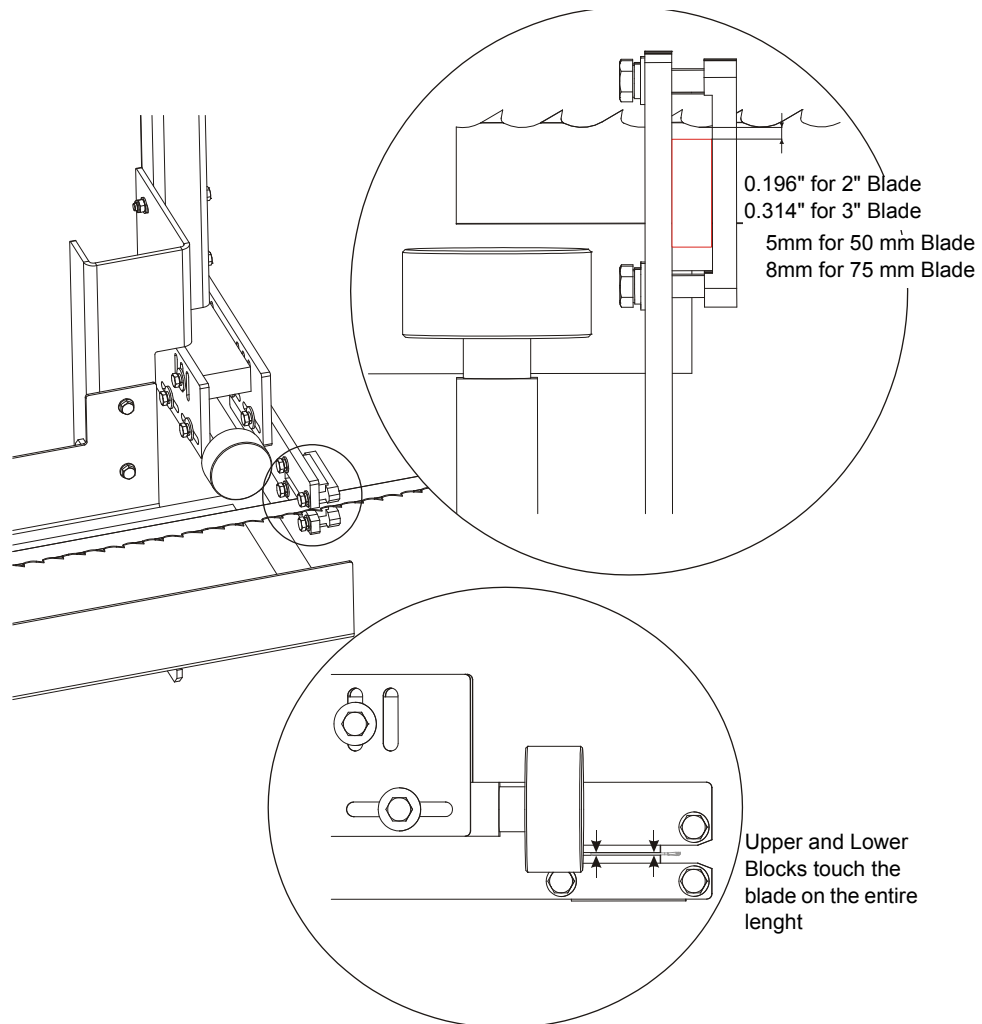


**FIG. 6-13 BLADE GUIDE ADJUSTMENT (SOME PARTS WERE HIDDEN INTENTIONALLY)**

## 6

**Sawmill Alignment***Alignment Procedure*

6. Measure the distance between blade gullet and front surface of the upper and bottom blade guide blocks. This distance should be 5mm (0.196") for 2" (50mm) blade and 8 mm (0.314") for 3" (75mm) blade. Then check if the upper and bottom blade guide blocks slightly touches the blade on the entire length of the block.



**FIG. 6-13 BLADE GUIDE BLOCKS ADJUSTMENT (SOME PARTS WERE HIDDEN INTENTIONALLY)**

## SECTION 7 SAWMILL SPECIFICATIONS

### 7.1 Belt Sizes

See Table 7-1. Belt sizes for the WM1000 sawmill are shown below.

Description	Belt Size	Wood-Mizer Part #
Motor Drive Belt	3BX2640Le	--

TABLE 7-1.

### 7.2 Blade Specifications

See Table 7-2. Blade specifications for the WM1000 sawmill are shown below.

Parameter	Value
Blade Width	50-75mm 2"-3"
Blade Length	9823mm 386.731"
Blade linear speed	17,6-21,3m/s 58-70 foot/s
Blade Tension System	Hydraulic
Blade Lubrication	Oil only

TABLE 7-2.

See The Blade Handbook for blade hook angle, tooth height, and tooth set specifications.

### 7.3 Cutting Capacity

See Table 7-3. The log size capacities of the WM1000 sawmill are listed below.


Parameter	Value
Min. Log Diameter	500mm 20"
Max. Log Diameter	1000-1700mm 39"-67" (depends on sawmill configuration)
Min. Log Length	1800mm, 71"
Max. Log Length	depends on length of rails
Min. Cut Width	200mm, 8"
Max. Cut Width	1700mm, 67"
Max. Log Weight (Hydraulic Bed)	4000kg (8817 lb)

TABLE 7-3.


# 7 Sawmill Specifications

## Cutting Capacity

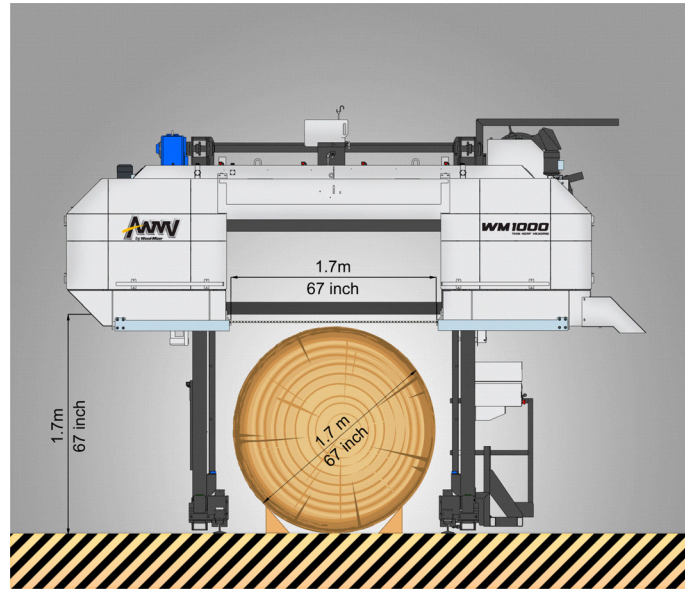
See Figure 7-1.



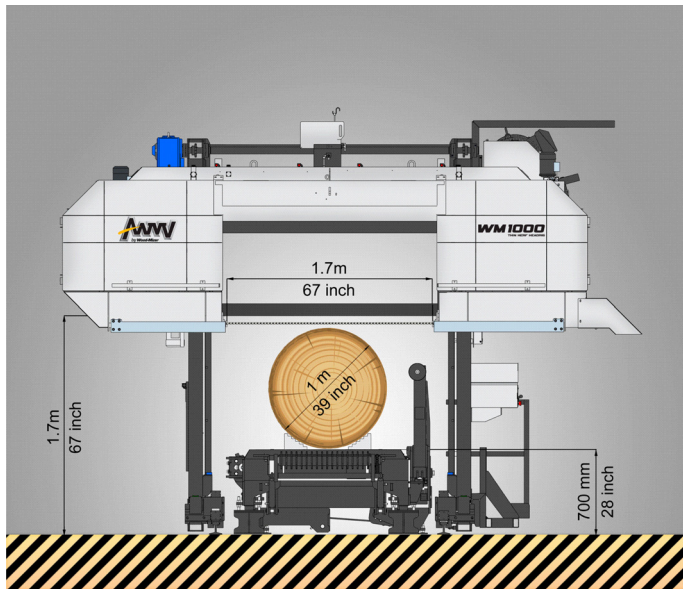WM1000 without Hydraulic Bed  
Cutting Capacity



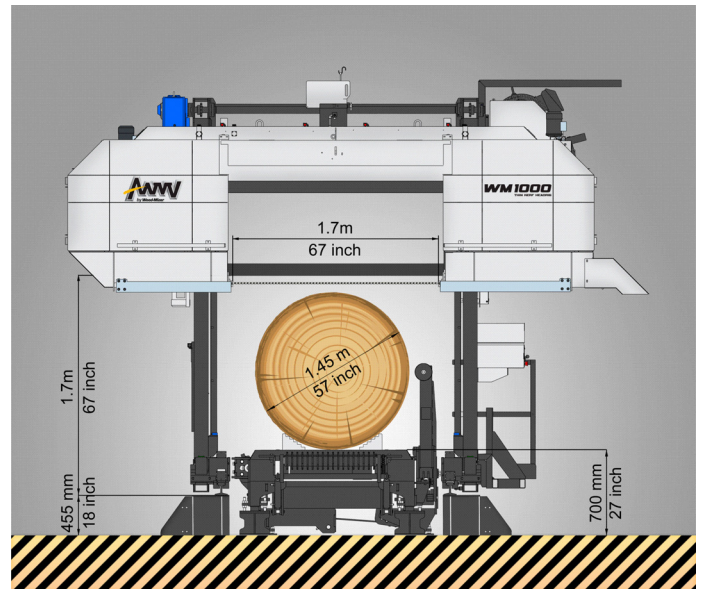WM1000 with Hydraulic Bed  
Cutting Capacity



WM1000 on elevated rails with  
Hydraulic Bed  
Cutting Capacity

FIG. 7-1

## 7.4 Motor Specifications

See Table 7-4. The power options available for the WM1000 sawmill are listed below.

Motor Type	Manufacturer	W-M No.	Power	Other Specifications	Locked-rotor Current
Electric E30	Siemens	093897	22 kW	50 A, 1465 r.p.m.	6,9
Electric E40	Siemens	505394	30 kW	66 A, 1465 r.p.m.	6,7
Electric E50	Siemens	505378	37 kW	80 A, 1465 r.p.m.	6,7

**TABLE 7-4.**

See Table 7-5. The other motors used in sawmills are listed below.

Motor Type	Power	Locked-rotor Current
Up/Down	1,1 kW	4,4
Power Feed	1,1kW	5,1
Blade Guide Arms Motors	2x0,25kW	3,0

**TABLE 7-5.**

## 7.5 Noise Level

See Table 7-6. The average noise level is given in the table below<sup>12</sup>.

Sawmill	Noise Level
<b>WM1000</b>	$L_{EX8} = 88 \text{ dB (A)}$

**TABLE 7-6.**

- 
1. The noise level measurement was taken in accordance with PN-EN ISO 3746 Standard. The noise exposure level given above concerns an 8-hour work day.
  2. The measured values refer to emission levels, not necessarily to noise levels in the workplace. Although there is a relation between emission levels and exposure levels, it is not possible to determine with certainty if preventives are needed or are not needed. The factors affecting a current level of noise exposure during work are inter alia room characteristics and characteristics of other noise sources, e.g. number of machines and machining operations nearby. Also, the permissible exposure level value may vary depending on country. This information enables the machine's user to better identify hazards and a risk.

## 7.6 Hydraulic Oil Specifications

Use **Mobil DTE 10 Excel 32** hydraulic oil for the hydraulic log handling system and blade tensioner.

The oil capacity in the blade tensioner system is 3 liters, and in the hydraulic log handling system is 60 liters.

## 7.7 Overall Dimensions

See **Table 7-7**. The overall dimensions of the WM1000 sawmill are listed below.


Sawmill Model	Length	Width	Height	Weight
<b>WM1000</b>	10000mm (393.7") <sup>1</sup>	4812mm (189.448")	3380mm (133.07")	3000kg (6613lb) <sup>2</sup> 3600kg (7936lb) <sup>3</sup>

**TABLE 7-7.**

<sup>1</sup> If equipped with optional track rails.

<sup>2</sup> Head without rails
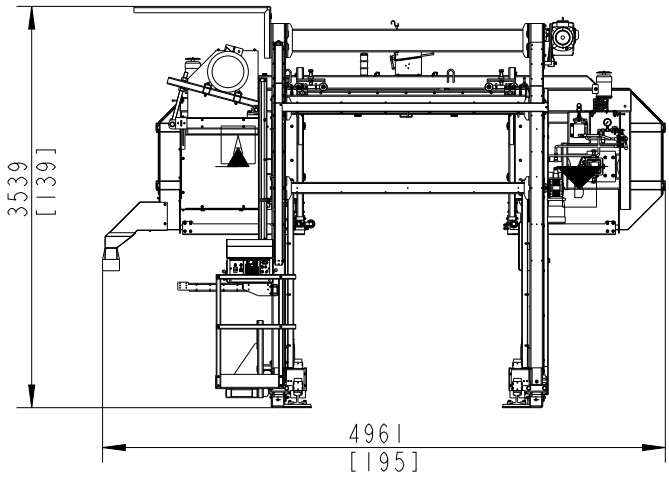
<sup>3</sup> Head with 32.8 ft ( 10 m ) long rails.



WM1000\_004  
WM1000\_004\_Manual



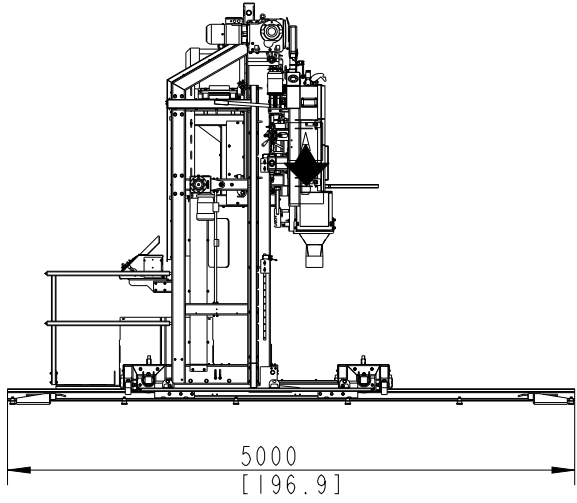


FIG. 7-2 WM1000 WITH 5 M TRACK

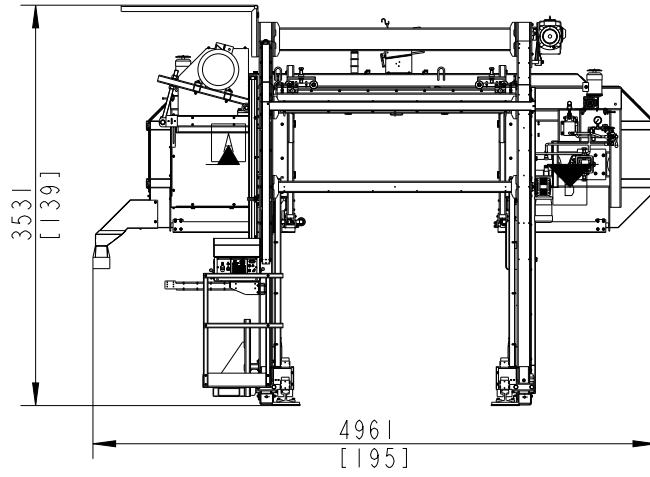

WM1000\_005  
 WM1000\_005\_Manual

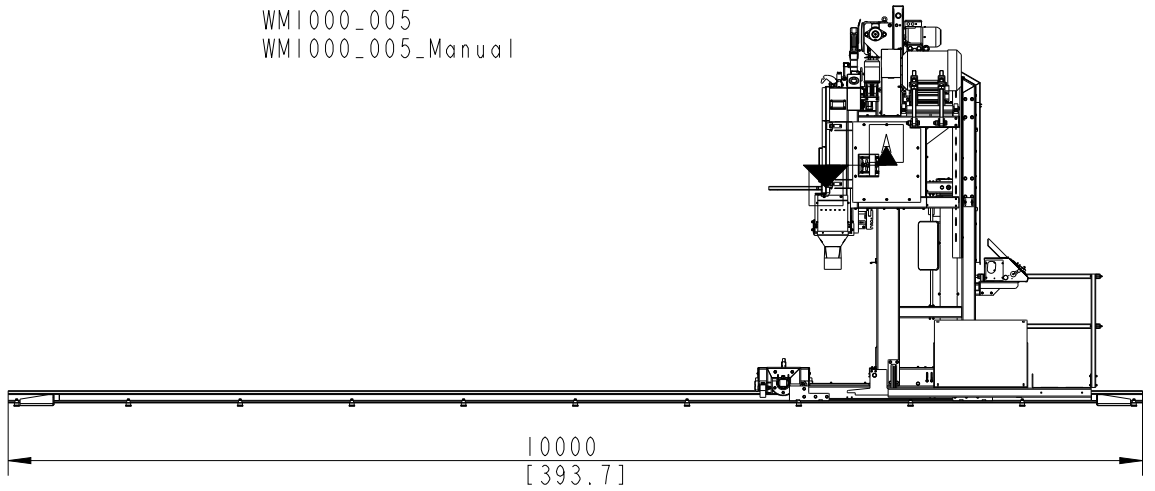

**FIG. 7-3 WM1000 WITH 10 M TRACK**



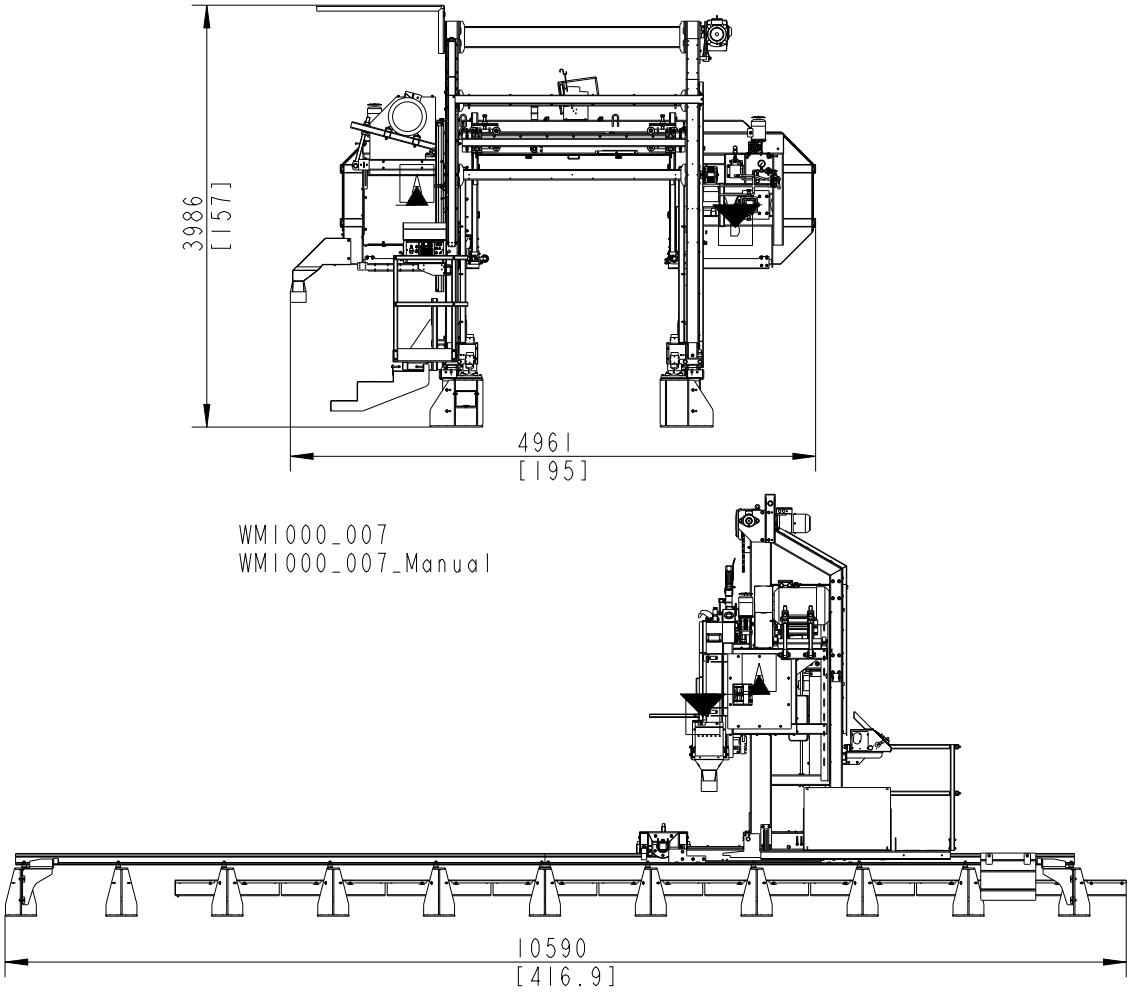


FIG. 7-4 WM1000 WITH 10 M ELEVATED TRACK

### 7.8 Chains

See Table 7-8. The load capacity of the chains is listed below.

	<b>Load Capacity According to ISO Nr 08A-1</b>
<b>Up/Down Chains</b>	6000 KG 13228 lb each

TABLE 7-8.

## 7.9 Sawdust Extractor Specifications



**CAUTION!** Always connect a dust extraction system before starting the machine.



**CAUTION!** The sawdust extraction system must be grounded or made with materials not accumulating electrostatic charge.

See **Table 7-9**. See the table below for specifications of the dust extractor.

<b>Maximum Capacity</b>	1200 m <sup>3</sup> /h (1569 yd <sup>3</sup> /h)
<b>Collector Inlet Diameters (in front of fan)</b>	150 mm (5.9 ")
<b>Motor Power</b>	1.5 kW
<b>Number of Sacks for Waste</b>	1 pcs
<b>Total Capacity of Sacks</b>	0,25 m <sup>3</sup> (8.8 ft) <sup>3</sup>
<b>Weight</b>	110 kg (242.5 lb)
<b>Conveying Speed When 10 m Long Hose Is Used</b>	20 m/s (65.6 ft/s)

**TABLE 7-9.**

## 7.10 Lube System Specifications

The blade lubricating oil specifications are listed below.

<b>Oil Type</b>	<b>Manufacturer</b>	<b>Freezing Temperature</b>	<b>Ignition Temperature</b>	<b>Autoignition Temperature</b>
ACP-1E <sup>1</sup>	Orlen	-20° C (-4° F <sup>o</sup> )	Above 140° C (284° F)	250° C (482° F)

**TABLE 7-10.**

<sup>1</sup> Waste oil must be disposed of in compliance with applicable national and local regulations.

### 7.11 HYDRAULIC DIAGRAMS (OPTIONAL EQUIPMENT)

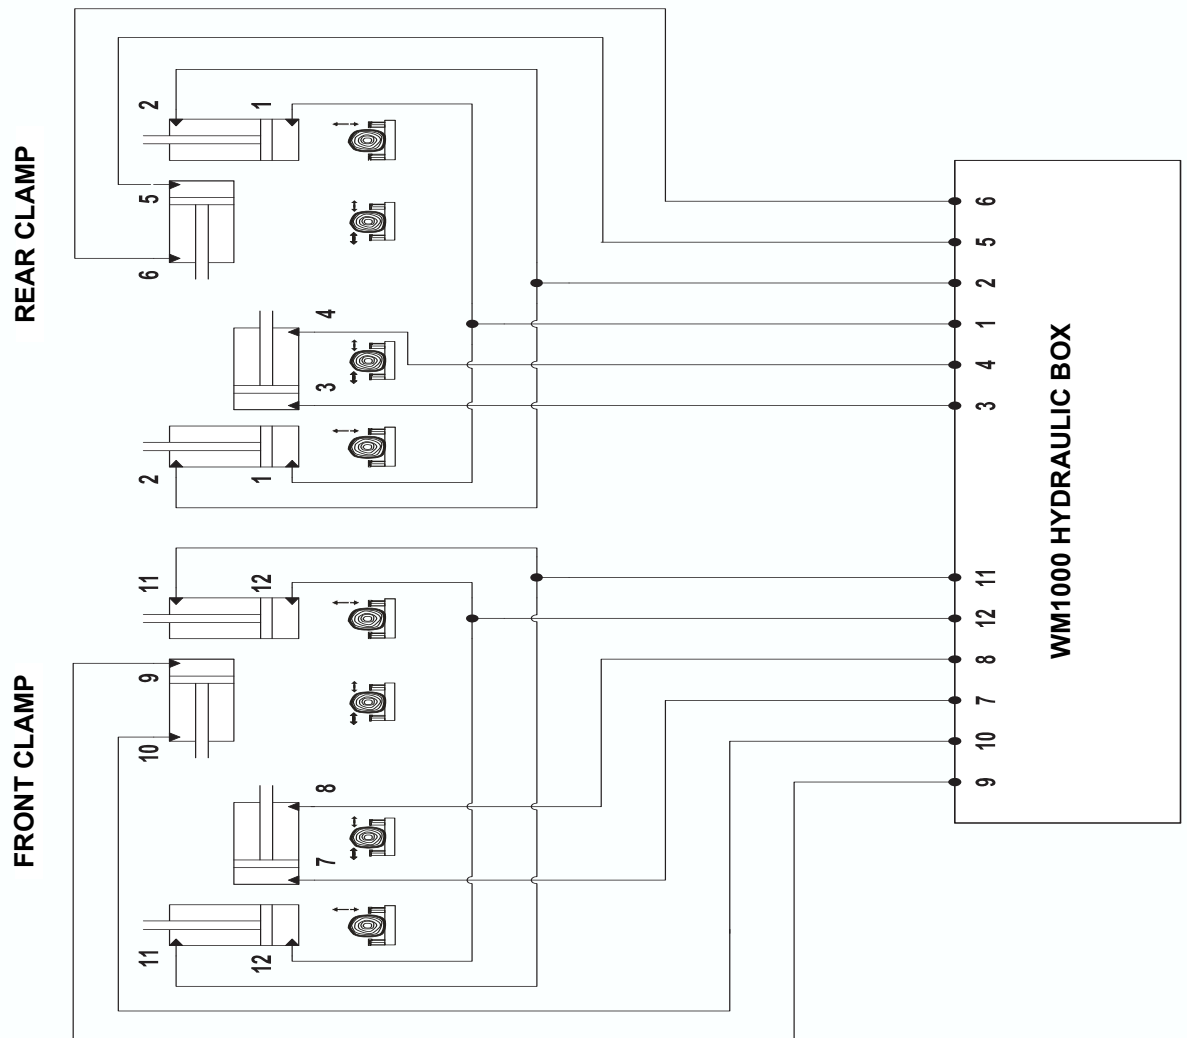


FIG. 7-4

## EC declaration of conformity according to EC Machinery Directive 2006/42/EC, Annex II, 1.A

**Manufacturer:**

Wood-Mizer Industries sp. z o.o.  
Nagórna 114, 62-600 Koło; Poland  
Tel. +48 63 26 26 000

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Following machine in our delivered version complies with the appropriate essential safety and health requirements of the EC Machinery Directive 2006/42/EC based on its design and type, as brought into circulation by us. In case of alteration of the machine, not agreed by us, this declaration is no longer valid.

**We, the undersigned herewith declare, that:**

Designation of the machine: **Sawmill**  
Type: WM1000MEH50S  
No. of manufacturer: .....

**Is in conformity with the following  
EC directives:**

EC Machinery Directive 2006/42/EC  
EC Electromagnetic Compatibility Directive  
2014/30/EU

**And is in conformity with the following  
Harmonized Standards:**

PN-EN 1807-2:2013-08  
PN-EN ISO 13849-1:2016-02  
PN-EN 60204-1:2018-12

Notified Body according to annex IV :

Notification No:

EC type-examination certificate no.

Responsible for Technical Documentation: Piotr Adamiec / Engineering Manager  
Wood-Mizer Industries Sp. z o.o.  
62-600 Koło, Nagórna 114, Poland  
Tel. +48 63 26 26 000

Place/Date/Authorized Signature: Koło, 10.05.2016 

Title: Engineering Manager