

Wood-Mizer®

Debarker

Safety, Installation, Operation, Maintenance & Parts Manual

Debarker for LT15WC

rev. A.1



Safety is our #1 concern! Read and understand all safety information and instructions before operating, setting up or maintaining this machine

Form #789

Table of Contents

Section-Page

SECTION 1	SAFETY & GENERAL INFORMATION	1-1
1.1	Installation and Maintenance.....	1-1
1.2	Operation and Towing.....	1-2
SECTION 2	DEBARKER INSTALLATION	2-1
2.1	Debarker Frame Mounting Holes.....	2-2
2.2	Debarker Installation	2-2
2.3	Wiring Instructions.....	2-5
2.4	Control Component Installation	2-5
2.5	Alignment	2-8
2.6	Debarker arm adjustment	2-10
SECTION 3	OPERATION AND MAINTENANCE	3-1
3.1	Locking Pin Operation	3-1
3.2	Operation	3-2
3.3	Maintenance	3-3
3.4	Troubleshooting.....	3-8
SECTION 4	DEBARKER PARTS	4-1
4.1	How To Use The Parts List	4-1
4.2	Sample Assembly	4-1
4.3	Debarker. 534512	4-2
4.4	AC Debarker Blade Drive (096239)	4-5
4.3	Debarker, LT15WC DC (No. 531690)	4-7
4.4	Debarker Blade Drive Assembly (No. 100922)	4-10
4.5	Wide Debarker Decal Kit. 580555_538001	4-12

SECTION 1 SAFETY & GENERAL INFORMATION



This symbol calls your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions. This symbol accompanies a signal word. The word **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. **WARNING** suggests a potentially hazardous situation which, if not avoided, could result in death or serious injury. **CAUTION** refers to potentially hazardous situations which, if not avoided, may result in minor or moderate injury to persons or equipment. Read all safety instructions before operating this equipment and observe all safety warnings!

1.1 Installation and Maintenance



DANGER! On electric mills, hazardous voltage inside the electrical boxes and at the electric motor can cause shock, burns, or death. Disconnect and lock out power supply before performing debarker installation! Follow all applicable electrical codes.

DANGER! On gas/diesel mills, before performing any service to this equipment, turn the key to the OFF position, remove the key, and disconnect the sawmill battery ground terminal. Failure to do so will result in serious injury or death.

DANGER! Make sure all electrical installation, service and/or maintenance work is performed by a qualified electrician and is in accordance with applicable electrical codes. Failure to do so will result in serious injury or death.



WARNING! Before replacing the debarker blade, move the sawmill blade guide arm all the way in to cover the blade teeth. Failure to do so may result in serious injury or death.

1.2 Operation and Towing



DANGER! Make sure all guards and covers are in place and secured before operating the debarker option. Failure to do so may result in serious injury.

DANGER! Keep all persons out of the path of moving equipment when operating the debarker. Failure to do so may result in serious injury.


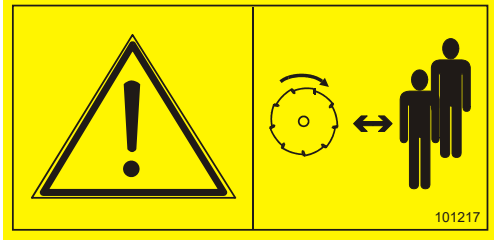


DANGER! Always remove the key from the control panel before preparing the debarker for towing. Failure to do so may result in serious injury.

WARNING! If the debarker continues to run with the key switch in the OFF position, remove the negative battery terminal from the battery post.

DO NOT continue to operate the mill if the main key switch does not control debarker operation. Doing so could result in serious injury. Call Wood-Mizer customer service for more information.

See Table 1-1. See the table below for descriptions of the pictographic warning and informational decals placed on the LT15WC sawmill debarker.

TABLE 1-1

Decal View	W-M No.	Description
	101216	CAUTION! Read thoroughly the manual before operating the machine. Observe all safety instructions and rules when operating the sawmill.
	101217	CAUTION! Keep away from the debarker blade!
	101218	CAUTION! Disconnect power supply before servicing the debarker.
	S20097	Debarker Motor Revolutions Direction

SECTION 2 DEBARKER INSTALLATION



DANGER! On electric mills, hazardous voltage inside the electrical boxes and at the electric motor can cause shock, burns, or death. Disconnect and lock out power supply before performing debarker installation! Follow all applicable electrical codes.

2.1 Debarker Frame Mounting Holes

IMPORTANT! Sawmills are equipped with pre-drilled debarker mounting holes. **Verify hole locations before beginning Debarker installation. Proper hole location is imperative for safe and effective Debarker operation.**

2.2 Debarker Installation

1. Open the blade housing cover. Remove the hole plug from the hole in the saw head.

See Figure 2-1.

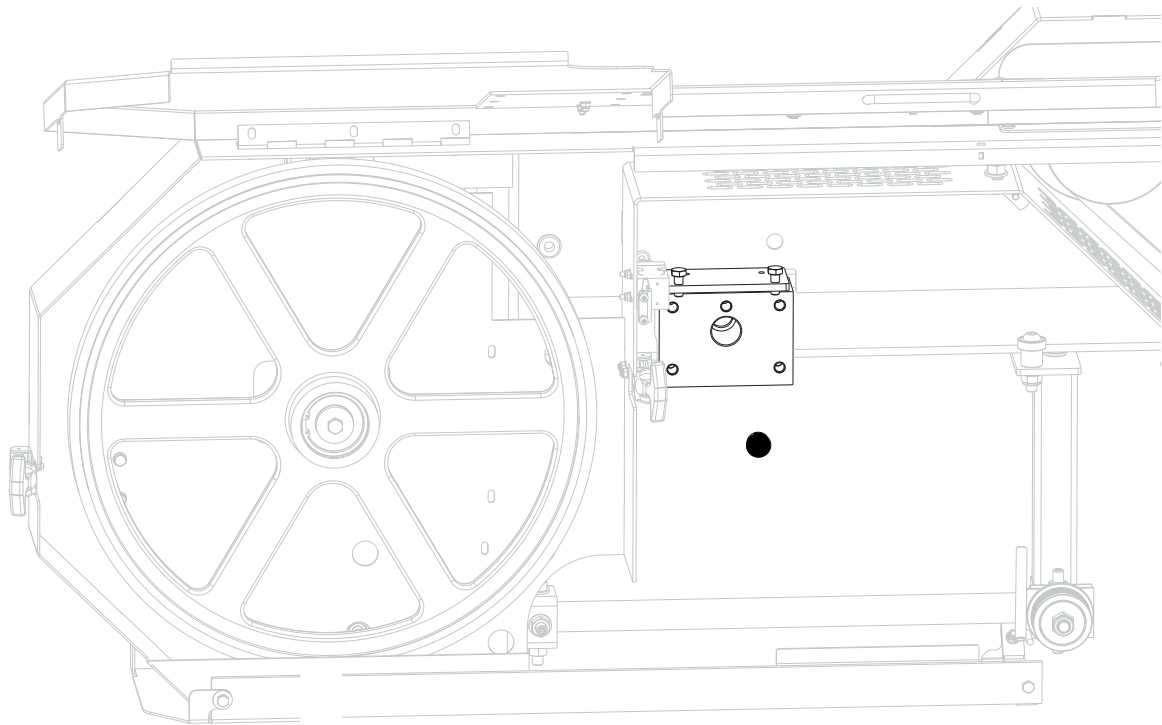


FIG. 2-1

2 Debarker Installation

Debarker Installation

2. Assemble the debarker to the sawmill saw head. Align the debarker arm holes and the holes in the saw head. Route the debarker wire harness through the protective conduit and next through the saw head tube to the electric box and next through the saw head hole and debarker arm.

See Figure 2-2.


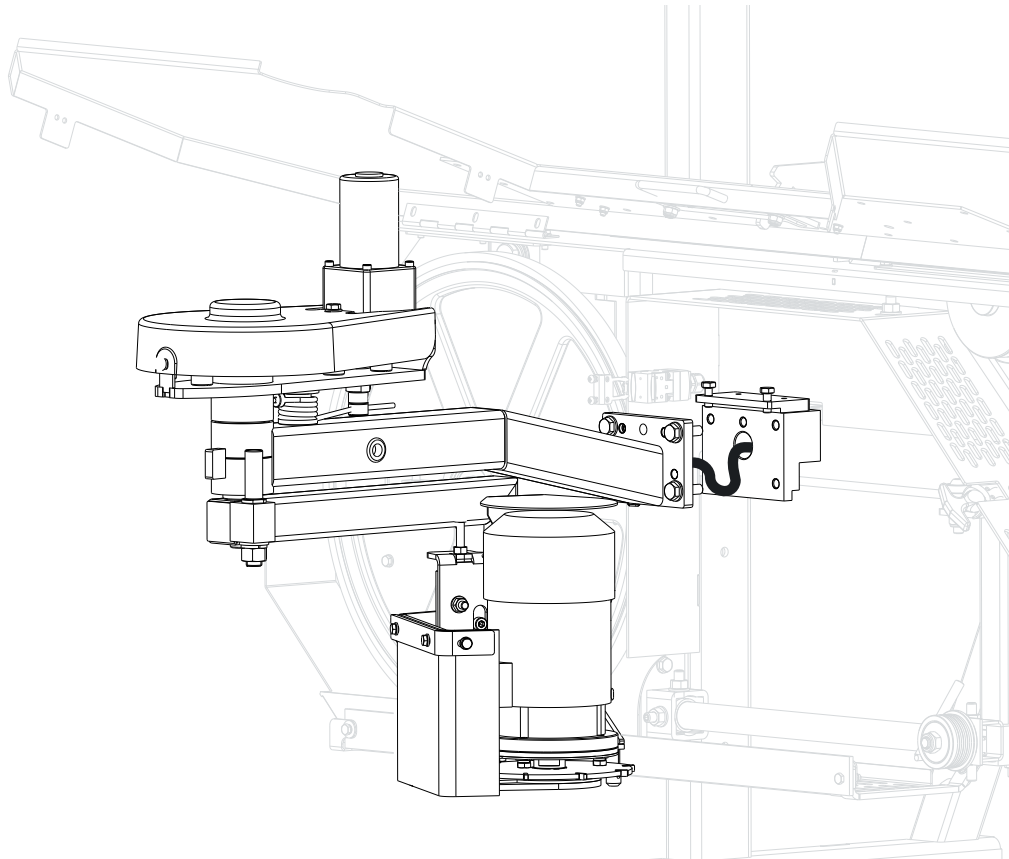


FIG. 2-2

3. Take out the wire harness from the debarker arm. Slide the debarker motor harness through one of the supplied harness clamps. Secure the wires with wire ties.

See Figure 2-3.

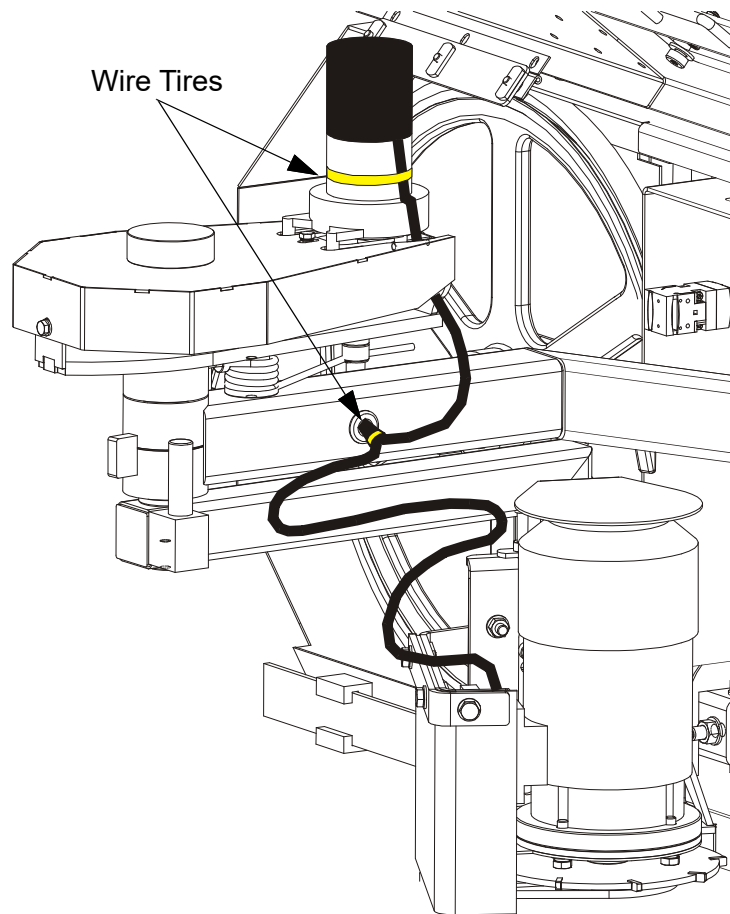

150204

FIG. 2-3

2.3 Wiring Instructions



DANGER! On electric mills, hazardous voltage inside the electrical boxes and at the electric motor can cause shock, burns, or death. Disconnect and lock out power supply before installing the debarker! Follow all applicable electrical codes.



IMPORTANT! Avoid pinch and pivot points, unnecessary wire bending and open spaces where the wire could get caught by a log, etc. If you have any questions, call Wood-Mizer customer service.



IMPORTANT! Make sure that the ring terminals do not touch the motor body.

2.4 Control Component Installation



DANGER! On electric mills, hazardous voltage inside the electrical boxes and at the electric motor can cause shock, burns, or death. Disconnect and lock out power supply before installing the debarker! Follow all applicable electrical codes.

1. Remove the front panel (leave wire connections) from the control box.
2. Using the back side of the front panel for a guideline, cut out holes in the front panel lexan decal for the debarker switches. Install the provided debarker on/off switch, in/out switch, nylon washer, and rubber boots in place as shown.

See Figure 2-4.

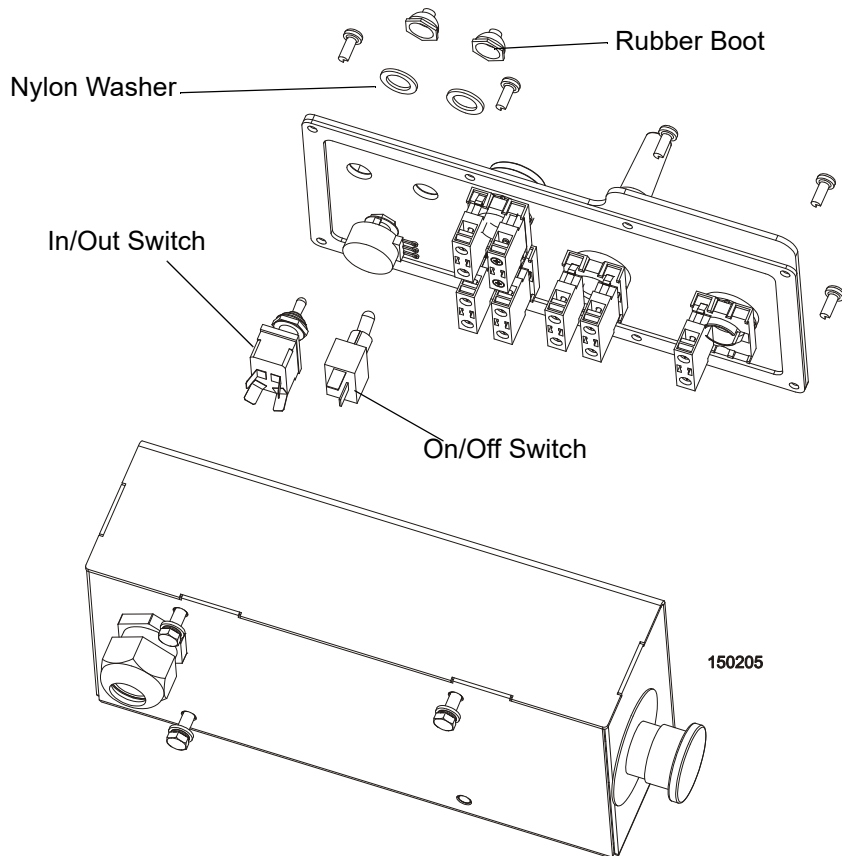


FIG. 2-4

2 Debarker Installation

Control Component Installation

See Figure 2-5. The figure below shows connections of the debarker wires with the LT15 sawmill control panel.

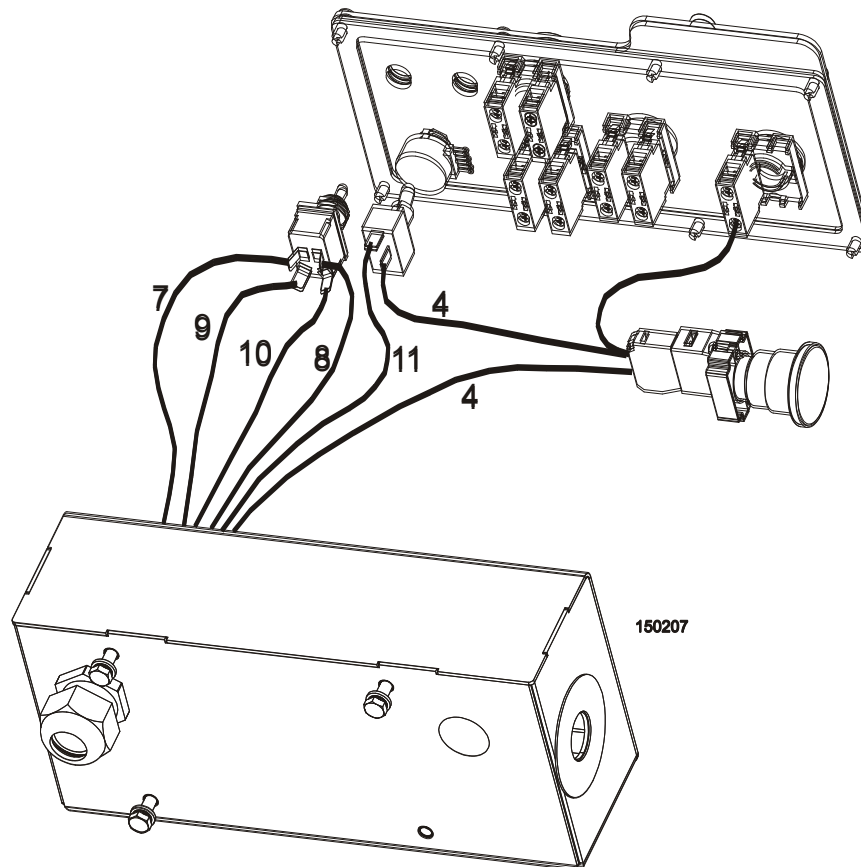


FIG. 2-5

NOTE: If the debarker arm movement direction is not appropriate (e.g. the arm moves out when the switch is pushed left), interchange the 9 and 10 wire connections.

3. Reinstall the front panel.

2.5 Alignment

The debarker blade should remain parallel to the sawmill blade throughout the debarker's range of motion.

1. Turn the key on the control box to ON and use the debarker in/out switch to move the debarker all the way in. Turn the key to OFF (0) and remove the key. This will prevent the debarker from being turned on while performing alignment procedures.
2. Clip the blade guide alignment tool to the sawmill blade. Make sure the tool lies flat on the blade and does not contact a tooth.

See Figure 2-6.

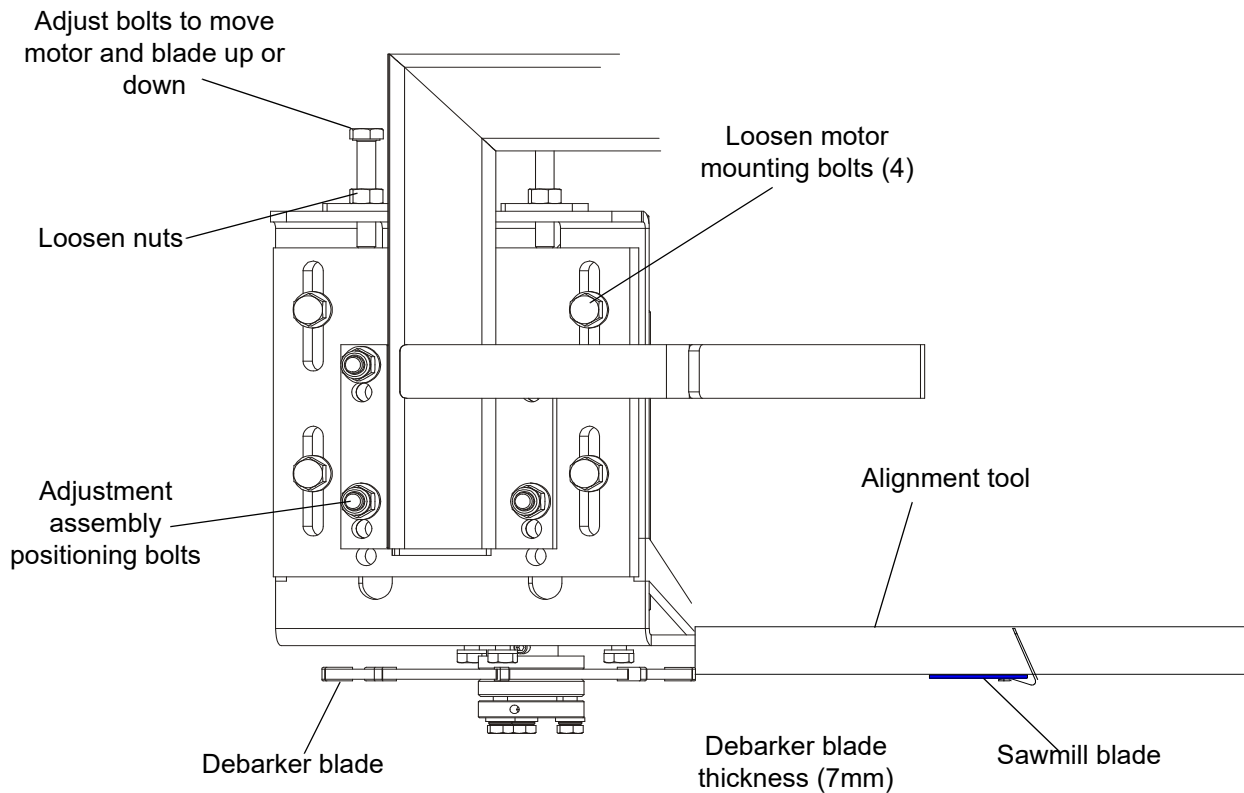


FIG. 2-6

2

Debarker Installation

Alignment

3. Check the height of the debarker blade in relation to the alignment tool. The bottom edge of the alignment tool should be at the height of 1/2 the debarker blade thickness.

To adjust the blade up or down, loosen the four blade motor mount bolts. Loosen the nuts on the blade adjustment bolts. Turn the adjustment bolts clockwise to push the motor and blade down. Turn the adjustment bolts counterclockwise to raise the motor and blade. Retighten the nuts on the adjustment bolts and four motor mount bolts.

NOTE: If the blade adjustment range is insufficient, unscrew the positioning bolts and change the adjustment assembly position.

4. Insert the key and use the debarker in/out switch to move the debarker all the way out. Turn the key to OFF (0) and remove the key.
5. Move the blade guide alignment tool on the sawmill blade and check the position of the debarker blade in relation to the tool. If the bottom edge of alignment tool is not at the height of 1/2 the debarker blade thickness, adjust the debarker mount.

2.6 Debarker arm adjustment

In order to provide proper operation of the debarker, its blade should remain parallel to the sawmill blade throughout the debarker's range of motion.

1. Loosen the mounting bolts (A).
2. Adjust the debarker arm in the vertical plane using the hex screws (B).
3. Lightly tighten screws (A), and then adjust the tilt of the debarker using bolts (C). The bolt (D) is the pivot point of the debarker.
4. After completing the adjustment, tighten the mounting bolts (A).

See figure 2-7.

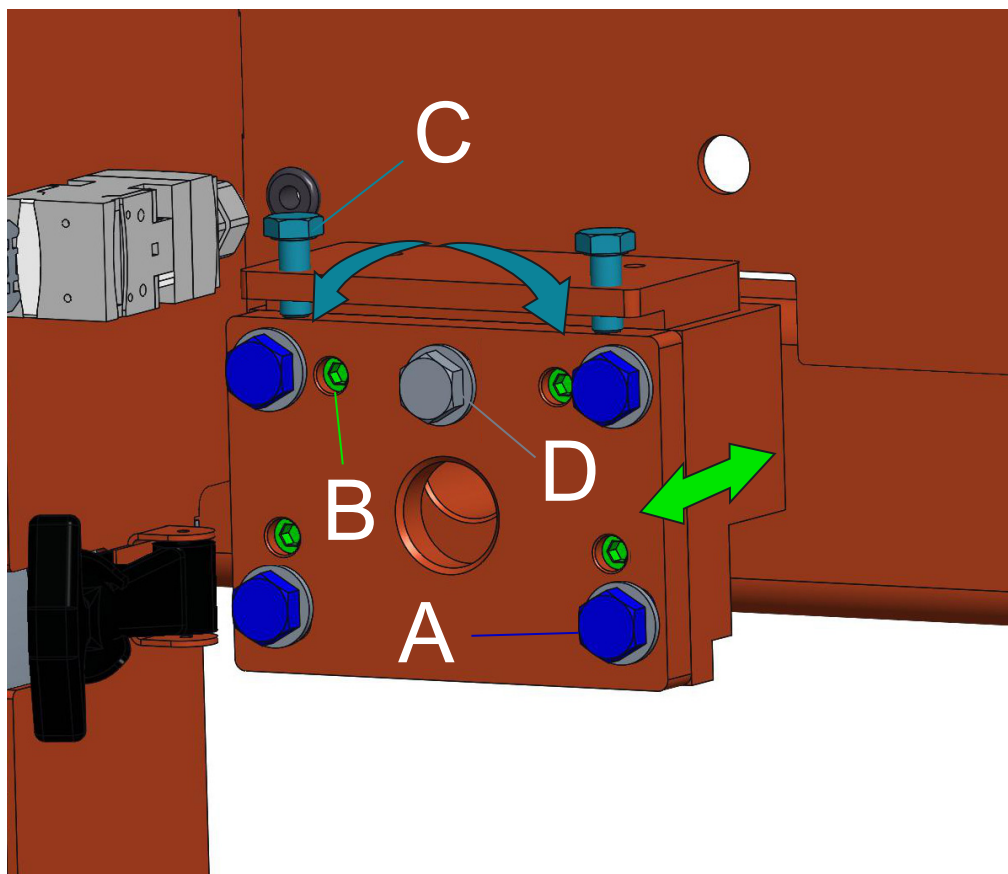


FIG. 2-7

SECTION 3 OPERATION AND MAINTENANCE

3.1 Locking Pin Operation

See Figure 3-1. The debarker is equipped with a locking pin to lock the debarker arm during transportation. To lock the debarker arm, place the locking pin in two blocks welded to this arm as shown in the figure below.

Before operating the debarker, make sure the locking pin is removed. Turn the key switch to OFF (0) and remove the key. Pull the debarker out to relieve pressure on the locking pin. Pull down the split cotter. Remove the locking pin.

Before towing the sawmill, lock the debarker in the travel position. Turn the key switch to OFF (0) and remove the key. Manually move the debarker arm to align the locking pin mounting holes. Insert the locking pin into the holes and secure with the split cotter.

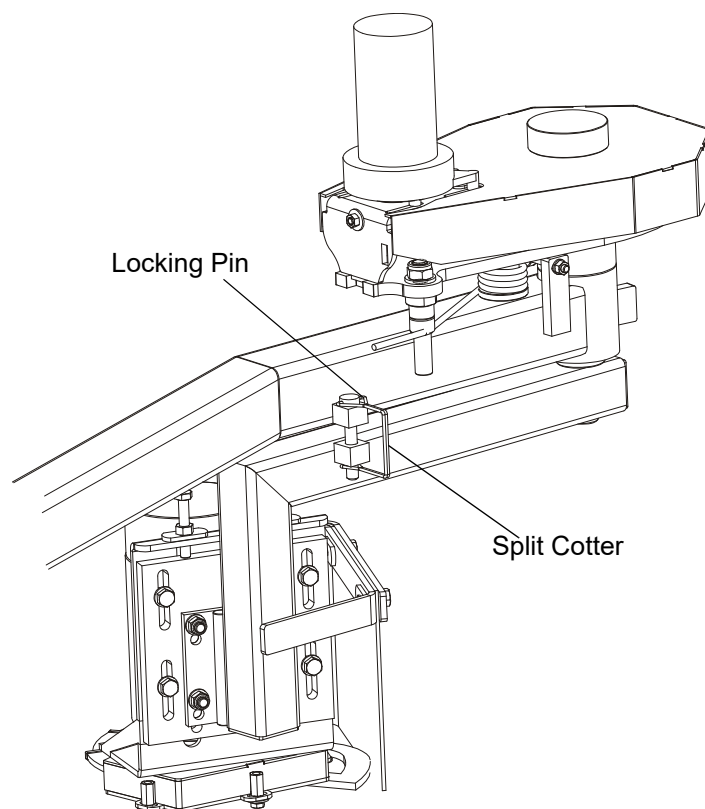


FIG. 3-1

3.2 Operation

The Debarker Option allows you to remove bark from logs before cutting.



DANGER! Make sure all guards and covers are in place and secured before operating the debarker option. Failure to do so may result in serious injury.

DANGER! Keep all persons out of the path of moving equipment when operating the debarker. Failure to do so will result in serious injury.

1. Use the in/out switch on the control box to pivot the debarker all the way out.
2. Move the sawmill saw head forward and pivot the debarker in until the front fence engages with the end/side of the log. Continue to pivot the debarker in until the arm spring is half loaded.
3. Turn the debarker on/off switch to ON (1).
4. Proceed with cutting. The spring will keep the debarker against the side of the log.



NOTE: The debarker can continuously remove up to approximately 2cm of material from the log; no motor cool down time is required. Slower feed rates may be required for optimal debarker operation.

5. Once the saw head is past the end of the log, pivot the debarker away from the log. Return the saw head.
6. When done sawing and ready to store or transport the sawmill, place the debarker in its travel position before towing the sawmill ([See Section 3.1](#)).

3.3 Maintenance



DANGER! Before performing any service to this equipment, turn the key to the OFF (0) position and remove the key. Failure to do so will result in serious injury or death.

1. Periodically check the flexible guard. Adjust the guard up or down so the bottom is even with the bottom of the debarker blade. Replace the guard as needed.
2. Periodically check the debarker blade. Align or replace as needed.



WARNING! Before replacing the debarker blade, move the sawmill blade guide arm in front of the sawmill blade to cover the blade teeth. Failure to do so may result in serious injury or death.

To replace the debarker blade, remove the lower blade guard plate.

Unscrew the three mounting bolts. Remove the split taper bushing, the mounting bushing and the blade. Reinstall both bushings with the new blade. Reinstall the bolts and washers. Reinstall the lower blade guard plate.



WARNING! Adjusting the belt and spring tension (described below) is very important. Failure to do it properly will result in damage to the debarker blade motor.

3. Once a week check the belt for tension and wear. Adjust or replace as necessary. To tighten the belt, turn the key switch to OFF (0) and remove the key. Remove the belt guard and loosen the four motor mount screws. Turn the adjustment nut clockwise to move the motor out and tighten the belt. The belt should be tensioned to allow 6-7 mm deflection measured halfway between the pulleys with 2 kg force. Retighten the motor mount screws and reinstall the belt guard.

See Figure 3-2.

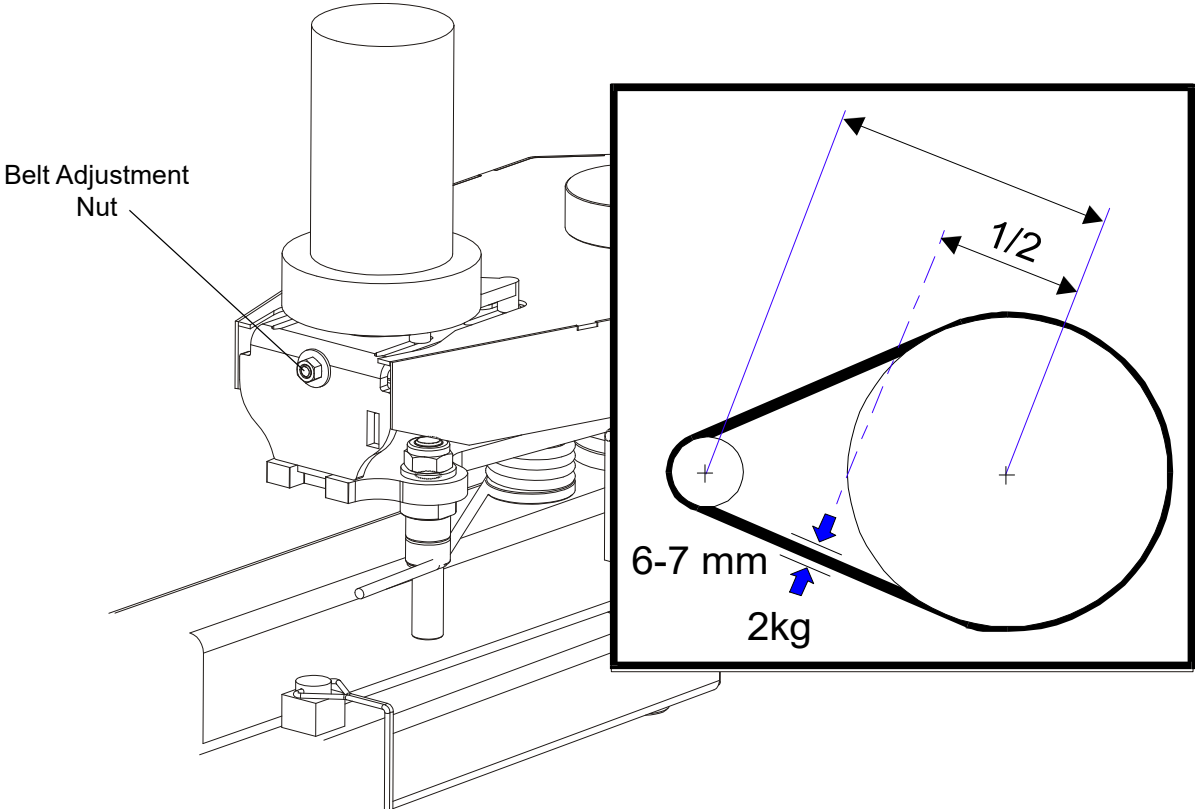


FIG. 3-2

3 Operation and Maintenance

Maintenance

4. Once a week and after each spring replacement, check the tension of the spring located on the fixed debarker arm. To do this, pivot the debarker all the way in using the in/out switch. Turn the key switch to OFF (0) and remove the key. Pull the debarker arm. The spring should be tensioned so that the debarker arm can be moved halfway with a 4.5 kg force. Adjust the spring tension if necessary.

See Figure 3-3.

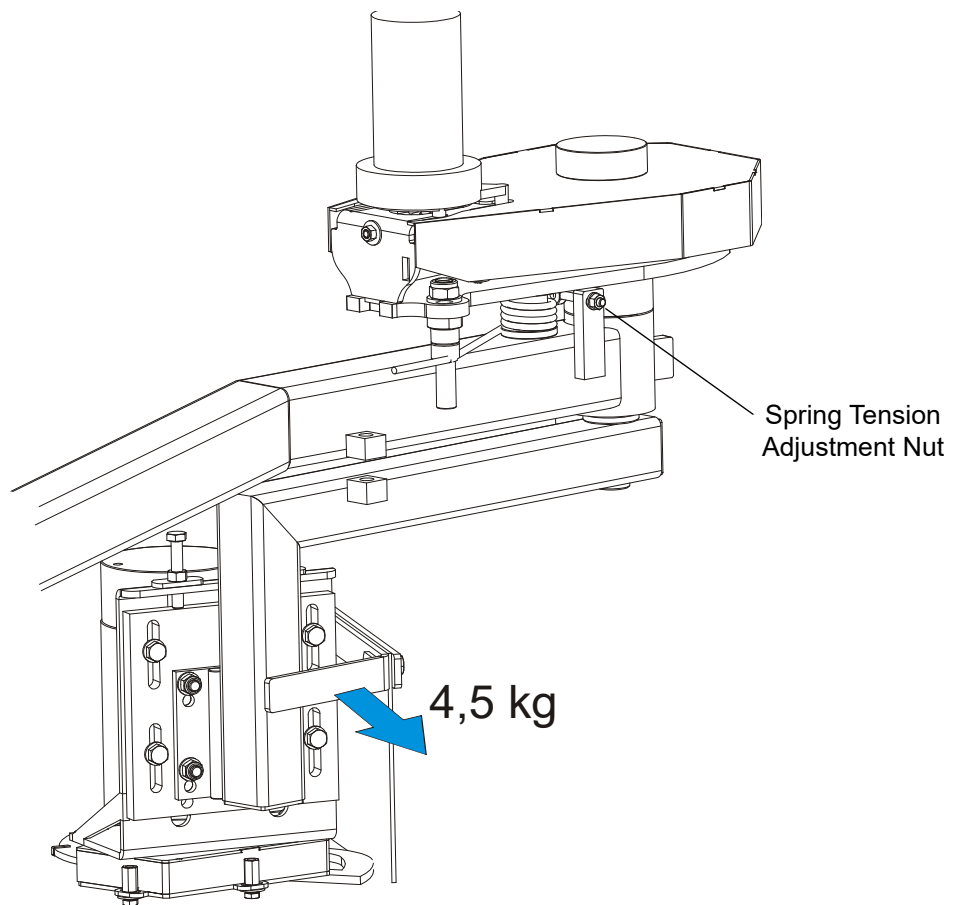


FIG. 3-3

5. If you have an AC sawmill, once a week check the braking time. The time from switching off the debarker blade till the moment when the blade is completely stopped should be no longer than 10 seconds.

If this time is longer than 10 seconds, loosen the locking nut and turn right the braking pin adjustment screw by 360°. Tighten the locking nut. Recheck the braking time.

See Figure 3-4.

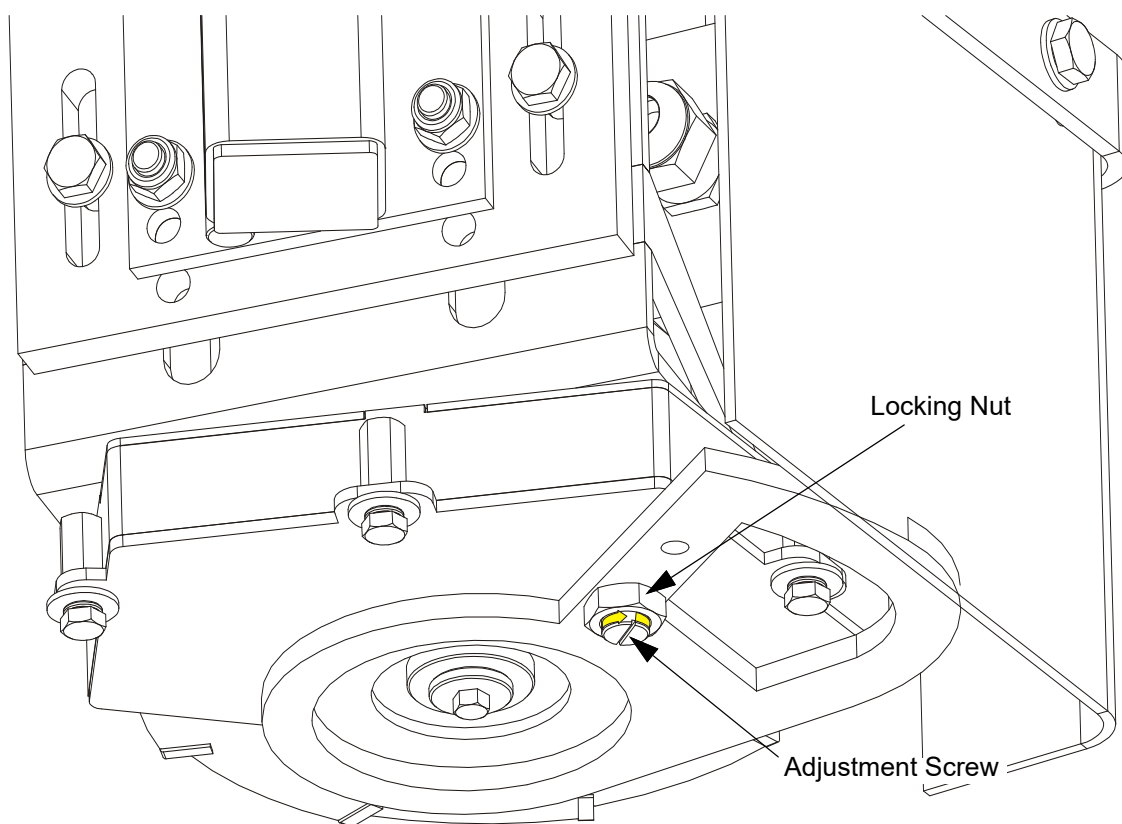


FIG. 3-4



WARNING! Always adjust the braking pin as described above. Failure to do so may result in serious injury.

If the braking pin is worn, or the spring is damaged, it is necessary to replace them ([See Section 4.3](#) for part numbers).

To replace the braking pin and/or spring with a new one, dismount the blade guard. Replace the braking pin and/or spring with a new one. Loosen the locking nut and turn the adjustment screw left or right so that the braking pin protrudes about 8mm - see the figure

3 Operation and Maintenance

Maintenance

below.

See Figure 3-5.

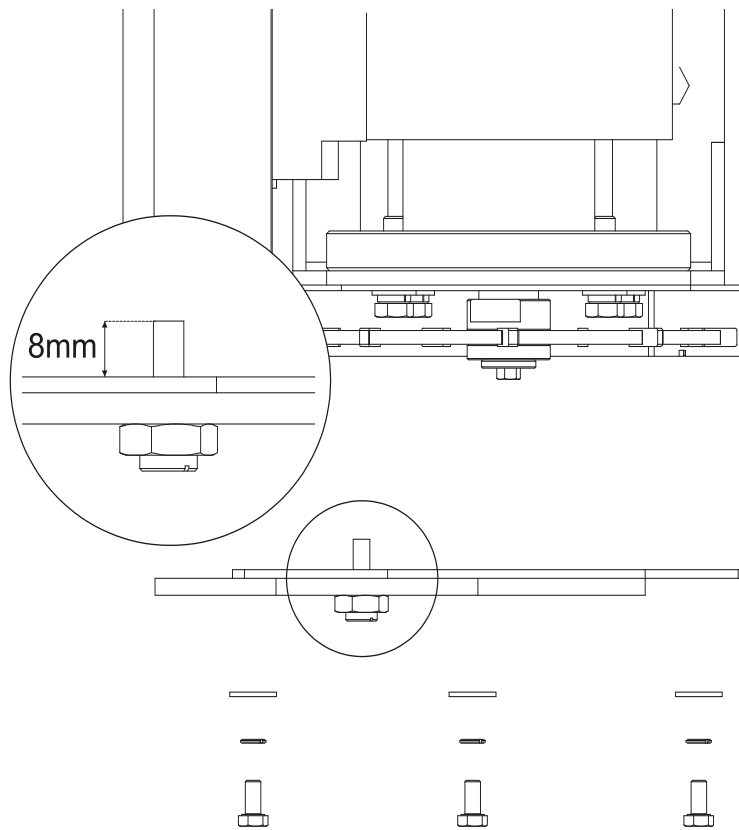


FIG. 3-5

3.4 Troubleshooting



DANGER! Before performing any service to this equipment, turn the key to the OFF (0) position, remove the key, and disconnect the sawmill battery ground terminal. Failure to do so will result in serious injury or death.

PROBLEM	CAUSE	SOLUTION
70 amp circuit breaker tripping	Wood or bark jammed in blade guard	Turn key to OFF position, remove key. Remove wood or bark from blade guard
	Pivot pin is binding.	Inspect for bind by moving debarker head to full in position. Turn key to OFF position, remove key. Pull arm to full out position by hand. Use a weight scale if available. Should not have more than 6kg of resistance to pull out. Check the spring and belt tension.
	Ring terminal of red wire touching debarker motor housing or motor	Move terminal away from motor housing. Reset circuit breaker and retest.
Light comes on, but debarker motor does not operate	Circuit breaker weak from repeated tripping.	Replace circuit breaker
	Circuit breaker tripped	Reset circuit breaker.
Debarker shuts off, but the circuit breaker is not tripped.	Bad ignition wire connection	Check ignition wire connection outside and inside the debarker control box.
	Intermittent key switch	Replace key switch
	Other loose wiring connections	Check wiring connections inside control box.
Debarker does not shut off.	Solenoid is stuck closed.	Replace solenoid.
Debarker arm does not move IN or OUT	Drive belt too loose	Tighten enough to allow movement. DO NOT OVER-TIGHTEN.
	Switch not working properly	Check wire connections to switch. If wiring looks OK, replace switch.
Blade Motor Damage	Motor Overload	Replace the blade motor. Adjust the belt and spring tension. See page 3.

SECTION 4 DEBARKER PARTS

4.1 How To Use The Parts List

- Use the table of contents or index to locate the assembly that contains the part you need.
- Go to the appropriate section and locate the part in the illustration.
- Use the number pointing to the part to locate the correct part number and description in the table.
- Parts shown indented under another part are included with that part.
- Parts marked with a diamond (◆) are only available in the assembly listed above the part.

See the sample table below. Sample Part #A01111 includes part F02222-2 and subassembly A03333. Subassembly A03333 includes part S04444-4 and subassembly K05555. The diamond (◆) indicates that S04444-4 is not available except in subassembly A03333. Subassembly K05555 includes parts M06666 and F07777-77. The diamond (◆) indicates M06666 is not available except in subassembly K05555.


4.2 Sample Assembly				
REF	DESCRIPTION (◆ Indicates Parts Available In Assemblies Only)	PART #	QTY.	
	SAMPLE ASSEMBLY, COMPLETE (INCLUDES ALL INDENTED PARTS BELOW)	A01111	1	
1	Sample Part	F02222-22	1	
	Sample Subassembly (Includes All Indented Parts Below)	A03333	1	
2	Sample Part (◆ Indicates Part Is Only Available With A03333)	S04444-4	1	◆
	Sample Subassembly (Includes All Indented Parts Below)	K05555	1	
3	Sample Part (◆ Indicates Part Is Only Available With K05555)	M06666	2	◆
4	Sample Part	F07777-77	1	

To Order Parts:

- From Europe call our European Headquarters and Manufacturing Facility in Kolo, Poland at **+48-63-2626000** or **+48-3912-1319**. From the continental U.S., call **1-800-448-7881** to order parts. Have your customer number, vehicle identification number, and part numbers ready when you call.
- From other international locations, contact the Wood-Mizer distributor in your area for parts.

4.3 Debarker. 534512

534512_001
534512

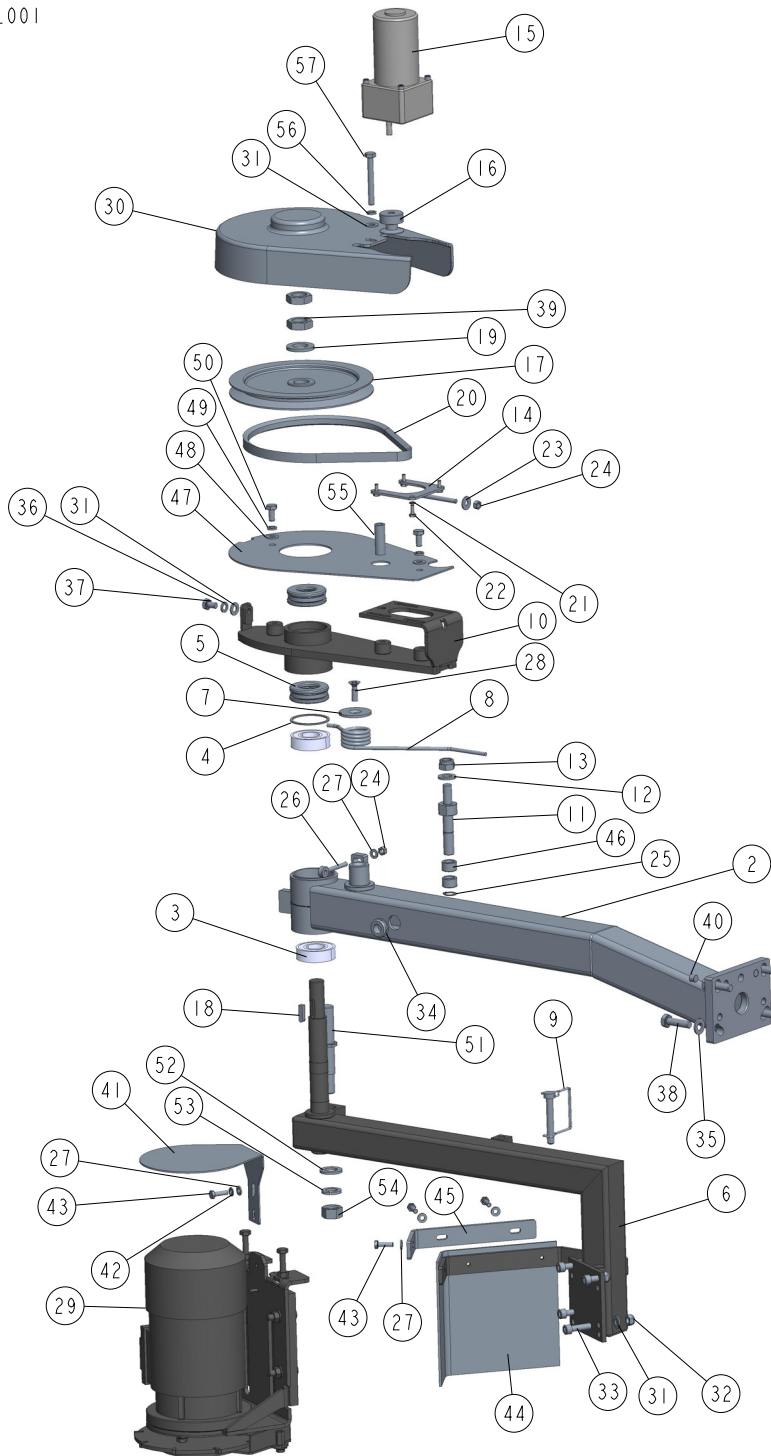

REF	DESCRIPTION (◆ indicates parts available in assemblies only)	PART #	QTY
1	DEBARKER LT15 WIDE AC	534512	1
2	ARM, DEBARKER SHORT	534514-1	1
3	BEARING, 6205 2RS BALL	091804	2
4	RING, SPACER	098491	1
5	BEARING, 51305 AXIAL	098597	2


REF	DESCRIPTION (◆ indicates parts available in assemblies only)	PART #	QTY	
6	ARM, DEBARKER PIVOT	534516-1	1	
7	PLATE, SPRING BUSHING	098592-1	1	
8	SPRING, DEBARKER RETAINING	098605	1	
9	PIN, 3/8X2 1/4 SNAP	014151	1	
10	ARM, DEBARKER	098626-1	1	
11	PIN, DEBARKER	098593-1	1	
12	WASHER, 13 FLAT ZINC	F81056-1	1	
13	NUT, M12-8 HEX NYLON ZINC LOCK	F81034-2	1	
14	TENSIONER WELDMENT, DEBARKER IN/OUT MOTO	089969-1	1	
15	MOTOREDUCER COMPACT	557161	1	
16	SHEAVE, DEBARKER MOTOR ZINC-PLATED	089954-1	1	
17	PULLEY, DEBARKER MOTOR	098594-1	1	
18	KEY, 6X6X23	089191	1	
19	WASHER, 21 FLAT ZINC	F81059-2	1	
20	BELT, 4L280V	P04031	1	
21	WASHER, 5.1 SPLIT LOCK ZINC	F81052-2	4	
22	BOLT, #10-32X1/2 HH	F05004-60	4	
23	WASHER, 6.5 SPECIAL FLAT ZINC	F81053-11	1	
24	NUT, M6 8 HEX ZINC	F81031-1	2	
25	RING, Z14 OUTSIDE RETAINING	F81090-31	1	
26	BOLT, M6 TURNED EYE	098596	1	
27	WASHER, 6.4 FLAT ZINC	F81053-1	5	
28	SCREW, M8X25-5.8 CROSS RECESSED COUNTERS	F81002-51	1	
29	DRIVE ASSEMBLY, AC DEBARKER BLADE See Section 4.4	096239	1	
30	GUARD, DEBARKER BELT	557350	1	
31	WASHER, 8.4 FLAT ZINC	F81054-1	6	
32	NUT, M8-8-B HEX NYLON ZINC LOCK	F81032-2	4	
33	BOLT, M8 X 30-8.8 SOCKET HEAD	F81002-31	4	
34	GROMMET, 20/13 RUBBER	086188	1	
35	WASHER, 10.5 FLAT ZINC	F81055-1	4	
36	WASHER 8,2 SPLIT LOCK	F81053-17	1	
37	BOLT, M8X12-8.8 HEX HEAD FULL THREAD ZIN	F81002-6	1	
38	BOLT, M10X35-8.8 HEX HEAD FULL THREAD ZI	F81003-17	4	
39	NUT, M20X1,5 THIN	F81037-7	2	
40	PLUG, M10X1 DIN906 BN40 ZINC	F81015-3	2	
41	GUARD, DEBARKER MOTOR	101332-1	1	
42	WASHER, 6.1 DIN 127 (A2-304) STAINLESS S	F81053-4	1	
43	BOLT, M6X20-8.8 HEX HEAD FULL THREAD ZIN	F81001-2	4	
44	GUARD, DEBARKER FLEXIBLE DEBRIS	531692	1	
45	BAR, WRAP-AROUND	531691-1	1	
46	BEARING, HK 1412 NEEDLE	098595	2	
-	COVER ASSEMBLY	519064	1	
47	PLATE, GUARD	557349-1	1	
48	WASHER, 8.4 FLAT ZINC	F81054-1	2	
49	WASHER, 8.2 SPLIT LOCK ZINC	F81054-4	2	
50	BOLT, M8X16-8.8-B HEX HEAD FULL THREAD Z	F81002-20	2	
-	PIN, COMPLETE	519066	1	

REF	DESCRIPTION (◆ indicates parts available in assemblies only)	PART #	QTY	
51	PIN, LOCKING	519065-1	1	
52	WASHER, 17 SPLIT LOCK ZINC	F81058-1	1	
53	WASHER, 16.3 SPLIT LOCK ZINC	F81058-2	1	
54	NUT, M16-8 HEX ZINC	F81036-1	1	
55	BUSHING, 9/13-40.5	519067-1	1	
56	WASHER, 8.2 SPLIT LOCK ZINC	F81054-4	1	
57	BOLT, M8X65 8.8 HEX HEAD FULL THREAD ZIN	F81002-9	1	

REF.	DESCRIPTION (* indicates parts available in assemblies only)	PART #	QTY	
-	DRIVE ASSEMBLY, AC DEBARKER BLADE	096239-UL	1	
1	MOTOR, STKG71X-2C IMB5 AC DEBARKER	096777	1	
	MOTOR, STKG71X-2C IMB5 AC DEBARKER	096777-UL	1	
2	GUARD, DEBARKER BLADE UPPER	096244-1	1	
3	BUSHING, CLAMPING	096088	1	
4	BLADE, 180 B-06.5/5.0 D-25.5 - COMPLETE	083848-1	1	
5	BUSHING, RETAINING	096087	1	
6	WASHER	096238-1	1	
7	GUARD, DEBARKER BLADE LOWER	096245-1	1	
8	BRACKET, DEBARKER MOTOR MOUNT	096780-1	1	
9	PLATE, DEBARKER MOTOR MOUNT	089551	1	
10	WASHER, 8.4 FLAT ZINC	F81054-1	12	
11	NUT, M8-8-B HEX ZINC	F81032-1	6	
12	BOLT, M8X35-8.8 HEX HEAD FULL THREAD ZINC	F81002-13	4	
13	BOLT, M8X50-8.8 HEX HEAD FULL THREAD ZINC	F81002-19	2	
14	WASHER, 6.5 SPECIAL FLAT ZINC	F81053-11	3	
15	WASHER, Z 6.1 SPLIT LOCK ZINC	F81053-3	3	
16	BOLT, M6X12 8.8 HEX HEAD FULL THREAD ZINC	F81001-7	3	
17	WASHER, 8.2 SPLIT LOCK ZINC	F81054-4	4	
18	BOLT, M5X16 8.8 HEX HEAD FULL THREAD ZINC	F81000-20	1	
-	PIN ASSEMBLY, DEBARKER BLADE BRAKING	501464	1	
19	SCREW, M12X17 SET	501462	1	
20	SPRING, 0.5X5.5-7	501463	1	
21	PIN, DEBARKER BLADE BRAKING	501461	1	
22	NUT, M12-04-A THIN	F81034-6	1	
23	PIN, 5X16 ROLL ZINC	F81044-3	1	
24	BOLT, M8X25-8.8-B HEX HEAD FULL THREAD ZINC	F81002-5	4	

4.3 Debarker, LT15WC DC (No. 531690)

531690_001_A
531690_MANUAL

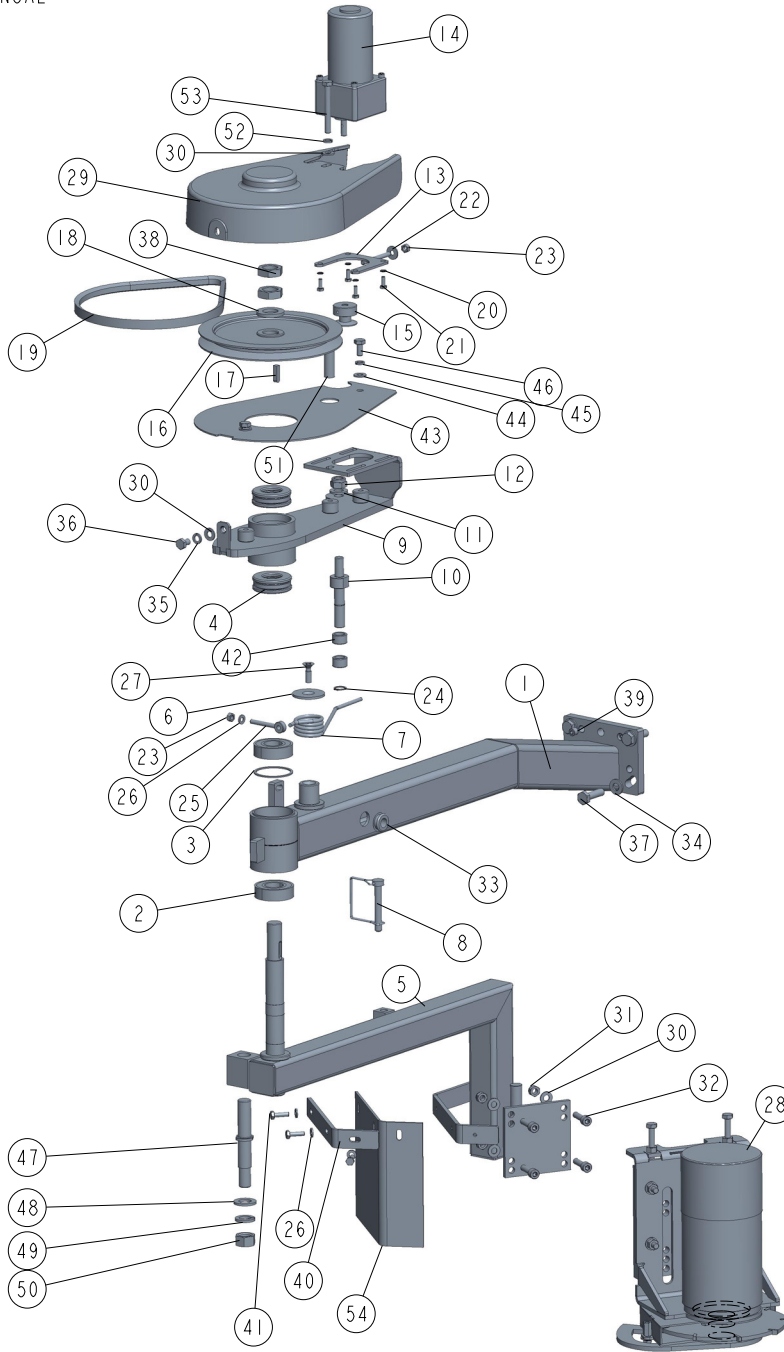


REF	DESCRIPTION (u indicates parts available in assemblies only)	PART #	QTY
-	DEBARKER, LT15WC DC	531690	1
1	ARM, DEBARKER SHORT	534514-1	1
2	BEARING, 6205-2RS BALL	091804	2
3	RING, SPACER	098491	1
4	BEARING, 51305 AXIAL	098597	2

REF	DESCRIPTION (u indicates parts available in assemblies only)	PART #	QTY
5	ARM, DEBARKER PIVOT	534516-1	1
6	PLATE, SPRING BUSHING	098592-1	1
7	SPRING, DEBARKER RETAINING	098605	1
8	PIN, 3/8X2 1/4 SNAP	014151	1
9	ARM, DEBARKER	098626-1	1
10	PIN, DEBARKER	098593-1	1
11	WASHER, 13 FLAT ZINC	F81056-1	1
12	NUT, M12 8 HEX NYLON ZINC LOCK	F81034-2	1
13	TENSIONER WELDMENT, DEBARKER IN/OUT MOTO	089969-1	1
14	MOTOREDUCER COMPACT	557161	1
15	SHEAVE, DEBARKER MOTOR ZINC-PLATED	089954-1	1
16	PULLEY, DEBARKER MOTOR	098594-1	1
17	KEY, 6X6X23	089191	1
18	WASHER, 21 FLAT ZINC	F81059-2	1
19	BELT, 4L280V	P04031	1
20	WASHER, 5.1 SPLIT LOCK ZINC	F81052-2	4
21	BOLT, #10-32X1/2 HH	F05004-60	4
22	WASHER, 6.5 SPECIAL FLAT ZINC	F81053-11	1
23	NUT, M6 8 HEX ZINC	F81031-1	2
24	RING, Z14 OUTSIDE RETAINING	F81090-31	1
25	BOLT, M6 TURNED EYE	098596	1
26	WASHER, 6.4 FLAT ZINC	F81053-1	4
27	SCREW, M8X25-5.8 CROSS RECESSED COUNTERS	F81002-51	1
28	DRIVE ASSEMBLY, DC DEBARKER BLADE See Section 4.4	100922	1
29	GUARD, DEBARKER BELT	557350	1
30	WASHER, 8.4 FLAT ZINC	F81054-1	6
31	NUT, M8 8 HEX NYLON ZINC LOCK	F81032-2	4
32	BOLT, M8 X 30-8.8 SOCKET HEAD	F81002-31	4
33	GROMMET, 20/13 RUBBER	086188	1
34	WASHER, 10.5 ZC DIN 126 ISO 7091	F81055-1	4
35	WASHER 8,2 SPLIT LOCK	F81053-17	1
36	BOLT, M8X12-8.8 HEX HEAD FULL THREAD ZIN	F81002-6	1
37	BOLT, M10X35-8.8 HEX HEAD FULL THREAD ZI	F81003-17	4
38	NUT, M20X1,5 THIN	F81037-7	2
39	PLUG, M10X1 DIN906 BN40 ZINC	F81015-3	2
40	BAR, WRAP-AROUND	531691-1	1
41	BOLT, M6X20-8.8 HEX HEAD FULL THREAD ZIN	F81001-2	3
42	BEARING, HK 1412 NEEDLE	098595	2
-	COVER ASSEMBLY	519064	1
43	PLATE, GUARD	557349-1	1
44	WASHER, 8.4 FLAT ZINC	F81054-1	2
45	WASHER, 8.2 SPLIT LOCK ZINC	F81054-4	2
46	BOLT, M8X16-8.8-B HEX HEAD FULL THREAD Z	F81002-20	2
-	PIN, COMPLETE	519066	1
47	PIN, LOC,KING	519065-1	1
48	WASHER, 17 SPLIT LOCK ZINC	F81058-1	1
49	WASHER, 16.3 SPLIT LOCK ZINC	F81058-2	1

REF	DESCRIPTION (u indicates parts available in assemblies only)	PART #	QTY	
50	NUT, M16-8 HEX ZINC	F81036-1	1	
51	BUSHING, 9/13-40.5	519067-1	1	
52	WASHER, 8.2 SPLIT LOCK ZINC	F81054-4	1	
53	BOLT, M8X65 8.8 HEX HEAD FULL THREAD ZIN	F81002-9	1	
54	GUARD, DEBARKER FLEXIBLE DEBRIS	531692	1	

4.4 Debarker Blade Drive Assembly (No. 100922)

100922_001
100922_MANUAL


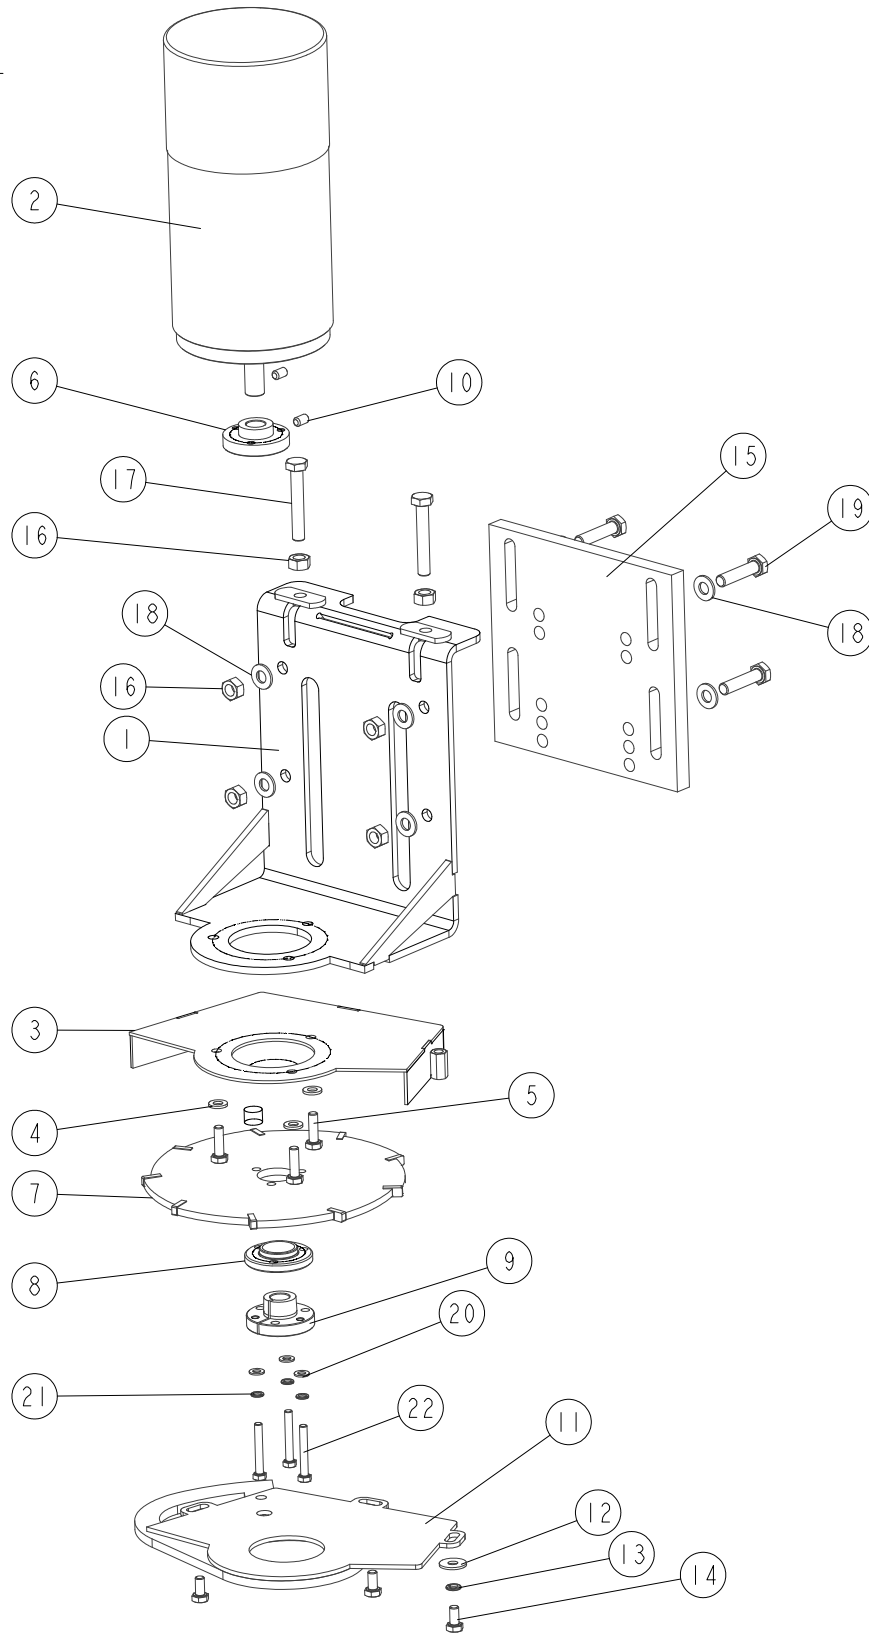


REF.	DESCRIPTION (* indicates parts available in assemblies only)	PART #	QTY
-	MOTOR ASSEMBLY, DEBARKER BLADE	100922	1

REF.	DESCRIPTION (* indicates parts available in assemblies only)	PART #	QTY	
1	BRACKET, DC DEBARKER MOTOR	097493-1	1	
2	MOTOR, 0.75HP/1550 R.P.M. 12V DC	100918	1	
3	GUARD, DEBARKER BLADE UPPER	097499-1	1	
4	WASHER, 6.4 FLAT ZINC	F81053-1	3	
5	BOLT, M6X20 8.8 HEX HEAD FULL THREAD ZINC	F81001-2	3	
6	BUSHING, CLAMPING	097496	1	
7	BLADE, 180 B-06.5/5.0 D-25.5 - COMPLETE	083848-1	1	
8	BUSHING, MOUNTING	097495	1	
9	BUSHING, SPLIT TAPER	097494	1	
10	SCREW, M6X10-45H HEX SOCKET SET FLAT POINT ZINC	F81001-26	2	
11	GUARD, DEBARKER BLADE LOWER	096245-1	1	
12	WASHER, 6.5 SPECIAL FLAT ZINC	F81053-11	3	
13	WASHER, Z 6.1 SPLIT LOCK ZINC	F81053-3	3	
14	BOLT, M6X12 8.8 HEX HEAD FULL THREAD ZINC	F81001-7	3	
15	PLATE, DEBARKER MOTOR MOUNT	089551	1	
16	NUT, M8-8-B HEX ZINC	F81032-1	6	
17	BOLT, M8X50 -8.8 HEX HEAD FULL THREAD ZINC	F81002-19	2	
18	WASHER, 8.4 FLAT ZINC	F81054-1	8	
19	BOLT, M8X35-8.8 HEX HEAD FULL THREAD ZINC	F81002-13	4	
20	WASHER, 5.3 FLAT ZINC	F81052-1	3	
21	WASHER, 5.1 SPLIT LOCK	F81052-2	3	
22	BOLT, M5X35 8.8 HEX HEAD FULL THREAD ZINC	F81000-10	3	

4.5 Wide Debarker Decal Kit. 580555_538001

580555_002
580555_MANUAL

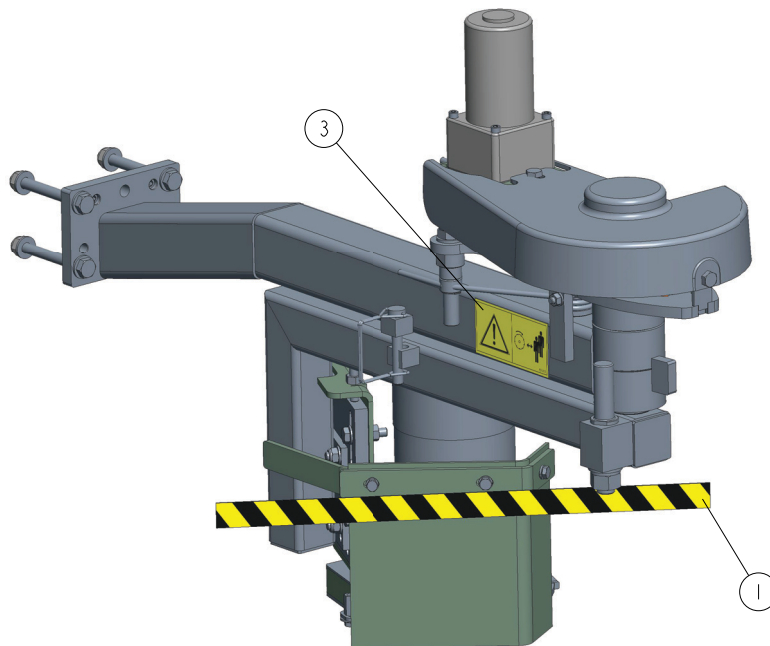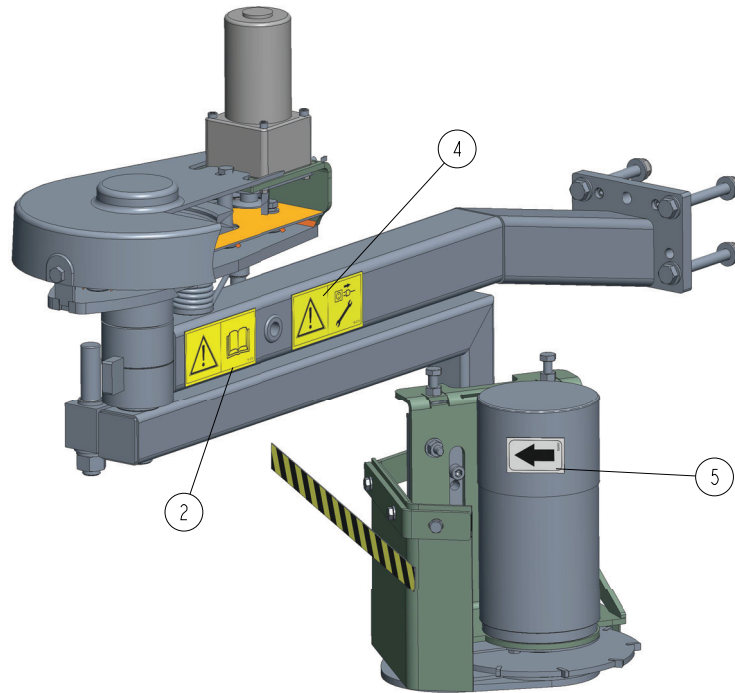

REF	DESCRIPTION (◆ indicates parts available in assemblies only)	PART #	QTY
-	DEBARKER DECAL KIT	538001	1
1	DECAL, LT15 DEBARKER WARNING STRIPE	098175	1
2	DECAL, READ OPERATOR'S MANUAL - HORIZONTAL	101216	1
3	DECAL, KEEP AWAY FROM DEBARKER BLADE - HORIZONTAL	101217	1
4	DECAL, DISCONNECT POWER SUPPLY BEFORE SERVICING - HORIZONTAL	101218	1
5	DECAL, MOTOR ROTATION DIRECTION	S20097	1